

MFB 522

Selecting patterns:

Up to 72 rhythm patterns 1-8 11-18 21-28 31-38 41-48 51-58 61-68 71-78 81-88

Rhythm + KEY for selection

E.g. 3 + 6 for pattern 36

Fill left LED = 16 steps

Fill right LED = 32 steps

Editing pattern:

1 - Rec + KEY for main sound

2 - Rec + KEY twice or three times for alternative sound. To switch back to the standard instrument, reselect the sound track

3 - Editing: KEY is odd steps, Shift + KEY is even steps

4 - Press Rec to exit editing

Erasing = Rec + Rhythm for at least 1s

Fill left LED = steps 1-8

Fill right LED = steps 9-16

Accent track positive:

1 - Rec + Shift

2 - Accent track: KEY is odd steps, Shift + KEY is even steps

3 - Press Rec to exit accent track

Accent track negative:

1 - Rec + Shift twice

2 - Accent track: KEY is odd steps, Shift + KEY is even steps

3 - Press Rec to exit accent track

Shuffle, three fixed amounts:

1 - Shift + Play = shuffle 1

2 - Shift + Play = shuffle 2

3 - Shift + Play = shuffle 3

4 - Shift + Play = no shuffle

Song:

1 - Press Song to enter song mode

2 - Press Rec to enter song programming mode

3 - Shift + Key to select first rhythm pattern. Shift + Key again to select second one, and so on

4 - Press Rec to exit song programming mode

Erasing = Rec twice

Fill left LED = 1 bar pattern for all

Fill right LED = 2 bars pattern for all

Setting midi channel:

Shift + Fill - selecting with the Tempo knob

Midi external sync

Hold Play + On at power up