

Maschine Studio Hardware Shortcuts

Control

- **Channel**: display Channel Input, Output, Groove and Macro.
- Shift + **Channel** (MIDI): toggle MIDI controller mode.
- **Plug-in**: enter Control mode and access your Plug-ins hosted in Maschine Software.
- Shift + **Plug-in** (Instance): select instance of the Maschine VSTi in hosted mode (DAW). Select the Maschine controller model in MIDI mode.

- **Arrange**: select Ideas or Song view (use Shift to change the view).
- Shift + **Arrange**: *not implemented*
- **Mix**: mix the Sounds and the Groups.
- Shift + **Mix**: as **Mix**.
- **Browse**: browse the Projects, Groups, Sounds, Instruments, Effects, Samples.
- Shift + **Browse**: load a Plug-in (internal or VST/VSTi).
- **Sampling**: access to the Sampler to record and edit samples.
- Shift + **Sampling**: as **Sampling**.
- **Left/Right**: jump to the previous/next page.
- Shift + **Left/Right**: select the previous/next Section bank.

- **All**: *not implemented*
- Shift + **All** (Save): save your project.
- **Auto**: record automation (modulation).
- Shift + **Auto**: pin/unpin the Auto mode.

I/O and Level

- **In1**: external audio input 1
- **In2**: external audio input 2
- **In3**: external audio input 3
- **In4**: external audio input 4

- **Mst**: master volume
- **Grp**: volume of the selected Group
- **Snd**: volume of the selected Sound
- **Cue**: cue level

Performance

- **Tap**: set the tempo of the project with the Jog wheel.
- Shift + **Tap**: as **Tap**.
- **Step Mode**: access to the step sequencer.
- Shift + **Mode**: as **Step Mode**.
- **Macro**: control a selection of parameters from different sources.
- Shift + **Macro**: as **Macro**.

- **Note Repeat:** display the Note Repeat parameters.
- **Note Repeat** + Pad: play the selected Sound at a given rate.
- Shift + **Repeat:** pin/unpin the **Note Repeat** mode.

Groups

- **A, B, C, D, E, F, G, H:** select the Group you want to work in.
- Shift + **A, B, C, D, E, F, G, H:** select the Group Bank.

Transport

- **Restart:** restart from the beginning of the current Loop range.
- Shift + **Restart** (Loop): toggle the Loop mode.
- Shift + **Restart** + Jog wheel: move the Loop?
- **Metro:** toggle the metronome.
- Shift + **Metro:** as **Metro**.
- Events: enter Event Select mode.
- **Events** + Pad: select all events triggered by the selected pad in your Pattern.
- Shift + **Events:** as **Events**.
- **Grid:** adjust settings of Step grid, Pattern lengths and transition between Scenes.
- Shift + **Grid** (Rec mode): adjust metronome parameters and automatic Quantize mode.
- **Play:** start/stop playback.
- Shift + **Play:** *not implemented*
- **Rec:** toggle recording.
- Erase + **Rec:** begin recording in replace mode (overdub).
- Hold **Rec:** select the Pattern length before recording any events.
- Shift + **Rec** (Count-in): start recording with count-in.
- Erase: *not implemented*
- **Erase** + Pad: delete the events of a Sound.
- **Erase** + Group: delete the events of all sound of a Group.
- **Erase** + Pattern + Pad: delete the corresponding Pattern.
- **Erase** + Scene + Pad: delete the corresponding Scene or Section.
- Events + **Erase** + Pad: delete all events for that Sound.
- Erase + Knob: delete the modulation of that Knob.
- Shift + **Erase:** as **Erase**
- Shift + **Erase** + Rec: start the Count-in and record in Replace mode.
- Shift + **Erase** + Pad: reset a Sound slot.
- **Shift:** access the secondary functions of your controller.
- **Shift** + Knob: change parameters in finer increments.

Pads

- **Scene:** toggle Scene mode.
- Shift + **Scene:** display Section mode.
- **Pattern:** toggle Pattern mode.
- Shift + **Pattern:** add variations (humanize or random) to the Pattern.
- **Pad Mode:** select a different mode for your pads (velocity, chromatic, chords).

- Shift + **Pad** (Keyboard): toggle the chromatic mode.
- **Navigate**: select a view and access to different parameters.
- Shift + **Navigate**: *not implemented*
- **Duplicate**: create another instance of any Sound, Pattern, Group or Scene.
- Shift + **Duplicate**: as **Duplicate**.
- **Select**: select a Sound without having to play it.
- Shift + **Select**: as **Select**.
- **Solo**: mute all other Sounds or Groups.
- Shift + **Solo**: as **Solo**.
- **Mute**: mute Sounds or Groups by pressing the corresponding pad or buttons.
- Shift + **Mute** (Choke): kill any note or event during playback.

Edit

- **Copy**: copy selected events to the clipboard.
 - Shift + **Copy**: as **Copy**.
 - **Paste**: paste the events from the clipboard.
 - Shift + **Paste**: as **Paste**.
 - **Note** + Jog wheel: change the selected Events by one semitone per increment.
 - Shift + **Note**: as **Note**.
 - **Nudge** + Jog wheel: move the selected events one step per increment.
 - Shift + **Nudge** + Jog wheel: move the selected events by finer increments.
-
- **Undo**: undo your last group of actions.
 - Shift + **Undo** (Step undo): undo your last single action (step in pattern).
 - **Redo**: redo your last group of actions .
 - Shift + **Redo** (Step redo): redo your last single action (step in pattern).
 - **Quantize**: quantize the selected Events or all Events to the Step Grid.
 - Shift + **Quantize** (50%): quantize the Events 50% to the Step Grid.
 - **Clear**: clear the selected Events or all Events if no Events are selected.
 - Shift + **Clear** (Clr Auto): delete all modulations for the selected Sound.
-
- **Back**: move one step back in the hierarchy of a Project.
 - Shift + **Back**: as **Back**.
 - **Func Left/Right**: jump to the previous/next function.
 - Pad or Group + **Func Left/Right**: select Tune, Swing or Volume functions.
 - Shift + **Left/Right**: *not implemented*
 - **Enter**: move one step forward in the hierarchy of a Project.
 - Shift + **Enter**: as **Enter**.