

The MPC hardware can receive these messages:				SYSEX (valeurs en Hexadécimal)										
MPC Command Received	MPC Function	Début SYSEX		DEVICE-ID 7F : ALL	SUB-ID #1	SUB-ID #2	Nombre de Paramètres ou Fin SYSEX		Hours	Minutes	Seconds	Frames	Sub-Frames	Fin SYSEX
		FO	7F											
MMC Deferred Play	Play	FO	7F	7F	06	03	F7							
MMC Locate Zero, then Deferred Play	Play Start	FO	7F	7F	06	44	06	01	00	00	00	00	00	F7
		FO	7F	7F	06	03	F7							
MMC Stop	Stop	FO	7F	7F	06	01	F7							
MMC Record Strobe	Record (Rec)	FO	7F	7F	06	06	F7							
<i>Play ou Play Start</i>	<i>[Locate Zero]</i>	FO	7F	7F	06	44	06	01	00	00	00	00	00	F7
<i>Démarre</i>	Play	FO	7F	7F	06	03	F7							
MMC Pause	Stop	FO	7F	7F	06	09	F7							
MMC Locate values	Change location in sequence	FO	7F	7F	06	44	06	01	H	M	S	F	S-F	F7