DC-2 Digital Controller Quick Reference Guide



Finding your way through the Menus

On the remote control, press SELECT.

Use ▲ or ▼ to highlight an item. Press SELECT to open a submenu.

Continue highlighting and SELECTing to reach the parameter you want to change.

Adjust parameters with ▲ or ▼. Your changes are saved automatically.

Press DONE to step back and exit each display.



MAIN MENU
- EFFECT ADJUST
- EQUALIZATION
- DISPLAY ADJUST
- SETUP

CURRENT EFFECT NAME
- EFFECT PARAMETERS & CURRENT SETTINGS

DTS VERSION
- DTS 2-CHANNEL
- DTS MUSIC
- DTS LOGIC 7
- DTS ES LH
- DTS THX

AC-3 VERSION
- PANORAMA
- NIGHTCLUB
- CONCERT HALL
- CHURCH
- CATHEDRAL
- PARTY
- 2-CHANNEL
- MUSIC SURROUND
- MUSIC LOGIC
- LOGIC 7
- TV VIRTUAL
- PRO LOGIC
- THX CINEMA
- MONO LOGIC
- 5.1 2-CHANNEL
- 5.1 MUSIC
- 5.1 LOGIC 7
- DOLBY DIGITAL
- THX 5.1

EQUALIZATION MENU
- BASS LEVEL
- TREBLE LEVEL
- TILT
- LOUDNESS

DISPLAY ADJUST MENU
- ON-SCREEN DISPLAY
- FRONT PANEL DISPLAY

ON-SCREEN DISPLAY
- STATUS
- POSITION
- FORMAT
- COLOR
- MENU BACKGROUND

FRONT PANEL DISPLAY
- STATUS
- CONTRAST ADJUSTMENT

SETUP MENU
- INPUT CONFIG
- SPEAKER CONFIG
- OUTPUT LEVELS
- LISTENER POSITION
- LOCK SETTINGS

INPUT CONFIG MENU
- VCR
- DVD
- VDISC
- TV
- AUX
- CD
- TUNER
- TAPE

SELECTED INPUT
- GAIN
- NAME
- PCM FX
- AC-3 FX
- DTS FX
- FX FORMAT
- AUDIO IN
- VIDEO IN
- REC/ZONE 2
- TRIGGER

SPEAKER SETUP MENU
- CUSTOM CONFIG
- THX CONFIG
- SURROUND EX CONFIG*

CONFIG
- FRONT L/R
- CENTER
- SIDES
- REARS
- SUBWOOFER

*Available on full volume version ↓

OUTPUT LEVELS MENU
- INTERNAL NOISE TEST
- EXTERNAL NOISE TEST
- SUB PEAK LIMIT
- MUTE LEVEL
- PWR-ON VOL
- 2-2 PWR-ON

OUTPUT LEVELS ADJUST
- LEFT FRONT
- CENTER
- RIGHT FRONT
- RIGHT SIDE
- RIGHT REAR
- LEFT REAR
- LEFT SIDE
- SUBWOOFER

LOCK SETTINGS MENU
- SETTINGS
- CUSTOM NAME
- ASSIGN CUSTOM NAME

LISTENER POSITION
- SPEAKER DISTANCE
- A/V SYNC DELAY
- CALIBRATE PANORAMA
- L/R BALANCE
- ZONE 2 BALANCE

CALIBRATE PANORAMA
- CAL NOISE
- SPEAKER ANGLE
- LISTENER POS


SPEAKER DISTANCE
- NEAREST SPKR
- LEFT FRONT
- CENTER
- RIGHT FRONT
- RIGHT SIDE
- RIGHT REAR
- LEFT REAR
- LEFT SIDE
- SUBWOOFER

Lexicon, Inc. 3 Oak Park • Bedford MA 01730-1441 USA • Tel: (781) 280-0300 • Fax: (781) 280-0490 • www. lexicon.com


Lexicon Part # 070-13228 Rev 1

© 1999 Lexicon, Inc.

DC-2 Digital Controller Quick Reference Guide

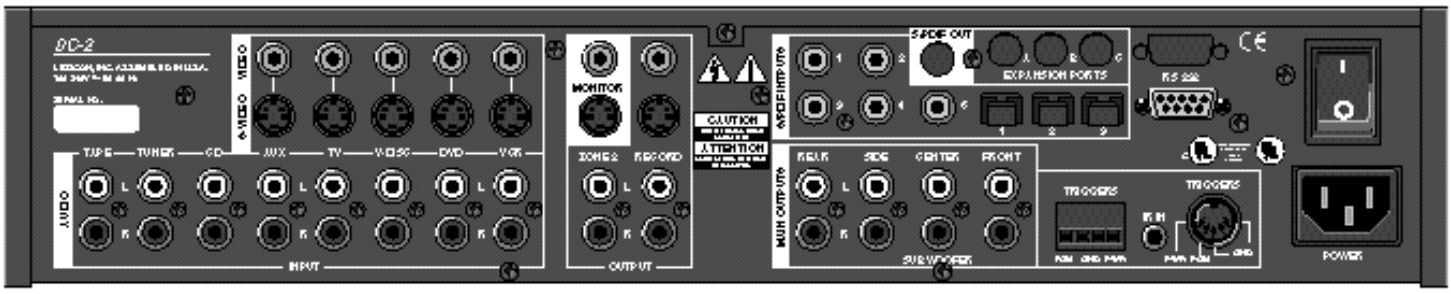


Alternate Remote Control Functions

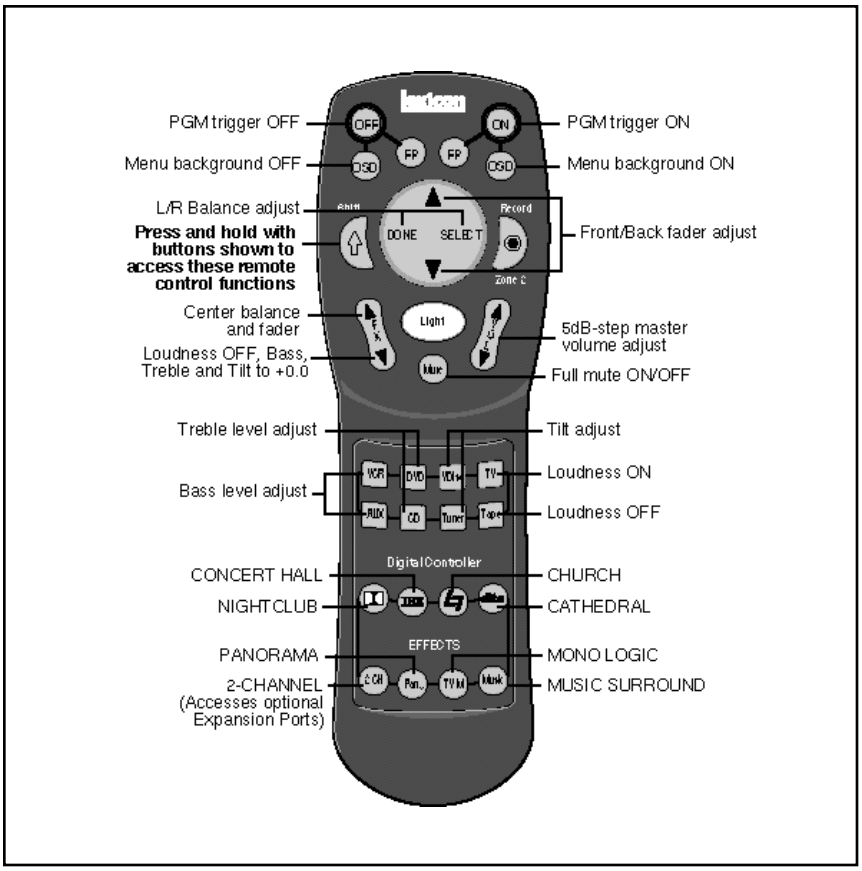

Record/Zone 2 Control

Zone 2 controls can be accessed from either the DC-2 front panel, or the remote control by pressing and holding down the Record/Zone 2 button in conjunction with the buttons shown below.

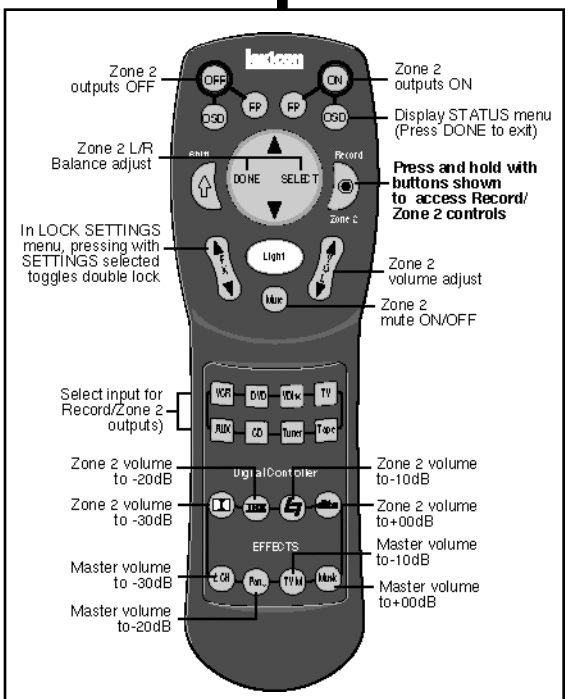

Restoring Factory Defaults

Make a note of any programs, setup or calibration values you want to re-enter, as this procedure will reset all DC-2 parameters to their default states. as well as all setup and calibration values.

Using the remote, turn the unit OFF, then ON, then press and hold MUTE. The on-screen display will read:

FACTORY PRESETS MENU
EXIT
RESTORE DEFAULTS

To resume normal operation *without* restoring all defaults, press SELECT.

To clear and reload all preset effects and all factory settings, use ▼ to highlight RESTORE DEFAULTS, and press SELECT.

When the message:

FACTORY PRESETS MENU
FACTORY DEFAULTS RESTORED

is displayed, press DONE to return to normal operation.

Lexicon, Inc. 3 Oak Park • Bedford MA 01730-1441 USA • Tel: (781) 280-0300 • Fax: (781) 280-0490 • www. lexicon.com
© 1999 Lexicon, Inc