
Fitting the optional output transformer cards

There are dangerous voltages present within the unit. Do not open the unit when powered and ensure that the transformer cards are fitted by a technically competent person. If in any doubt contact Safe Sound Audio for further advice.


Please follow these instructions carefully.

With the AC power lead disconnected, place the Dynamics Toolbox on a flat well lit workbench.

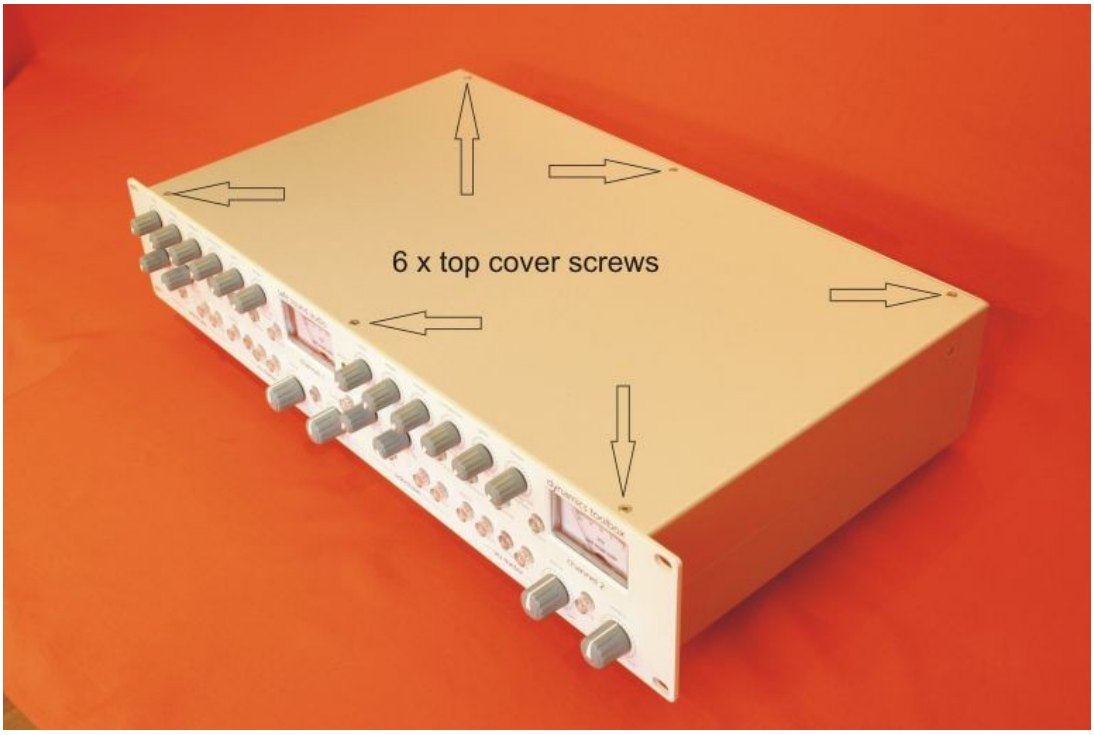



Remove the six posi-head screws from the top cover panel and carefully lift the top panel away from the unit. NOTE that the top panel has a safety earth cable connection. Rotate the top panel and lay beside the unit.

Downloaded from www.Manualslib.com manuals search engine

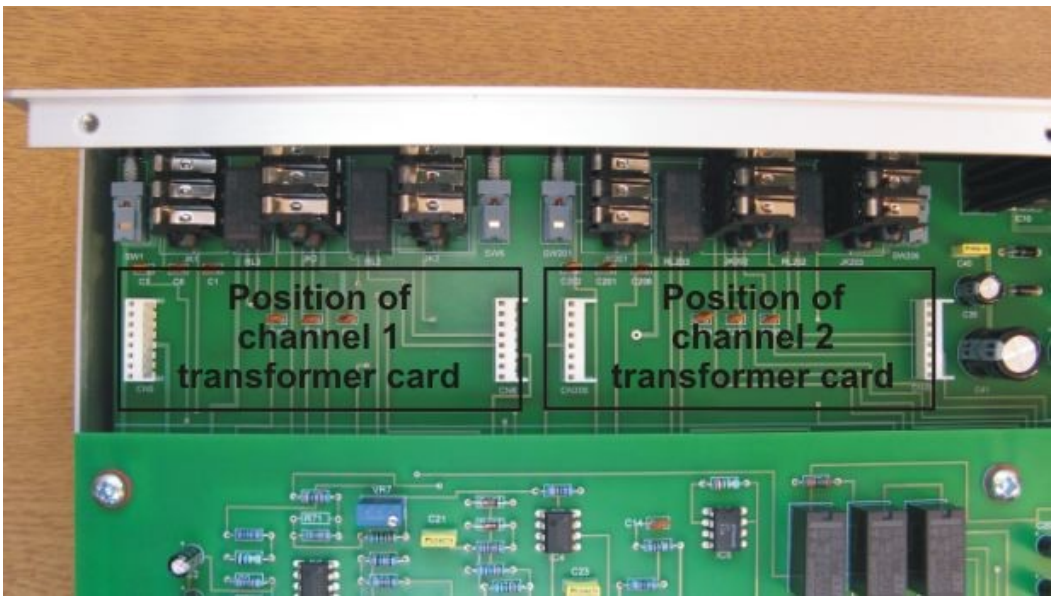


Check that the connector pins of the transformer cards are straight and undamaged. Insert each transformer card into the corresponding sockets in the unit's main motherboard taking great care to correctly align the six pins on each transformer connector with the corresponding pins in the motherboard sockets.

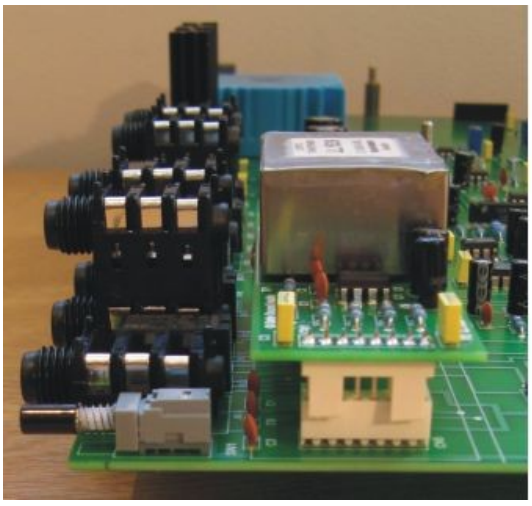


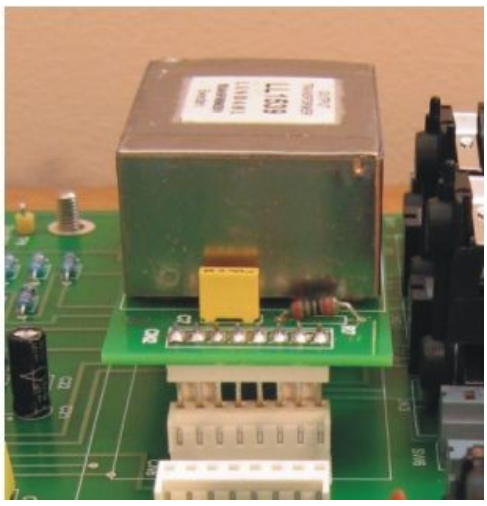

Correct positions of connector pins just before pushing the transformer card down into its final position


Downloaded from www.Manualslib.com manuals search engine

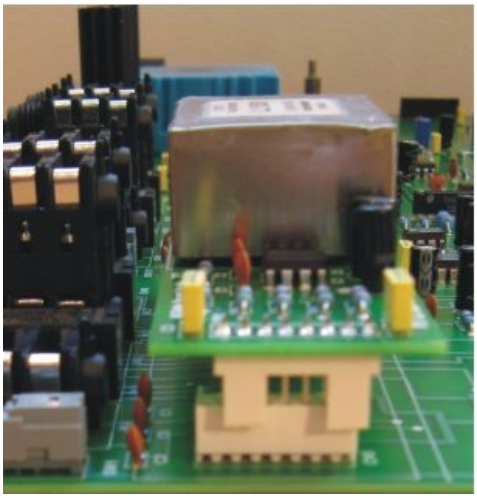

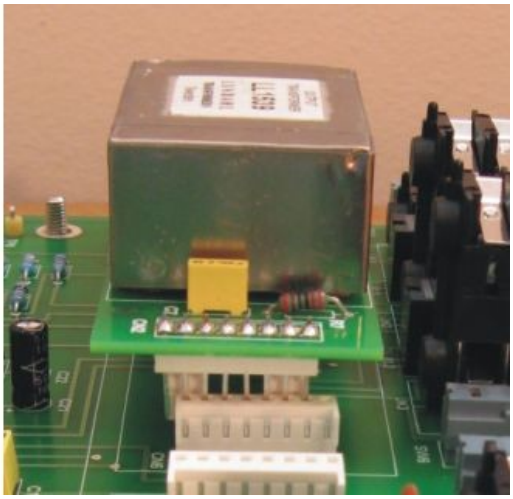

INCORRECT positions of connector pins. **NOTE** the pin misalignment. **Misalignment of pins can cause electrical damage of the unit.**

Ensure that the transformer cards are pushed fully in.

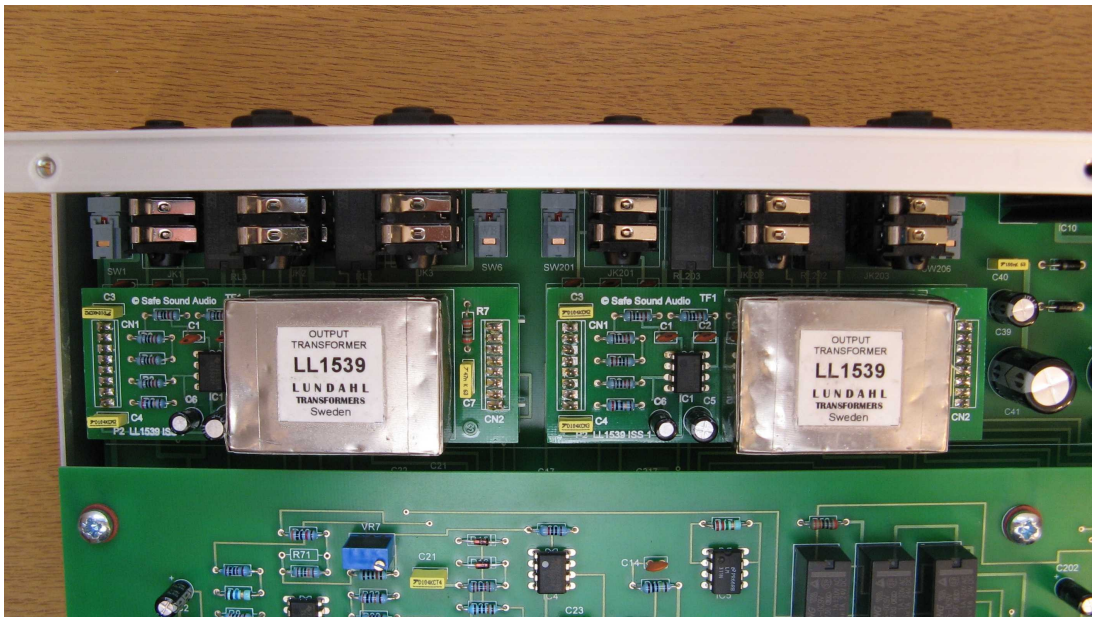

Replace the top cover taking care to ensure that the safety earth cable is not snagged but is fully inside the unit.

Downloaded from www.Manualslib.com manuals search engine

Reinsert and tighten the six top cover fixing screws.
Apply power and check that the unit's green power LED is lit.


Check for correct functioning of the unit and for audio at the two transformer balanced output jacks.



If, at any time, you require to ship the unit back to Safe Sound Audio or one of our authorised distributors, **ALWAYS** remove the audio transformer cards prior to shipment and pack separately for transit.

Changing the mains operating voltage

The Dynamics Toolbox can be set internally to operate from either 115VAC or 230VC. (Note that selection to 230VAC is also suitable for operating the unit from a 240VAC supply.

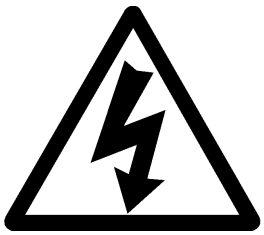

There are dangerous voltages present within the unit. Do not open the unit when powered and ensure that mains operating voltage is set by a technically competent person. If in any doubt contact Safe Sound Audio for further advice.

Please follow these instructions carefully.

With the AC power lead disconnected, place the Dynamics Toolbox on a flat well lit workbench.

Downloaded from www.Manualslib.com manuals search engine