
ANALOGUE

VERSATILE - Distortion -

SINCE 2012

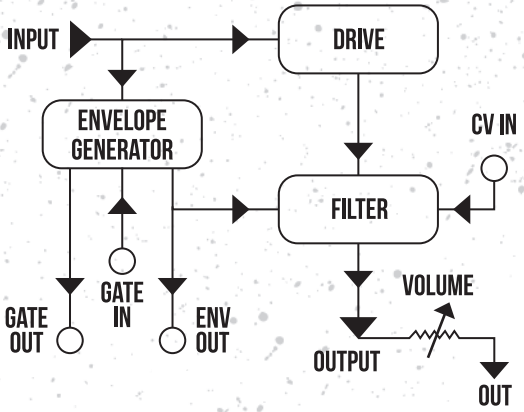

Specifications

- **VCF INPUT:** 0-5V optimal, max +/- 9V
- **ENV OUTPUT:** 7,2V at max Depth
- **GATE IN:** 0-5V pulse is expected
- **GATE OUT:** 0-7,2V
- **Resonance** self-oscillation level out 7,2Vpp (at max volume)
- **Power supply:** 9VDC center negative at least 200mA
- **Power consumption:** 45mA
- **Size:** 147x116x58

Sends the Envelope´s Voltage Out

The ENV output jack, when in maximum depth, delivers 5V. Make sure, before you plug it in other devices, that their specs can accept such voltage values. We do not take any responsibility for possible damages.

VCF CV input

Signal Output

Switch between Low Pass and Band Pass Filter

Set the cut off frequency


Set the filter´s feedback

Set the Attack time of the Envelope

Set the Release time of the Envelope

Led indicators

Set the Amount of Envelope sent to Filter and to ENV OUT jack

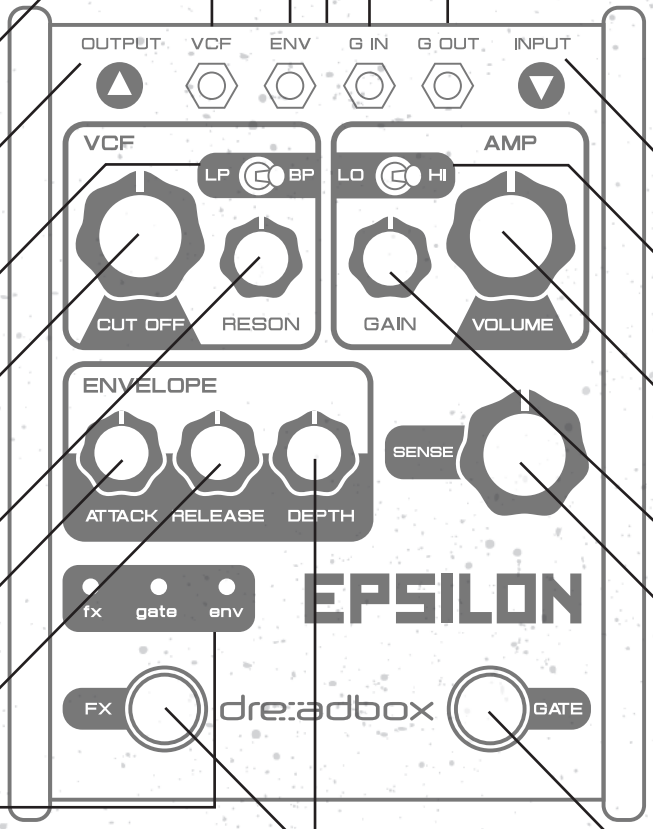

only 9VDC center-negative power supply (BOSS style)

Receive a clock to trigger the envelope

Delivers the audio to gate convertor

Signal input

Switch between Low and High Gain

Set the volume

Set the total amount of distortion

Sense is used to determine how easy is for your input signal to trigger the envelope

Manually trigger the envelope

On/Off

TUBE SOUND DISTORTION / ENVELOPE GENERATOR FOR ANY CV INPUT

STATE VARIABLE RESONATING FILTER / MOMENTARY GATE ACTIVATION SWITCH

dre::adbox