To Users of the OCTAPAD SPD-30


Concerning the Sensitivity Settings for the Pads

The sensitivity of the pads on the OCTAPAD can change depending on the environment in which you use them and temperature changes. The OCTAPAD allows you to set the sensitivity of the pads on an individual basis. Use the procedure below to set the sensitivity to the desired value. For details on how to set the sensitivity for the internal pads, refer to "Internal Pads Settings" on p. 59 in the Owner's Manual.

1. **Choose MENU → PAD → INTERNAL (p. 16).**

   The PAD SETTING-INTERNAL screen appears.

2. **Hit a pad to select the pad whose settings you want to edit.**
3. **Turn [Knob 1] (SEL) to select "Sensitivity."**
4. **Turn [Knob 3] (–/+) to edit the value.**

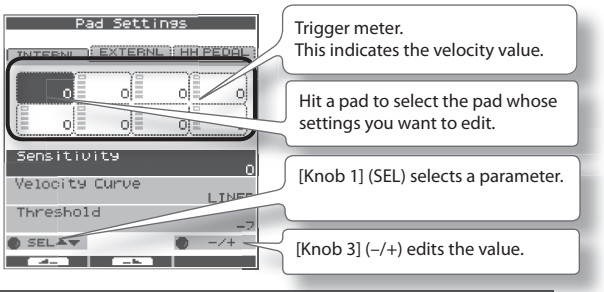

Concerning the Saving of Data

Ordinarily, the OCTAPAD saves your data automatically each time you turn off its power. However, you may want to periodically carry out a manual save to internal memory of all your current settings so as to prevent the loss of data in the unlikely event that there is a power outage or other problem. To do so, use the "Force Save Data" command. For more information on "Force Save Data," refer to p. 17 in the Owner's Manual.

About the MIDI Note Numbers that the Internal Pads Transmit

The MIDI note numbers transmitted by the pads can be specified individually for Inst A and Inst B (p. 63 in the Owner's Manual).

The note numbers for Inst A or Inst B will be transmitted depending on the settings for "Inst Layer Type" and "Inst Layer Point" for each pad. For information on Inst Layer, refer to p. 30 in the Owner's Manual.

Copyright © 2010 ROLAND CORPORATION
All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.
Roland is a registered trademark of Roland Corporation in the United States and/or other countries.
The Phrase Loops contained in this product are sound recordings protected by copyright.

OCTAPAD SPD-30 をお使いのお客様へ

各パッドの感度設定について

OCTAPAD の各パッドの感度は、お使いの環境、温度変化により変わる場合があります。OCTAPAD は各パッドごとに感度（Sensitivity）の設定をすることができますので、以下の手順で Sensitivity をお好みの値に調整してください。内蔵パッドの感度設定について詳しくは、取扱説明書 P.59 をご覧ください。


1. **MENU → PAD → INTERNAL を選びます（P.16）。**

PAD SETTING-INTERNAL 画面が表示されます。

2. **パッドを叩いて設定を変更するパッドを選択します。**

3. **［つまみ 1］（SEL）を回して「Sensitivity」を選びます。**

4. **［つまみ 3］（－／＋）を回して値を変更します。**

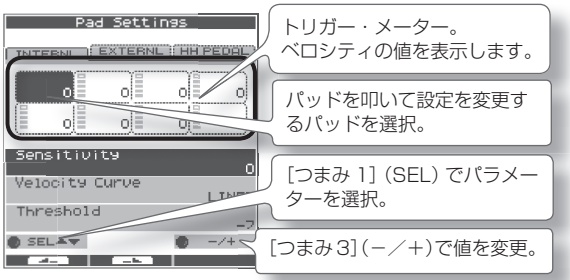

データの保存について

OCTAPAD は通常、電源オフ時にデータを自動保存します。万一の停電などに備え、「Force Save Data」を実行することで強制的に現在のデータを内蔵メモリーに保存することもできます。「Force Save Data」については、取扱説明書 P.17 をご覧ください。

内蔵パッドが送信するMIDIノート・ナンバーについて

各パッドが送信する MIDI ノート･ナンバーは、インスト A、インスト B それぞれに指定可能です（取扱説明書 P.63）。各パッドの「Inst Layer Type」と「Inst Layer Point」の設定にしたがって、インスト A、インスト B いずれかのノート・ナンバーが送信されます。インスト・レイヤーについては、取扱説明書 P.30 をご覧ください。

©2010　ローランド株式会社　本書の一部、もしくは全部を無断で複写・転載することを禁じます。
Roland は、日本国およびその他の国におけるローランド株式会社の登録商標または商標です。
工場出荷時に搭載している Phrase Loop データの著作権は当社が保有しています。

* 5 1 0 0 0 1 4 1 9 5 - 0 2 *