Squier®


Sidekick®

TYPE: PR-357

Owner's Manual

P/N

Sidekick Front Panel Functions

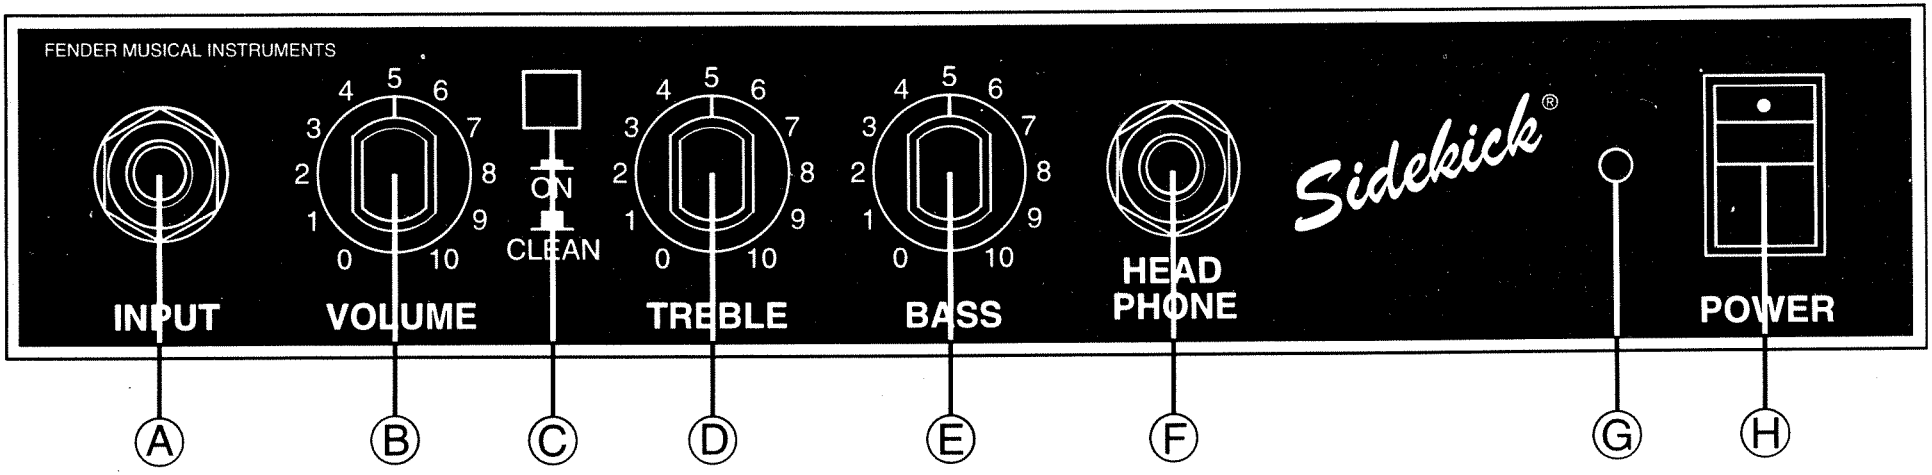

A. INPUT- Connection for instrument.

B. VOLUME- Controls overall volume of sound output.
For "clean" sound, set VOLUME from 1 to 5.
Provides "natural distortion sound" when VOLUME set from 5 to 10.
Adjust VOLUME for desired level.

C. OD,CLEAN SWITCH- Turns overdrive control "ON" and "OFF".

D. TREBLE- Provides high frequency equalization as required.

E. BASS- Provides bass frequency equalization as required.

F. HEADPHONE JACK- Used to connect stereo headphones. Automatically turns off the internal speaker.

G. POWER ON LED- When illuminated, the Sidekick is receiving AC POWER.

H. POWER SWITCH- Turns amplifier On and Off.

Warning: This amplifier is equipped with a grounding type supply cord. To reduce the possibility of shock hazard, be sure to connect the unit to a grounded AC receptacle. DO NOT ALTER THE AC PLUG.

WARNING: This amplifier must be earth grounded.

SPECIFICATIONS

FENDER PART NUMBERS

12OV	:	023-1000-049
240V AUST	:	023-1030-049
230V UK	:	023-1040-049
230V	:	023-1060-049
100V	:	023-1070-049
Dimensions	:	Height : 26.5cm (10.5")
		Width : 26cm (10.24")
		Depth : 14.5cm (5.7")
		Weight : 4.2kg (9.26lbs)
Power Output:		10 Watts into 4Ω
Power Req.	:	120VAC-60 Hz, 28 Watts
		230, 240VAC-50 Hz, 28 Watts
		100VAC 50-60 Hz, 28Watts

A PRODUCT OF FENDER MUSICAL INSTRUMENTS CORP. CORONA, CA 91720 · FEATURES AND SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE · ©1996 FMIC