
1-b. Remove Exterior parts(DM-4800)

EXPLODED VIEW-1 (Exterior section)

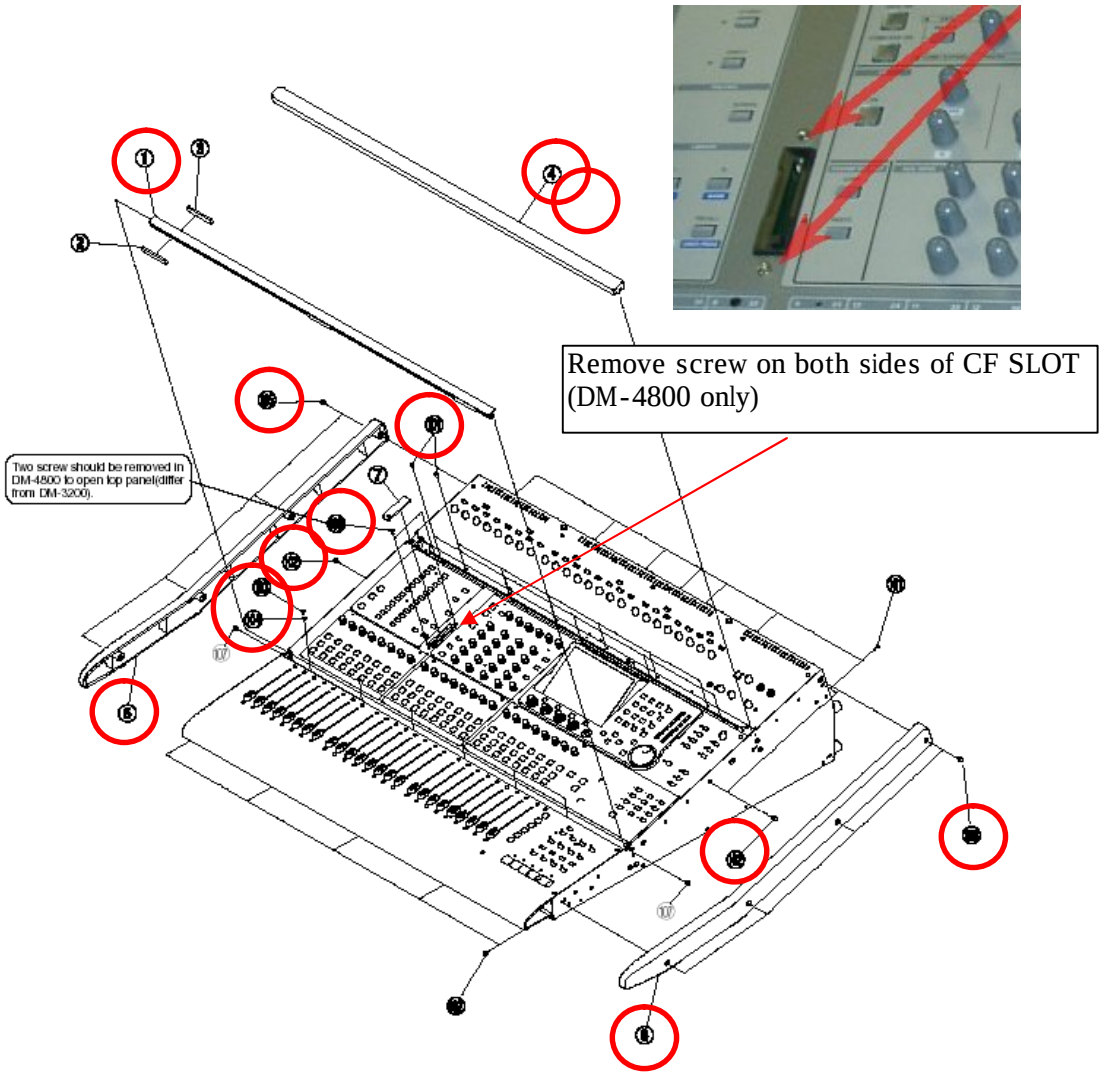

remove

5:SIDE PAD,L	>>4-SCREW BPA 4*10FZB G
6:SIDE PAD,R	>>4-SCREW BPA 4*10FZB G
4:COVER,TOP 4800 G	>>Pull
1:PLATE,TOP 4800 G	>>Pull

to open

PANEL,TOP 4800	>>2-SCREW,BPA 4*6FZB G
	>>5-SCREW,BPA 3*6 FZB G
	>>6-SCREW,PPSU 3*12 FZB G & washer
Attention DM-4800 only	>>2-SCREW,BPA 3*6 FNI (screw on both sides of CF SLOT)