2 Remove the 2 screws to disassembly the DSP front face

Unscrew the 2 screws and nuts	Disassembly the DSP front face
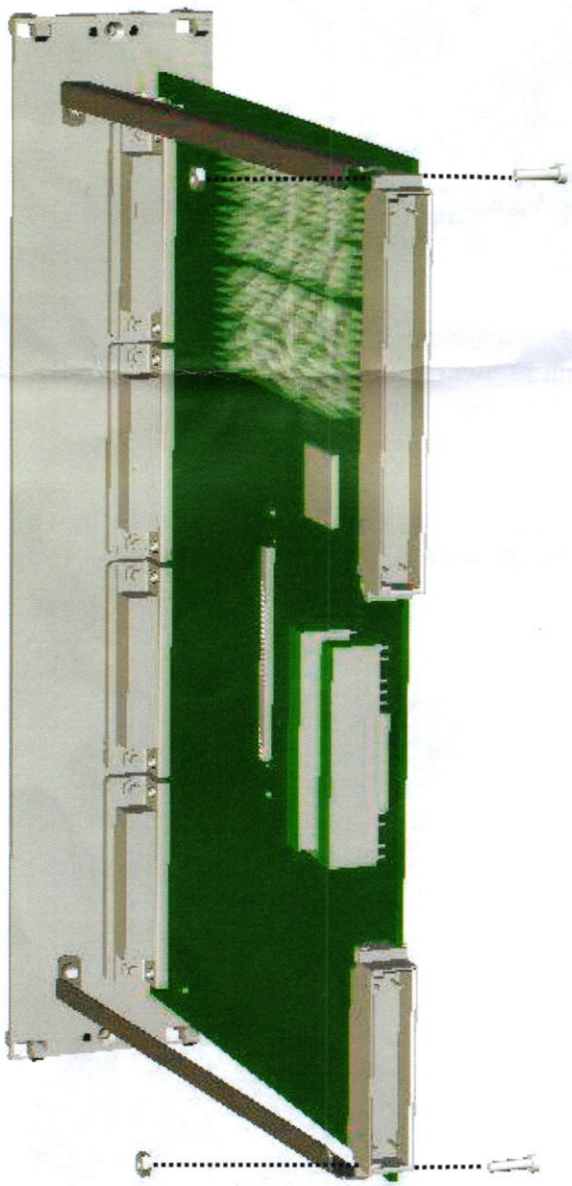	**Attention** Take care to the light plastic guide 