DRIFTER
ANALOG TREMOLO

LED indicator light
Off:Bypass
Blue:effect on
Blue+Red: **Toggle** function
Red:saved preset mode

Rate (**A**)

Main function –Determines frequency
Secondary function – *secret **TIME** mode

Shape (**B**)
(Waveform)

Seven different types of wave behavior influenced by **Rate**

Shapes:
1) triangular
2) square
3) sawtooth
4) sine
5) reverse sawtooth
6) pulse
7) random

*Secret **TIME** mode:
when **Off** press **Footswitch** for 2 sec. (LED **Off**)

Drift/Slide ramping-time will be set according to current **Rate** knob position (0-10 seconds)

Power: 9V Regulated power supply 2.1mm
Negative center pin



Relay true bypass
(A more reliable, more durable footswitch)

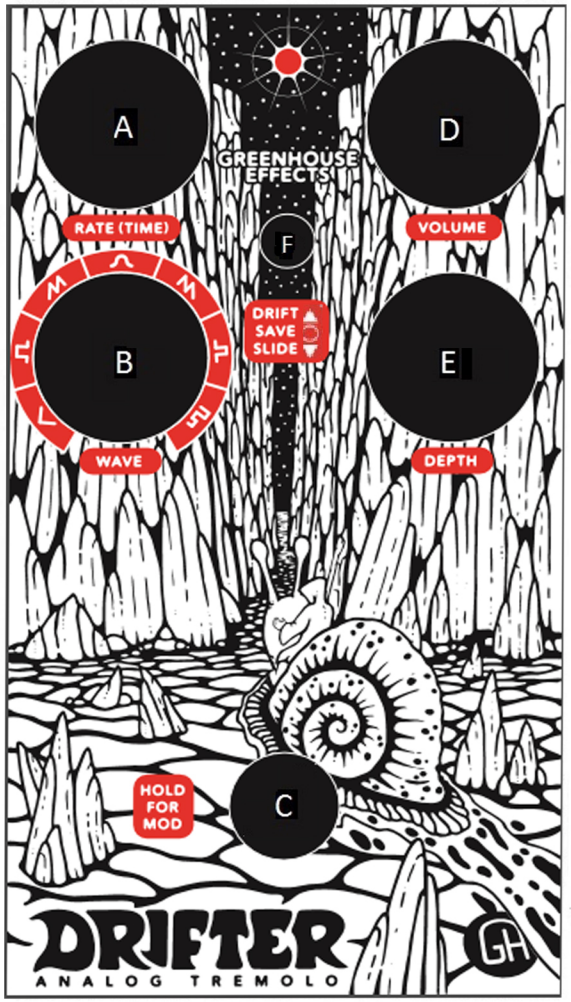

Footswitch
On/off - press and release
To activate **Drift/Save/Slide**:
When pedal is **on** - press and hold **footswitch**

Volume (**D**)
From zero through unity-gain to a slight boost

Depth (**E**)
Takes you as deep as you dare to go

Toggle (**F**)
3 work modes:

1) **Drift**
(When **on**: press & hold **Footswitch**)
Increases **TREMOLO** speed
accelarating from current **Rate** knob position
and up to maximum speed
When **Drifting** the LED will morph (blue+red light)

2) **Save**
(When **on**: press & hold **Footswitch**)
LED light will change from blue to red indicating that chosen preset is saved
To recall your saved preset - simply switch **Toggle** to **Save** mode (LED: red)
Exit preset: changing any knob will exit the preset – LED is back to blue

3) **Slide**
(When **on**: press & hold **Footswitch**)
increases **Depth** starting from current **Depth** knob position and up to maximum depth
When **Sliding** the LED will morph (blue+red light)

Blessings!
Thank you for purchasing
a genuine hand-crafted
Greenhouse Effect

GREENHOUSE EFFECTS