
Danelectro®

TRIP L WAH™
DW-2
INSTRUCTIONS

- *3 Wah's in one! 3 of the coolest tones from the 60's in one pedal!*
- *3 unique voicings–foot switchable. Switch between them when playing live!*

1. *Insert instrument cable into INPUT jack (right front of pedal).*
2. *Insert amplifier cable into OUTPUT jack (left front of pedal).*
3. *If using DA-1, 9 Volt AC Adaptor, insert in front of pedal. Alternatively, the pedal can be powered by a 9 Volt battery. When using a battery to power the DW-1, note that battery power is ON when cable is inserted into the INPUT jack. To preserve battery life, unplug INPUT jack cable when not in use.*
4. *Turn ON the "Treble" Wah by pressing on the toe area of the treadle.*
5. *Turn on the "Bass" Wah by pressing the foot switch on the top right of pedal.*
6. *Turn on the "Mid" Wah by pressing the foot switch on the top left of pedal.*
7. *The two "tail lights" and the "D" on the rear of pedal indicate effect status. When the left tail light is red, the "Mid" Wah is selected. When the right tail light is red, the "Bass" Wah is selected..*
8. *When the "D" is red, the "Treble" Wah is selected.*

View From Top of Pedal

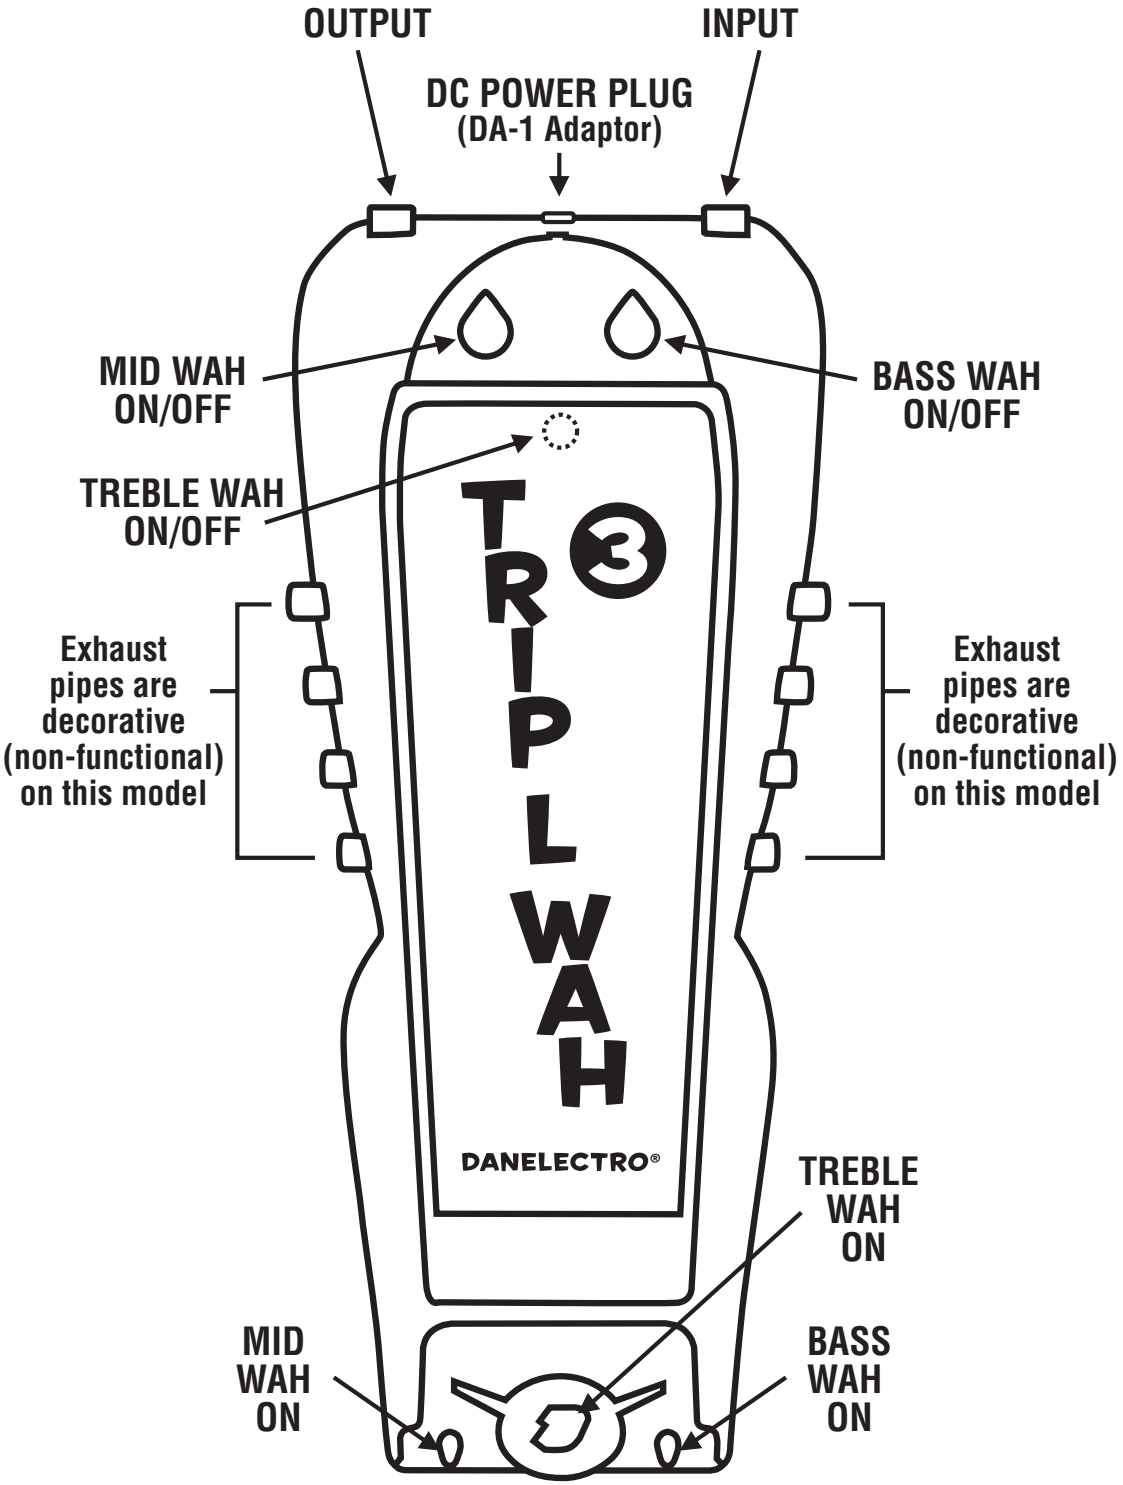

© EC 2001