## Testing SD card performance

**With system version 1.10, a quick testing function has been added.**

You can test an SD card to confirm that it can be used with the **H6**.

**1.** Press [0/MENU]

**2.** Use ↑↓ to select "SD card" and press →

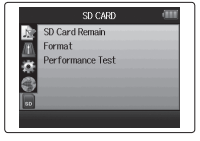


**3.** Use ↑↓ to select "Performance test" and press →

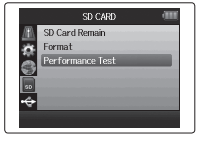


**4.** The test starts

The test takes about 30 seconds.

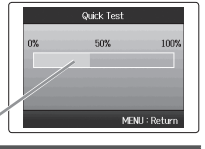


Test progress

**NOTE**

Press [0/MENU] to cancel the test.

**5.** The quick test completes

The screen shows the test results and an option to conduct a full test along with the time required for it.

**6.** For a full test, press ↑↓ to select "Yes" and press → to start it

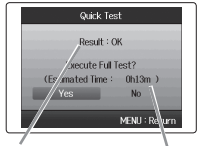


Test result

Time required for full test

The full test checks the entire writable area of the card.

**NOTE**

After conducting the full test, see P96 of the **H6** operation manual for details.

**NOTE**

Even if the performance test result is "OK", this does not guarantee that write errors will not occur. Please consider it to be just a performance estimate.

## Lowering the line output level

**With system version 1.10, this function has been added.**

You can lower the output level of the LINE OUT jack. Use this when the output signal of the LINE OUT jack is input to the external mic input jack of an SLR camera or another connector with high input gain.

**1.** Press [0/MENU]

**2.** Use ↑↓ to select "INPUT&OUTPUT" and press →

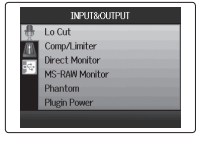


**3.** Use ↑↓ to select "Line Out Level" and press →

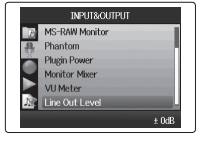


**4.** Use ↑↓ to set the output level of the LINE OUT jack and press [0/MENU]




**NOTE**

This setting does not affect the output level of the PHONE jack.