MODE MACHINES®

www.modemachines.com

MM-8 FLANGER

Precautions

PLEASE READ CAREFULLY BEFORE PROCEEDING

Powers upply

Please connect the designated AC adapter to an AC outlet of the correct voltage .Please be sure to use only an AC adapter which supplies 9V(+/-10%)DC.center minus .The maximum working voltage not exceed 12V.otherwise may be dangerous equipment damage.fire or other problems. Unplug the AC power adapter when not using or during electrical storms.

Connections

Always turn off the power of this and all other equipment before connecting or disconnecting, this will prevent malfunction and/or damage to other devices. Also make sure to disconnect all connection cables and the power cord before moving this unit.

Handling

Do not apply excessive force to the switches or controls.
Do not let paper, metallic, or other objects into this unit.
Take care not to drop the unit and do not subject it to shock or excessive pressure.

Cleaning

Clean only with a soft, dry cloth. If necessary, slightly moisten the cloth.
Do not use abrasive cleanser, cleaning alcohol, paint thinners, wax, solvents, cleaning fluids, or chemical-impregnated wiping cloths.

Interferencew ithothereelectricaldevices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

Location

To avoid deformation,discoloration,or other serious damage,do not expose this unit to the following conditions;

.Direct sunlight
.Heat sources
.Magnetic fields
.Extreme temperature or humidity
.Excessive dusty or dirty location
.High humidity or moisture
.Strong vibration or shocks

Mainfeatures

.Classical analog flanger sound with filter mode and oscillator effects
.Working Modes: Normal/Filter
.Very small and exquisite
.True bypass

EffectsE xplanation

Normal: Normal flanger mode, undulating electricity sound
Filter: Freeze the flanging effect, create a static filter sound

Panelinstruction

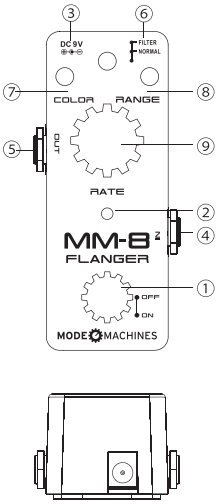

1. On/Off Switch:
Change the status of the effects from Off to On.
2.ON/OFFL ED:
Instructs effects or bypass status of V5, when the LED is lit up, the effects is on
3.DCI NP owerJ ack:
For power supply, use a 9-volt DC regulated AC adapter(plug polarity is positive on the barrel and negative in the center)
4.INPUTJ ack:
1/4" mono audio jack. For connecting guitar
5.OUTPUTJ ack:
1/4" mono audio jack, outputs the signal
6.ModeS witch:
Switch between Normal mode and filter mode
7.COLORK nob:
Adjust the feedback of flanger Note: Setting the COLOR Knob at its most clockwise point could cause an oscillator noise tone, this is normal, use this special sound to create unique effects.
8.RANGEK nob:
Adjust the limit range of sweeping scope in Normal mode and manually adjust the filter matrix in Filter mode
The sweeping range will get larger when clockwise turning
9.RATE Knob:
Adjust the speed of flanger in Normal mode. It will be disengaged in Filter mode.

Specifications

Working Modes: 2 (Normal, Filter)
Input: 1/4" monaural jack (impedance: 1M ohms)
Output: 1/4" monaural jack(impedance: 510 ohms)
Power Requirements: AC adapter 9V DC (center minus plug)
Current Draw: 10MA
Dimension: 46（W）*94（D）*50（H）mm
Accessories: Ower's Manual

MODE MACHINES®

www.modemachines.com

Disclaimer: Any specification's update won't be amended in this manual