
Interaudio®

by BOSE®

Owner's Guide

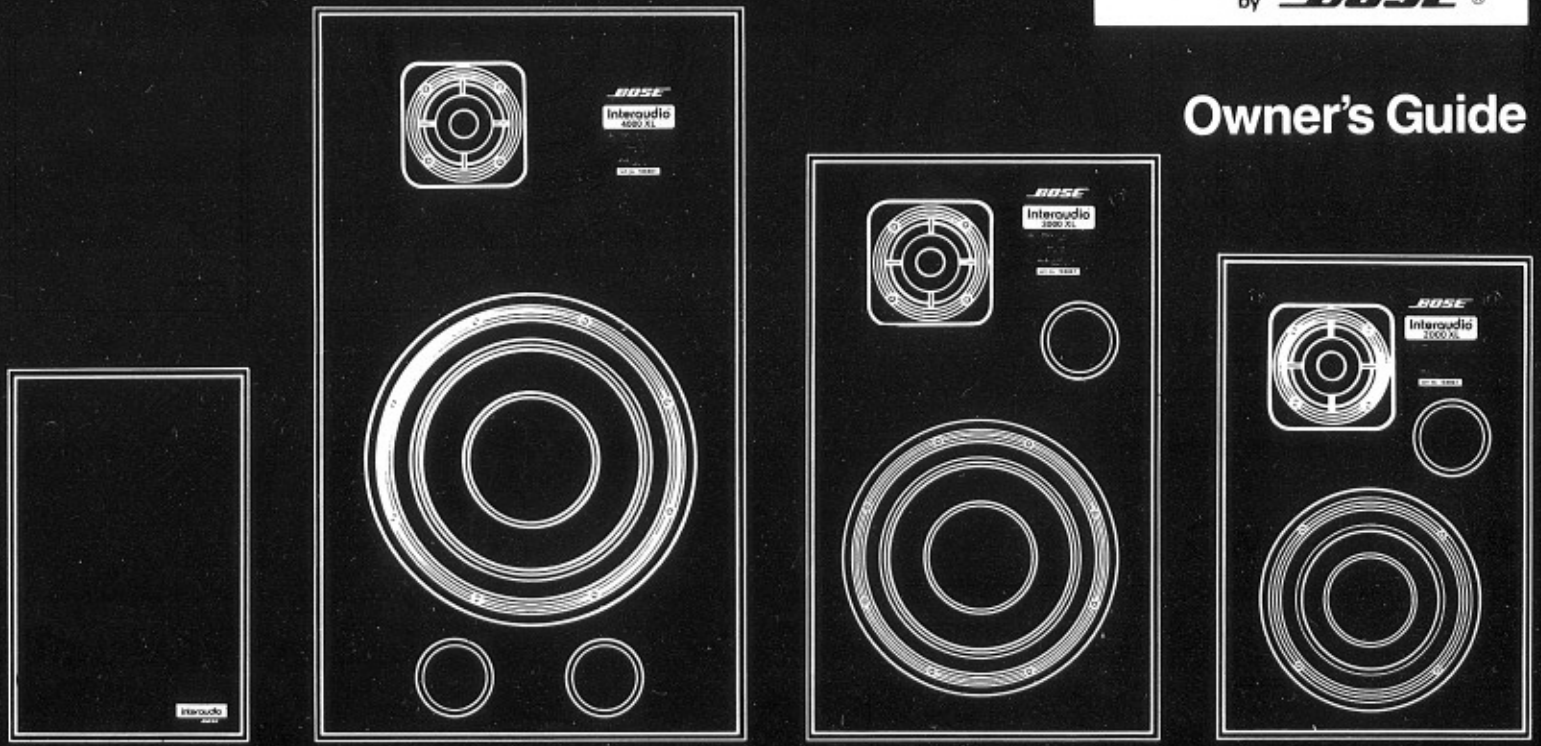

Interaudio® Loudspeaker System
Owner's Guide

Introduction

Thank you for purchasing Interaudio® loudspeakers. Their advanced design and quality construction will give you many years of listening pleasure.

To obtain the best possible performance from your speakers, please take the time to read this guide.

Unpacking

Unpack each unit carefully, saving the cartons and all other packing materials for later use. If either unit appears to be damaged, **do not place the damaged unit into operation.** Repack the unit(s) in its original carton and notify your authorized Interaudio dealer immediately.

Wire Selection

Use standard 18-gauge speaker wire or "zip cord" to connect the speakers to your amplifier or receiver. For runs longer than 20 feet, 16-gauge or thicker wire is recommended.

Connection

Follow the next procedure to be sure your Interaudio speakers are properly connected to your music system. Refer to FIGURE 1.

a. Unplug your amplifier or receiver from the power mains before attempting to connect the speakers.

b. Slightly separate the conductors at the end of each wire. Strip approximately ½ inch of insulation off each conductor.

c. On the back of each speaker is a pair of push-type terminals marked + (red) and − (black). These terminals correspond to the positive and negative output terminals on your amplifier or receiver. Connect the positive output of each amplifier channel to the + (red) terminal on the appropriate speaker (left or right). Connect the − (black) terminals in a similar manner. Use the insulation ribbing or color coding on the wire to be sure you are connecting positive to positive and negative to negative.

d. Check very carefully to make certain that no loose wire strands are "bridged" across the terminals of the speakers or amplifier. **Bridged wires create short circuits which can damage your amplifier.** Repair any loose wire strands before plugging in your amplifier or receiver.

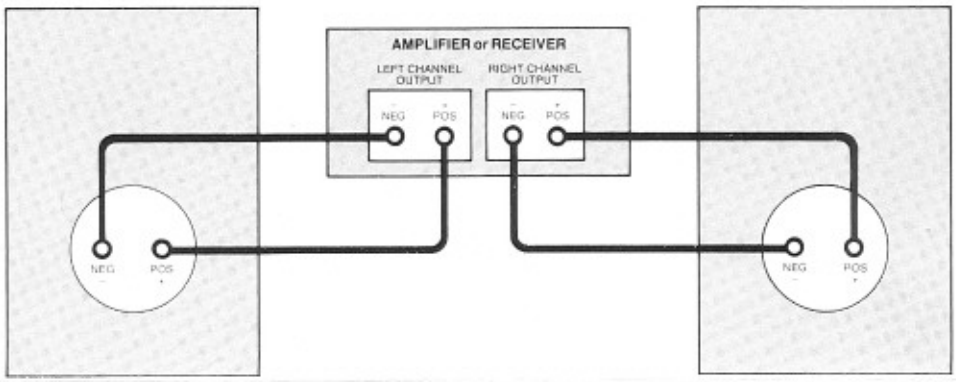


FIGURE 1. Speaker connection.

Maintenance

Interaudio speakers are finished in durable wood-grain vinyl veneer. Clean the cabinets by wiping with a damp cloth and a mild soap. The grille assemblies can be carefully brushed or vacuumed if necessary.

Technical Specifications

	Recommended Amplifier Power	Impedance
1000 XL	10-60 watts RMS	4-8 ohms
2000 XL	10-90 watts RMS	4-8 ohms
3000 XL	10-90 watts RMS	4-8 ohms
4000 XL	10-100 watts RMS	4-8 ohms

After Sales and Warranty

Interaudio Loudspeakers are guaranteed for 5 years. Should you require service or advice at any time, please contact the dealer from whom you bought the speakers. Interaudio dealers are selected for their ability and willingness to provide full back-up services and sound advice. In case of difficulty, please contact your nearest Bose Service Centre. Please fill out the Warranty Card and send to your local Bose Sales Organisation or to Bose European Head Quarters in Edam Holland.

Product specifications and features subject to change
without notice. © Copyright 1984 Interaudio Systems.
All rights reserved. PN 132 155.

BOSE B.V.,
NIJVERHEIDSTRAAT 6,
1135 GE EDAM,
NEDERLAND