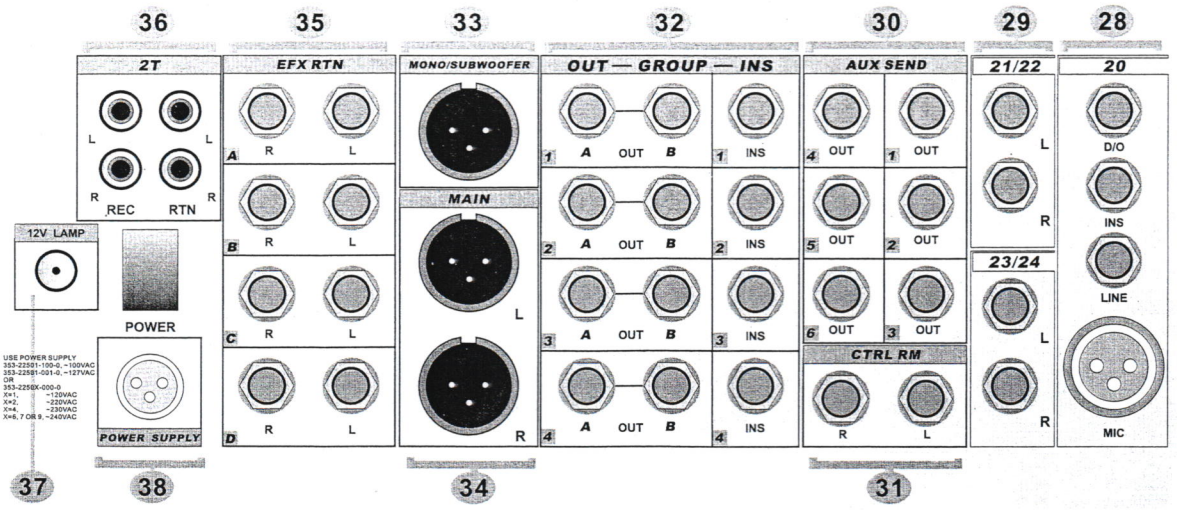

33 MONO / SUBWOOFER OUT

This socket can send out the MONO signal or SUBWOOFER balanced output signal, which is activated by a built-in low pass filter. Normally, this socket sends out the MONO signal to the the MAIN L and MAIN R mix. But when you need a subwoofer signal output to compelete a three way or more sound system, then push the SUBWOOFER button located in the MONO control section. This funciton can save you an external crossover.

34 MAIN OUT

These sockets send balanced line level signals from the MR3243/MR4243 to external devices (for example: an EQ or a power amplifier).

35 EFX RTN INPUTS A/B/C/D

These sockets accept the processed stereo signals from the signal processor, if the processed signal is mono, then only plug into the left channel socket.

36 2T RTN & REC OUT

2T RTN

These sockets are RCA types; use them to connect to semi-professional equipment, such as a: cassette recorder, DAT, MD, or CD player.

2T REC

These RCA connectors should be used to connect to the tape recording deck for recording.

37 12V LAMP SOCKET

Connect the 12 V lamp to this socket.

38 POWER SWITCH & POWER SUPPLY SOCKET

Connect the power supply unit to this socket. Make sure the power supply unit is not plugged into the electrical outlet before connecting it to the mixer. When you switch on this mixer, the blue LED indicator will light up in the level display section.