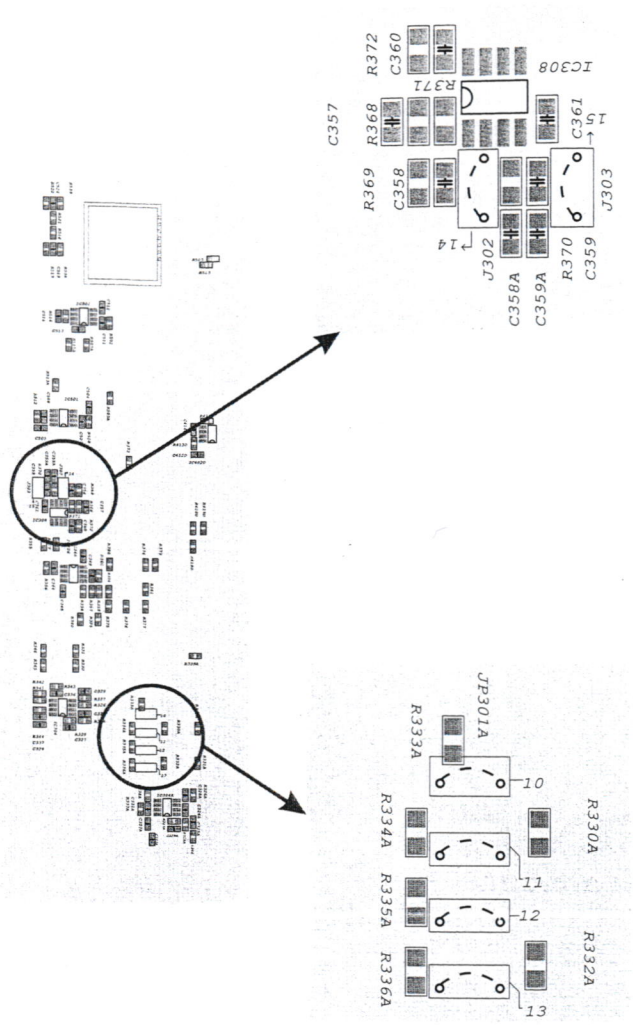

SUBWOOFER CROSSOVER SETTING

Subwoofer output default setting is set below 120Hz. To change the settings, install the jumpers #14 and #15. Then the output of subwoofer frequency will be changed to below 80Hz.

TALKBACK SETTING

Talkback default setting is only sent to AUX 1/2. You can add talkback signal to more aux outputs by installing the jumper #10, which will send additional talkback to AUX3, jumper #11 to AUX 4, jumper #12 to AUX5, and jumper 13 to AUX6.