Smothly remove all the Surface caps

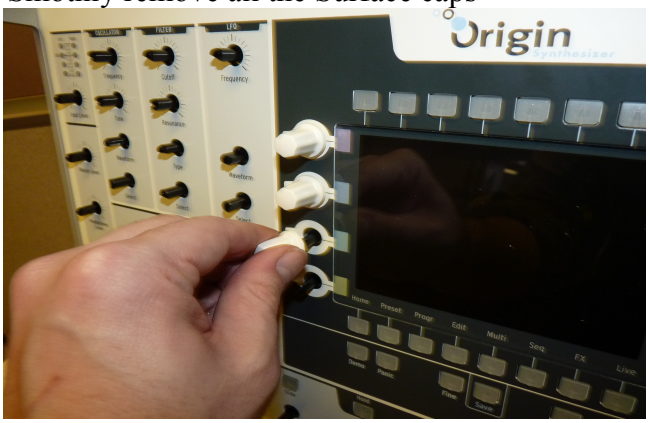



Be careful not to push on caps, this could break the potentiometer

1. You need to use a TX 10 Key

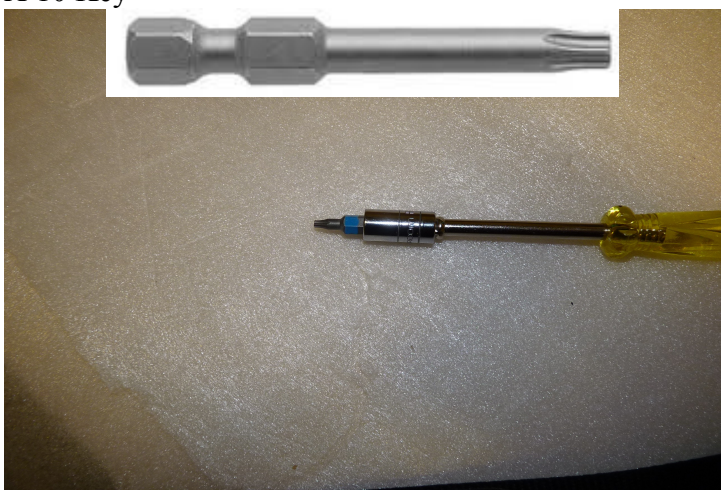

2.Unscrew the Panel and the borders





3.Smootly remove the Front block





Gently lift the tab to release the sheet

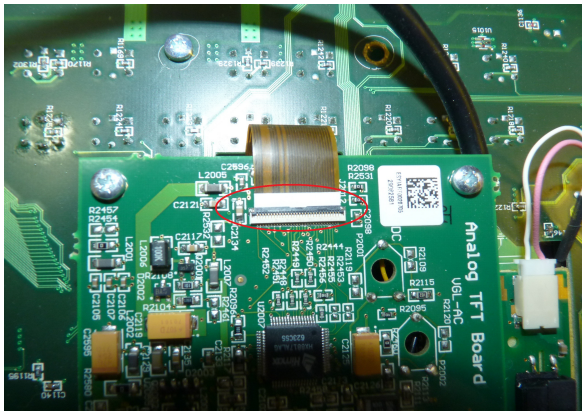

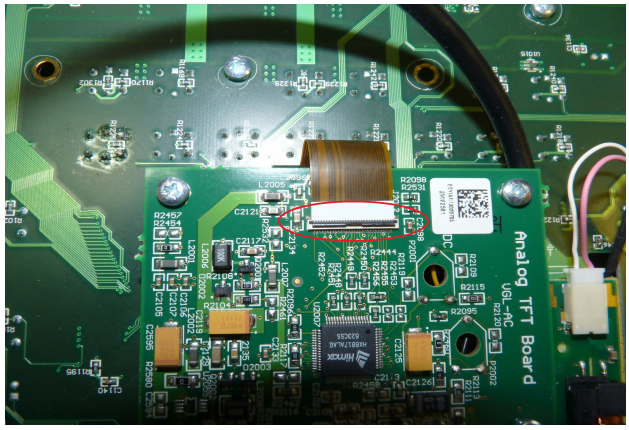

Soothly remove the 2 card connectors



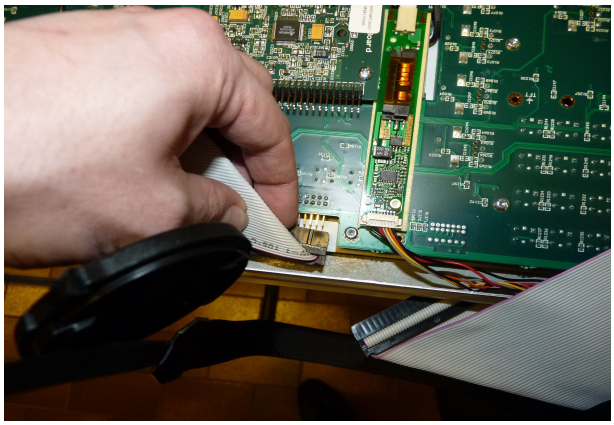

Then remove the others

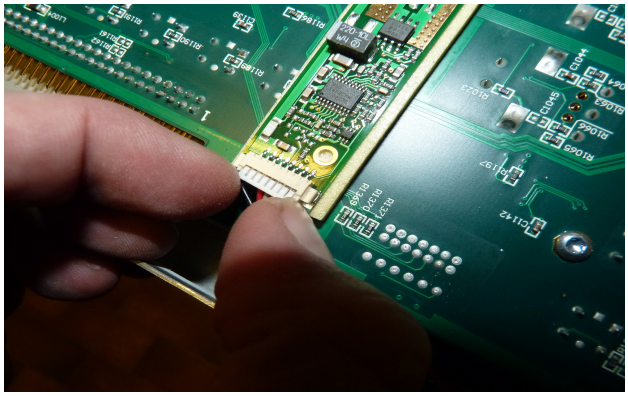

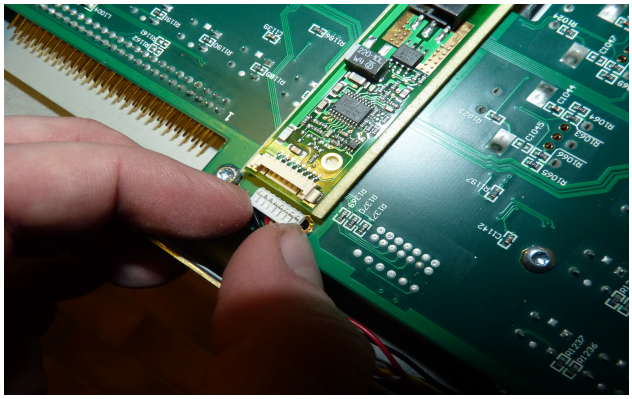

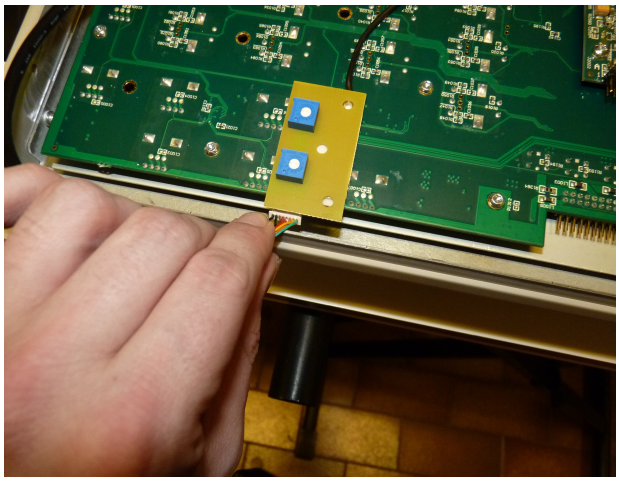

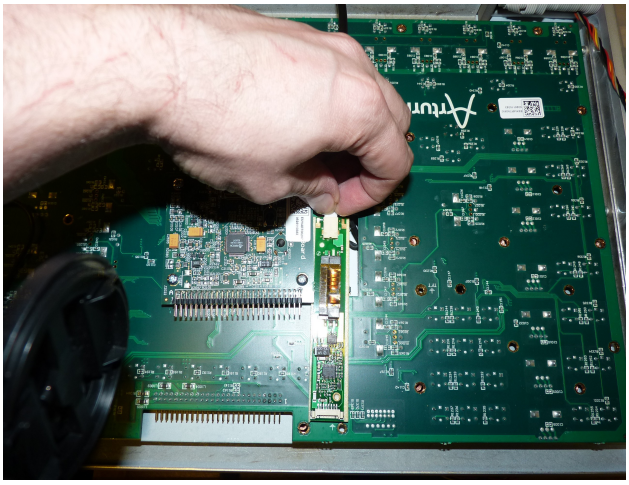

Unscrew each screw of the card using the TX 10 Key

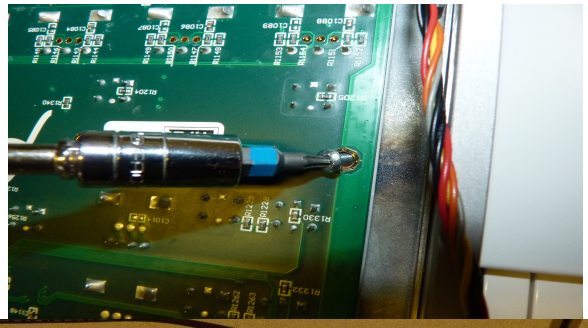

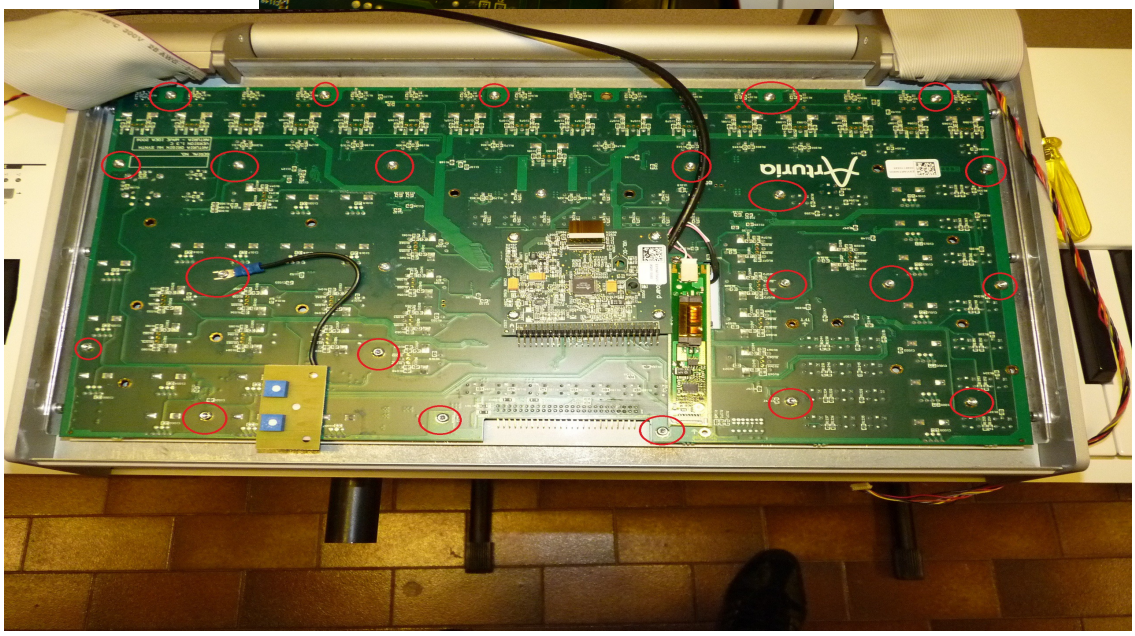

Then Remove the Card from the panel

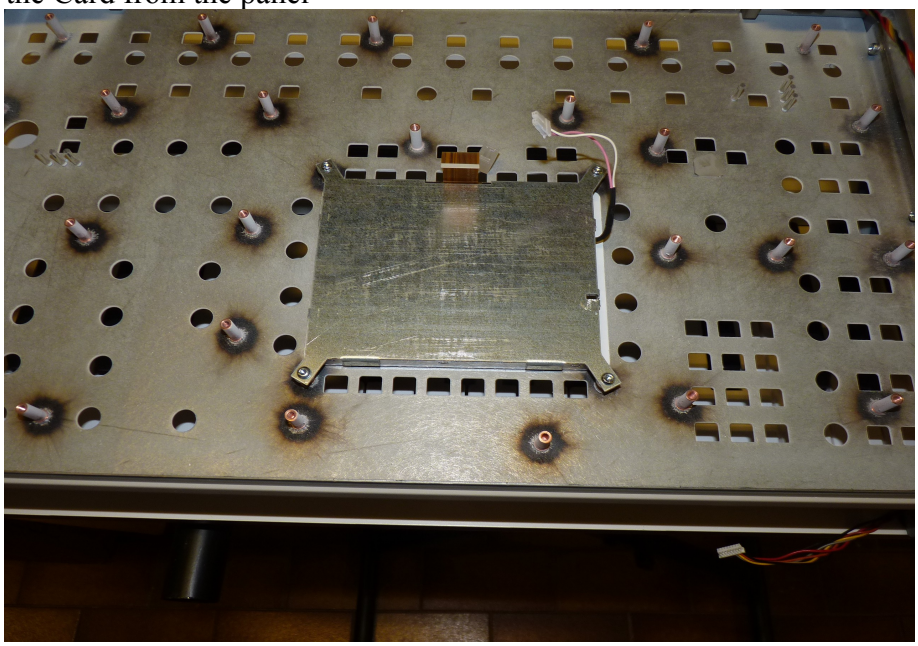

Unscrew the Screen

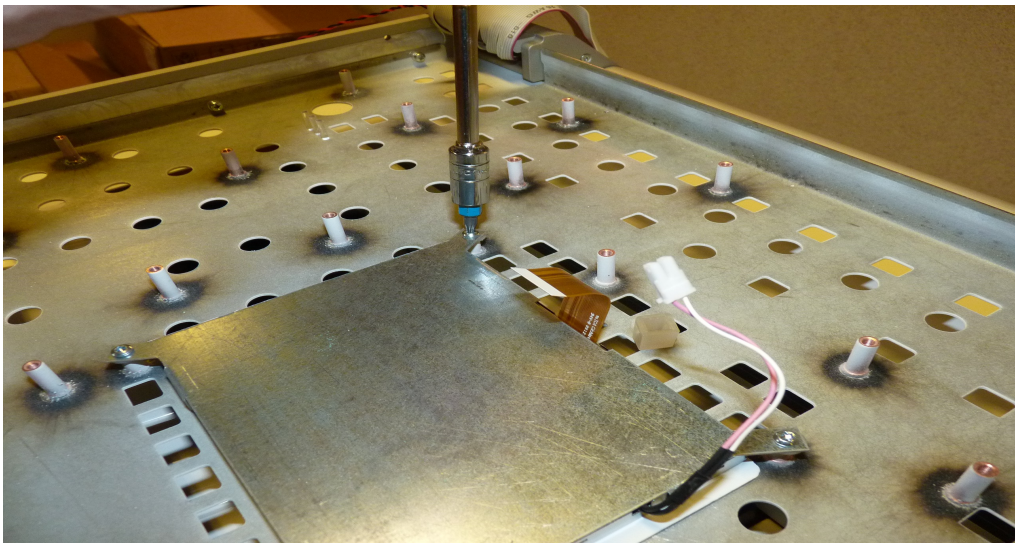

Pay a particular Attention to the little washers behind the metallic plate

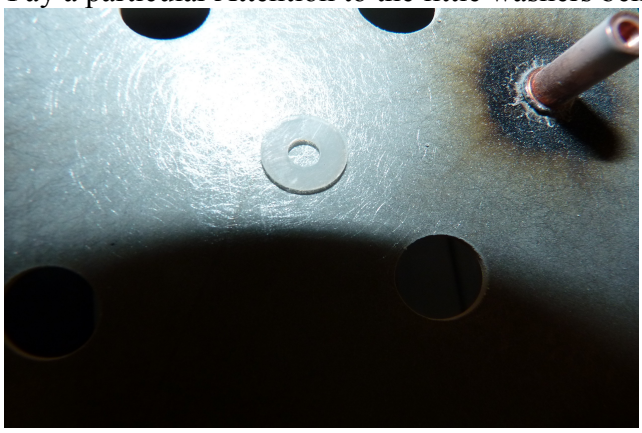



Remove the screen from the panel

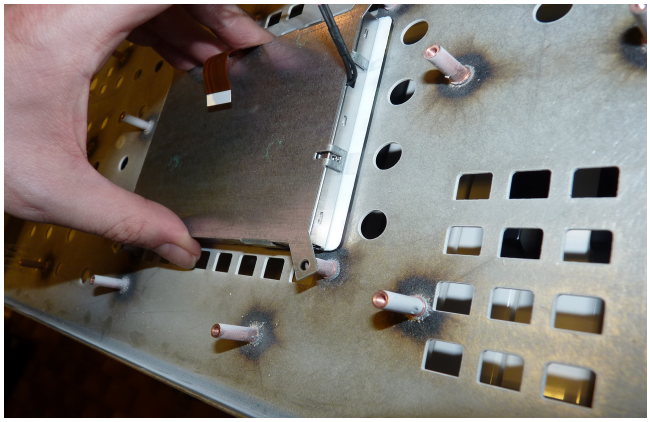

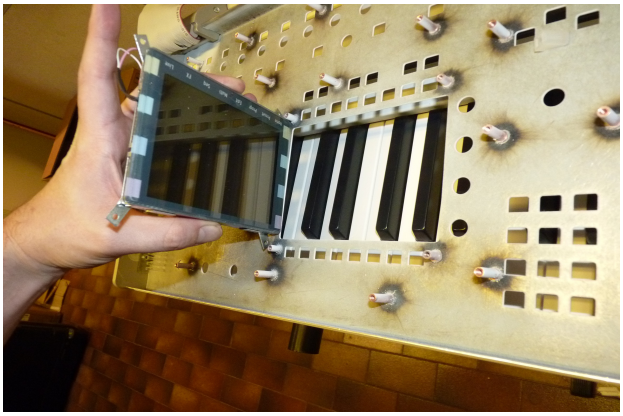

Remove the screen from the metalic plate

Note : Gather before the screen has the metal plate, remove the cable located on the side of the screen.



Place the screen on the panel and move it so that the sides are properly adjusted on each corners

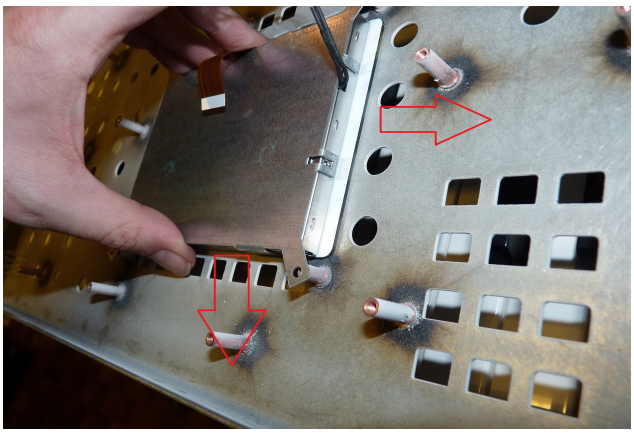

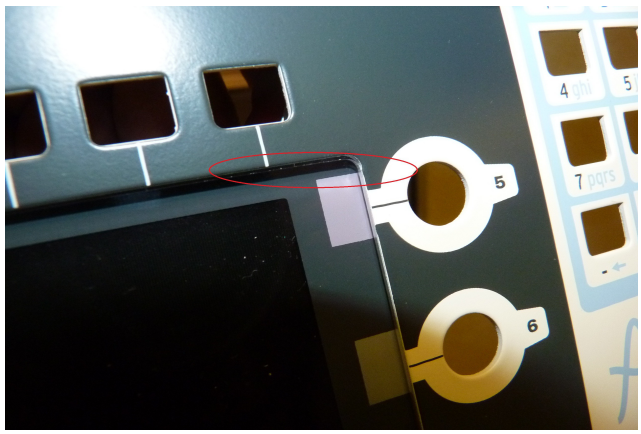

Replace the front card on the panel and make sure that the sheet and the side connector are well are passed through the card.

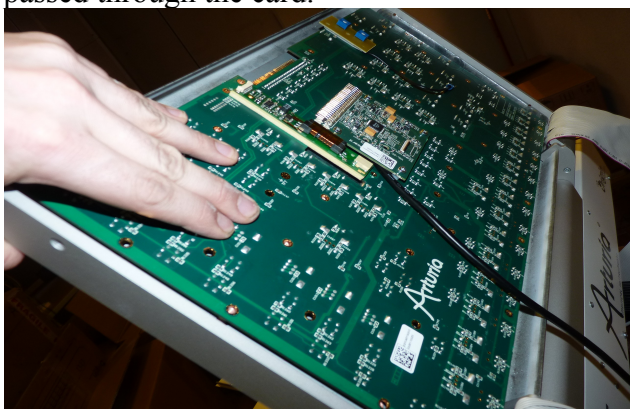

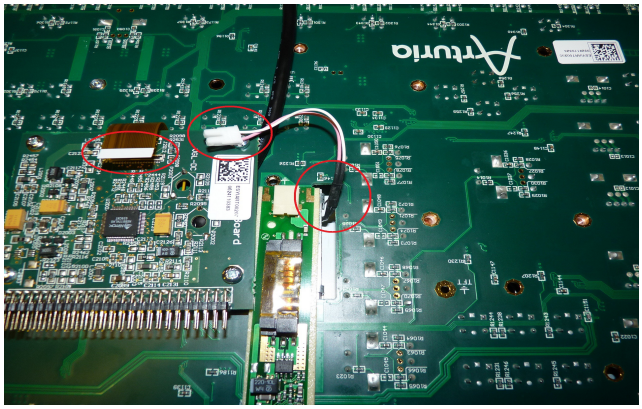

Note: To get out the sheet, you should use rounding a small screwdriver.

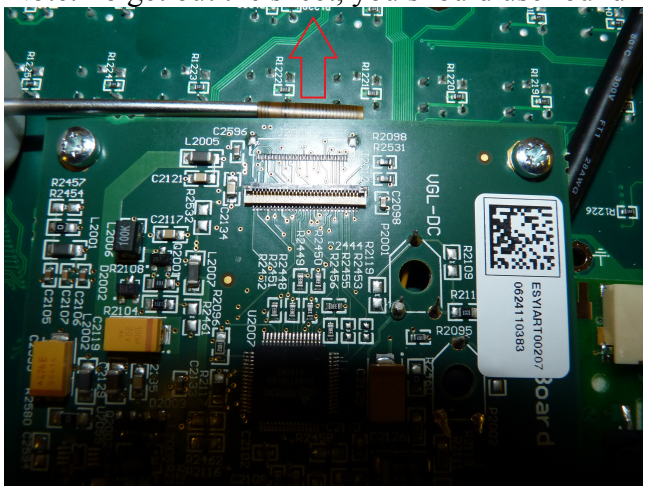

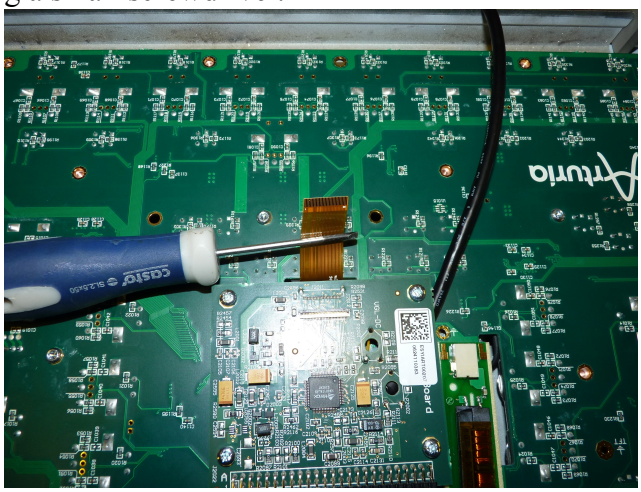

Then plug the screen connectors

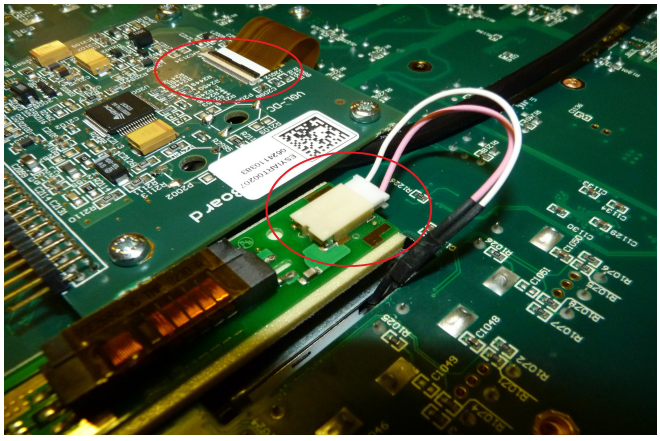

Make sure to correctly screw the small electrical connector contact

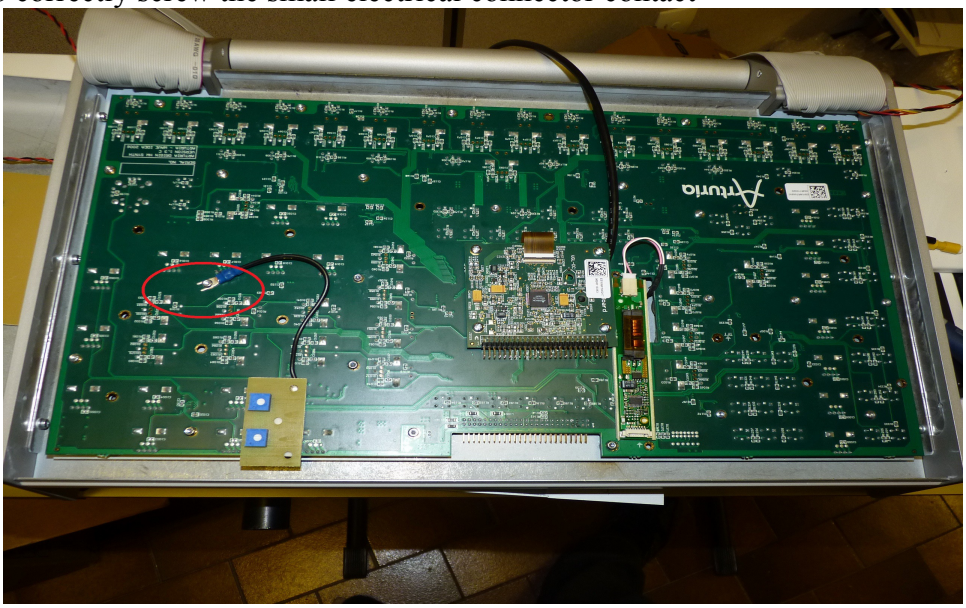

Plug the small connectors with the help of a small screwdriver to gently push it

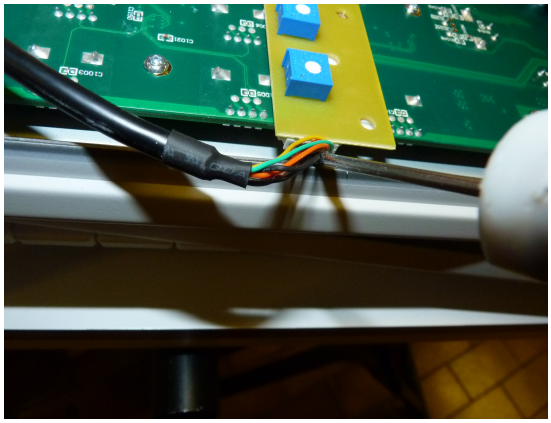

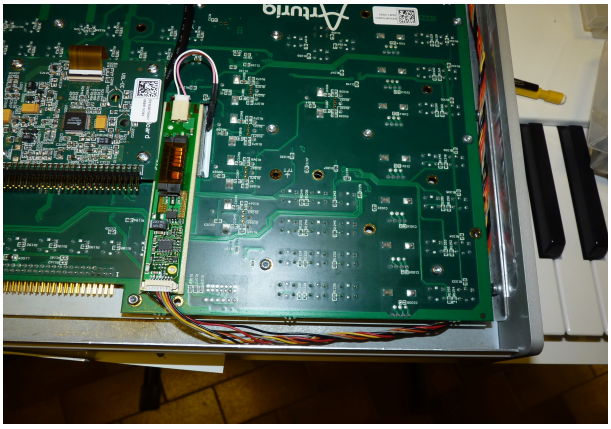

Finally replug the 2 card connectors

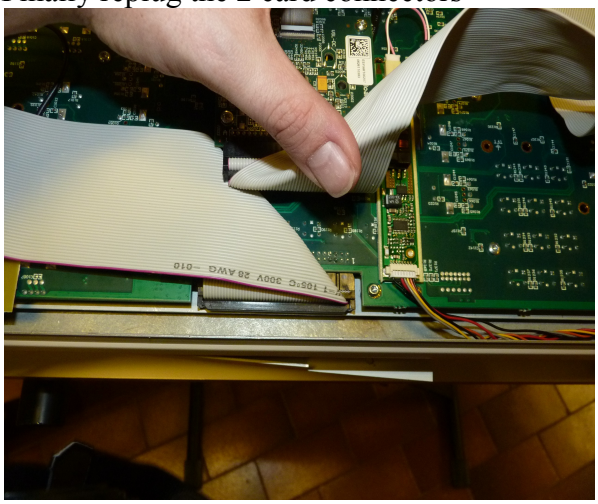

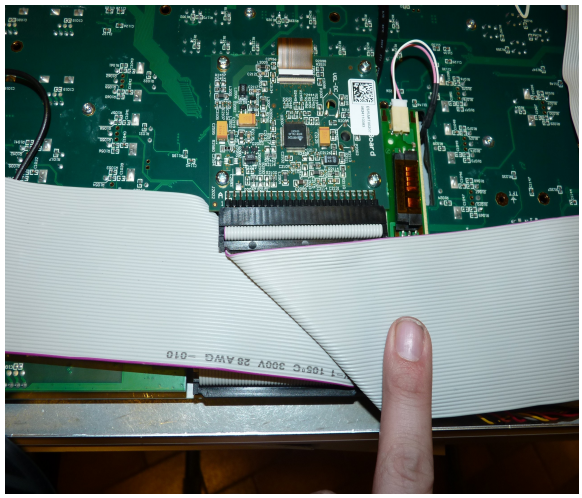

Gently place the back panel and screw it





Replace the knobs



Here is the configuration

