VOICESOLO FX150
QUICK START GUIDE

TC·HELICON

Part 1: Setup
Parte 1: Configuración
パート1：セットアップ
Teil 1: Einrichten
1ère partie: installation
Parte 1: Configurazione

1

Mic stand mount
Montaje en soporte de micro
マイクスタンド・マウント
Montage am Mikrofonstativ
Montage sur pied de micro
Montaggio su asta microfonica

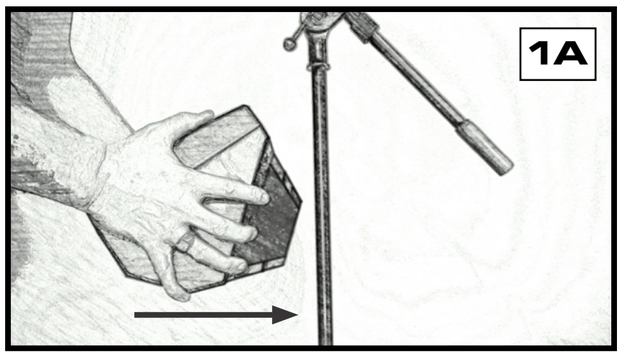

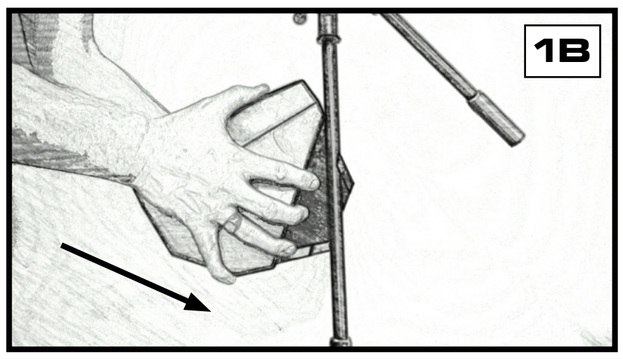

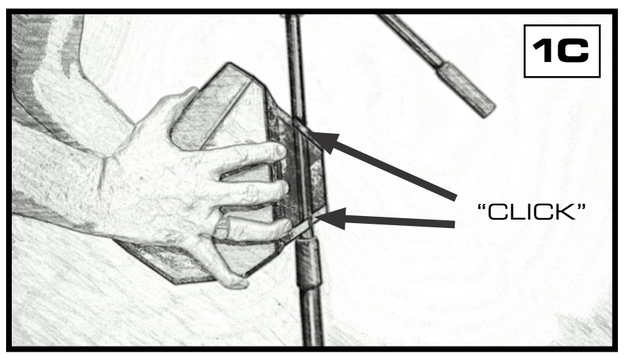

2

Tabletop or floor
Sobremesa o colocado en el suelo
テーブルトップまたはフロア
Am Boden oder auf einem Tisch
Sur la table ou au sol
Su un ripiano o a terra

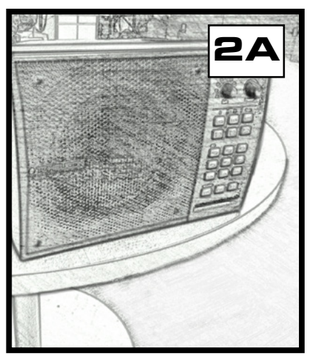

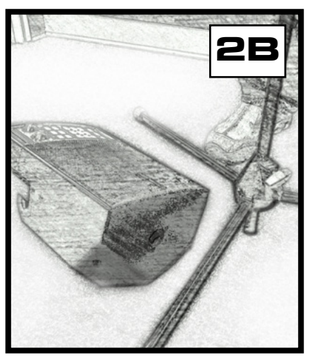

3

Vertical mount
Montaje en vertical
バーチカルマウント
Vertikale Montage
Montage vertical
Montaggio verticale

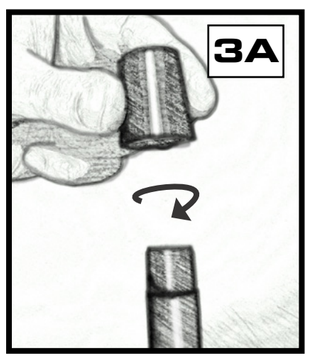

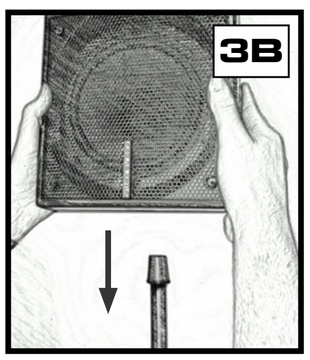

4

Connect cable to supply
Conecte el cable a la fuente de alimentación
コードをパワーサプライに接続
Schließen Sie das Kabel an das Netzteil an
Connectez le câble à l’alimentation
Collega il cavo all’alimentatore

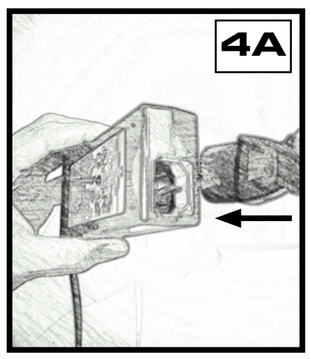

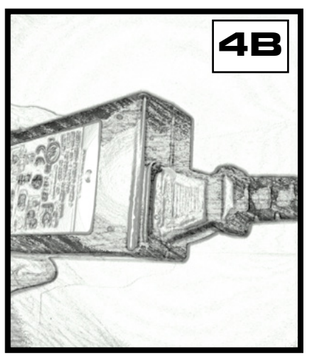

5

Connect power to FX150
Conecte el cable del adaptador al FX150
FX150に電源を接続
Verbinden Sie das Netzteil mit dem FX150
Connectez l’alimentation au FX150
Collega l’alimentatore a FX150

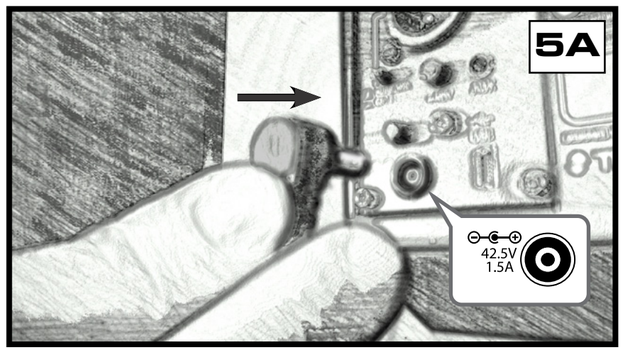

6

Plug into outlet
Conecte el enchufe de la fuente de alimentación a la salida de corriente
コンセントに接続
Stecken sie den Netzstecker in eine Steckdose
Branchez au secteur
Inserisci la spina alla presa di corrente

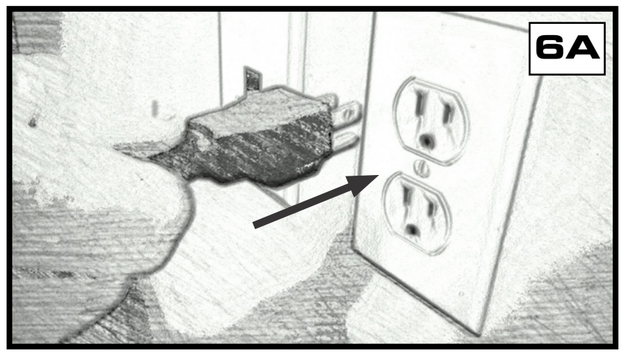

7

Connect mic to CH1
Conecte un micro al CH1
マイクをCH1に接続
Schließen Sie Ihr Mikro an Buchse CH1 an
Connectez le micro sur CH1
Collega il microfono all’ingresso CH1



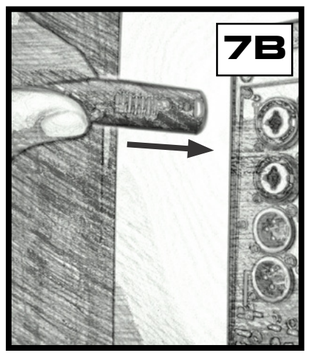

8

Connect your guitar to CH2
Conecte una guitarra al CH2
ギターをCH2に接続
Schließen Sie Ihre Gitarre an Buchse CH2 an
Connectez la guitare sur CH2
Collega la chitarra all’ingresso CH2

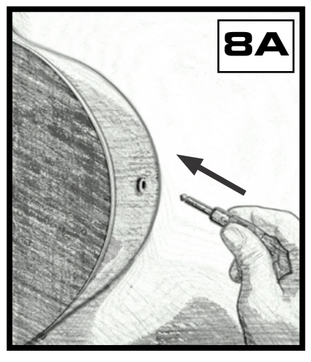

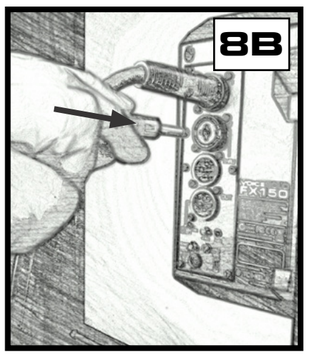

9

Connect music to AUX
Conecte una fuente musical a AUX
ミュージックプレイヤーをAUXに接続
Schließen Sie einen Zuspieler (MP3-Player) an AUX an
Connectez la musique sur AUX
Collega un lettore musicale all’ingresso AUX

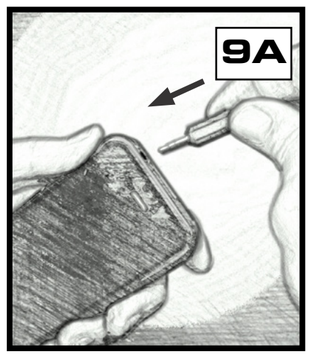

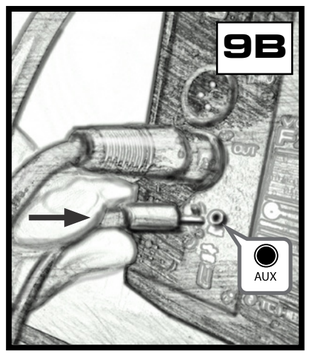

10

Connect OUT to your PA
Conecte la salida OUT a su equipo PA
OUTをPAに接続
Verbinden Sie die OUT-Buchse mit Ihrer PA
Connectez OUT à la sono
Collega l’uscita (OUT) al sistema PA

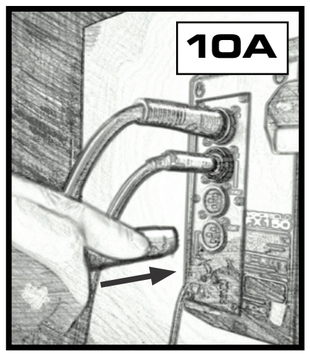

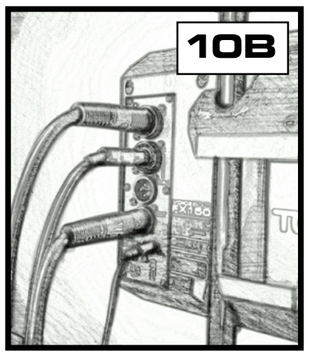

11

Condenser mic? Press +48
¿Utiliza un micro condensador? Pulse +48
コンデンサーマイクの場合は+48を押す
Kondensator-Mikrofon? Drücken Sie den +48-Taster.
Micro à condensateur? Appuyez sur +48
Microfono a condensatore? Premi il tasto +48

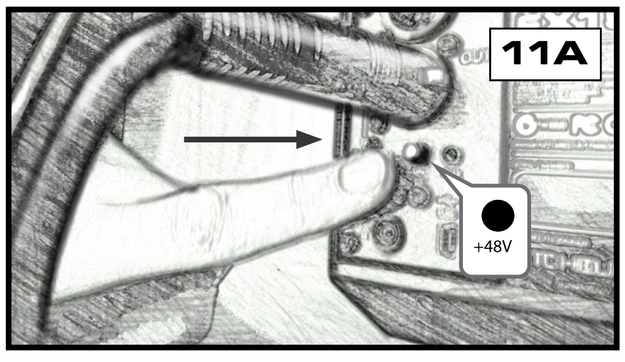

12

Set FULL MIX Button Out (▟)
Coloque el botón FULL MIX como no pulsado
FULL MIXボタンを押されていない（▟）状態に
OUT per Taster auf „Full Mix“ stellen
Bouton en position externe FULL MIX
Seleziona FULL MIX (tasto disinserito)

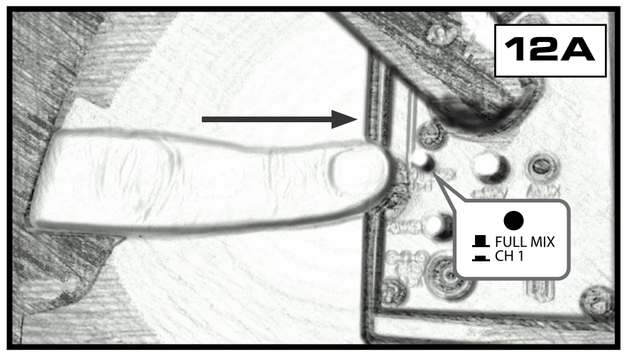

13

Turn MASTER down
Gire el mando MASTER al mínimo
MASTERを下げる
Drehen Sie den MASTER-Regler nach links
Baissez complètement le MASTER
Abbassa il livello MASTER

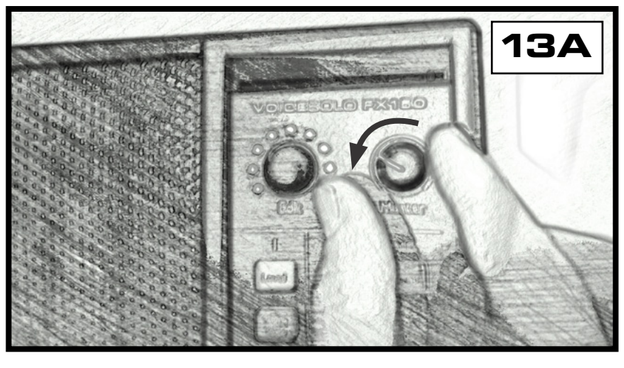

14

Mute PA! Turn POWER On
¡Anule la salida de su equipo PA! y encienda esta unidad
PAをミュートして、POWERをオンにする
Schalten Sie die PA stumm! Schalten Sie den FX150 an
Baissez la sono! Appuyez sur POWER
Imposta il sistema PA in Mute! Attiva l’unità

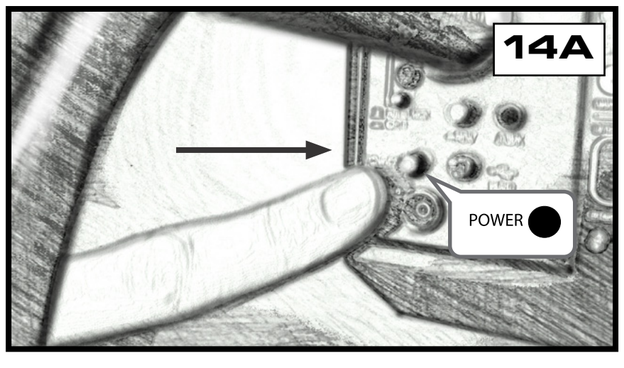

VOICESOLO FX150

QUICK START GUIDE

TC-HELICON

Part 2: Operation
Parte 2: Funcionamiento
パート2：操作
Teil 2: Betrieb
2ème partie: Opération
Parte 2: Operazioni

15

Mic Input: VOCAL TONE (Green ON)
Entrada de micro: VOCAL TONE (verde activado)
マイク・インプットのVOCAL TONEをオン（緑）
Mikr.-Eingang: Vocal Tone an (grün)
Entrée mic: VOCAL TONE active (verte)
Ingresso Mic: VOCAL TONE (attivo – tasto verde)



16

1/4" Input: Vocal Tone auto-disabled (grey)
Entrada de 6,3 mm: Vocal Tone desactivado de forma automática (gris)
¼"インプット使用時TONEは自動オフ（灰色）
6,3 mm-Eingang: Vocal Tone automatisch aus (grau)
Entrée jack: Tone auto-désactivée (grise)
Ingresso da 1/4": sezione Vocal Tone disabilitata in automatico (tasto spento)

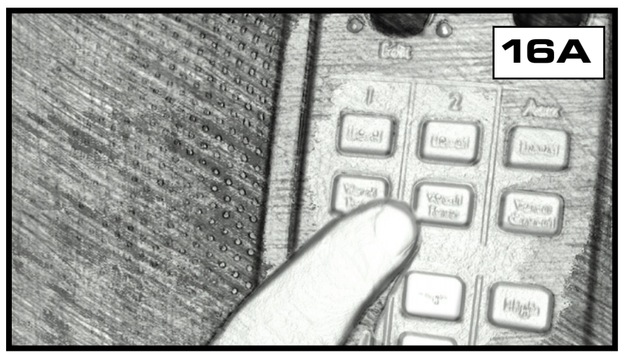

17

Aux: VOCAL CANCEL (green ON)
Aux: VOICE CANCEL (verde activado)
AUXのVOCAL CANCELをオン（緑）
Aux: Voice Cancel an (grün)
Aux: VOCAL CANCEL active (verte)
Aux: VOCAL CANCEL (attivo – tasto verde)

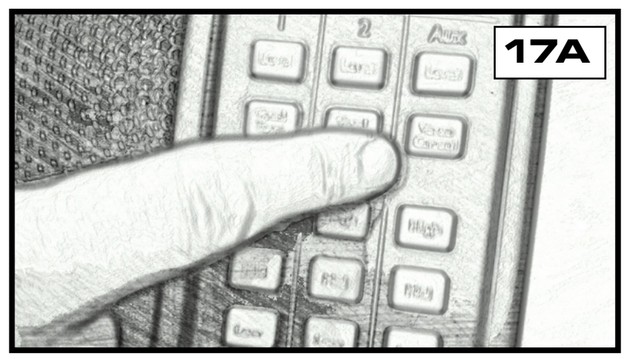

18

Turn MASTER up
Suba el ajuste del mando MASTER
MASTERを上げる
Drehen Sie den MASTER-Regler nach rechts
Montez le MASTER
Aumenta il livello MASTER

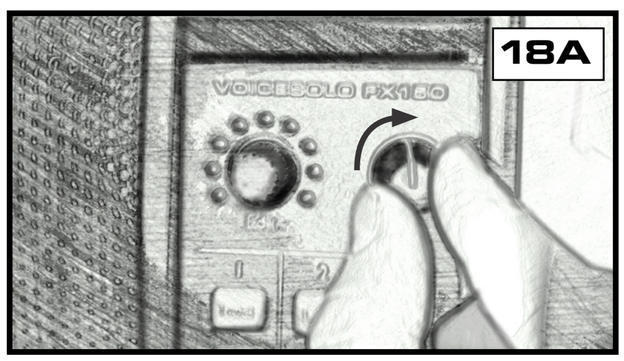

19

Sing & play!
¡Cante y toque!
マイクとギターの準備完了！
Singen und spielen Sie!
Chantez et jouez!
Canta e suona!



20

Adjust Mic LEVEL (CH1)
Ajuste del nivel (LEVEL) del micro (CH1)
マイクのLEVEL（CH1）を調節
Justieren Sie den Mikrofonpegel (CH1)
Ajustez le niveau (LEVEL) de mic (CH1)
Regola il livello del microfono (CH1)





21

Adjust guitar LEVEL (CH2)
Ajuste del nivel (LEVEL) de la guitarra (CH2)
ギターのLEVEL（CH2）を調節
Justieren Sie den Gitarrenpegel (CH2)
Ajustez le niveau (LEVEL) guitare (CH2)
Regola il livello della chitarra (CH2)





22

Adjust REVERB levels
Ajuste los niveles de REVERB
REVERB（リバーブ）のレベルを調節
Stellen Sie die Reverb-Pegel ein
Ajustez les niveaux de réverbes
Regola i livelli REVERB









23

Change Reverb STYLE (Global)
Cambie el estilo (STYLE) de la reverb (global)
リバーブのSTYLE（スタイル）を変更
Wählen Sie einen Reverb-Stil (gilt global)
Changez de STYLE de réverbe (global)
Cambia il Reverb STYLE (globale)





24

Adjust EQ: HIGH, MID, LOW
Ajuste la EQ: HIGH, MID, LOW (agudos, medios, graves)
HIGH／MID／LOWでEQを調節
Justieren Sie den Equalizer (Höhe, Mitten, Bässe).
Ajustez l'EQ: HIGH, MID, LOW
Regola l'EQ: HIGH, MID, LOW





Product website

www.tc-helicon.com/products/voicesolo-fx150/

For advanced functions download the manual

www.tc-helicon.com/products/voicesolo-fx150/support/



ALSO AVAILABLE:

MP-75 Microphone with Mic Control





Important Safety Instructions

1 Read these instructions.
2 Keep these instructions.
3 Heed all warnings.
4 Follow all instructions.
5 Do not use this apparatus near water.
6 Clean only with dry cloth.
7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8 Do not install near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9 Only use attachments/accessories specified by the manufacturer.
10 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Prod. No. E60540211

Warning!

- To reduce the risk of fire or electrical shock, do not expose this equipment to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the equipment.
- Do not install in a confined space.

Service

- All service must be performed by qualified personnel.

Caution:

You are cautioned that any change or modifications not expressly approved in this manual could void your authority to operate this equipment.

EMC/EMI

This equipment has been tested and found to comply with the limits for a Class B Digital device, pursuant to part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses and can radiate radio frequency energy and – if not installed and used in accordance with the instructions – may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception – which can be determined by turning the equipment off and on –, the user is encouraged to try correcting the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from the one to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For customers in Canada:

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

¡Precaución!

- Para reducir el riesgo de incendios o descargas eléctricas, no permita que este aparato quede expuesto a salpicaduras y asegúrese de no colocar sobre él ningún objeto que contenga líquidos, como un jarrón, para evitar que se pueda derramar.
- No instale este aparato dentro de un espacio confinado, como encastrado en una librería.

Reparaciones

- Cualquier reparación debe ser realizada únicamente por personal de un servicio técnico oficial.

Atención:

Le advertimos que cualquier cambio o modificación que no aparezca aprobada expresamente en este manual puede anular su autorización a utilizar este aparato.

警告！

- 感電や発火のリスクを軽減するため、本体に水が垂れたりはねる環境での保管・使用は避け、花瓶等液体の入った物を本体の上に置かないでください。
- 閉じられた空間に設置しないでください。

保守について

- 本体の保守点検修理は必ず有資格者の手で行なってください。

注意

本マニュアルに明示されていない本体への変更・改造を行った場合、本機器を操作する資格を失うことがあります。

Achtung!

- Um die Gefahr eines Feuers oder eines elektrischen Schlages zu vermeiden, dürfen Sie dieses Gerät keinem tropfendem Wasser oder Spritzwasser aussetzen. Stellen Sie keine mit Flüssigkeiten gefüllten Behältnisse – wie beispielsweise Vasen – auf diesem Gerät ab.
- Montieren Sie das Gerät nicht in einem vollständig geschlossenen Behälter oder Gehäuse.

Wartung

- Alle Wartungsarbeiten müssen von einem hierfür qualifizierten Servicetechniker durchgeführt werden.

Achtung:

Änderungen an diesem Gerät, die im Rahmen dieser Anleitung nicht ausdrücklich zugelassen wurden, können das Erlöschen der Betriebserlaubnis für dieses Gerät zur Folge haben.

Attention Danger!

- Pour éviter tout risque d'électrocution ou d'incendie, ne pas exposer cet appareil à quelque source liquide (gouttes d'eau, projections liquides,etc.) et veillez à ne poser aucun objet contenant un liquide sur l'appareil.
- Ne pas installer dans un espace confiné.

Service

- Confiez toutes les opérations de maintenance à un personnel qualifié.

Attention:

Toute modification apportée à l'appareil et qui n'est pas expressément préconisée dans ce manuel invalide votre droit à utiliser cet appareil.

Attenzione!

- Per ridurre il rischio di incendio o scossa elettrica, non esporre questo dispositivo allo sgocciolamento o agli schizzi di alcun liquido. Non posizionare sul dispositivo oggetti contenenti liquidi, come vasi o bicchieri.
- Non installare in uno spazio ristretto.

Assistenza

- Ogni intervento tecnico deve essere effettuato solo da personale qualificato.

Cautela:

Si avverte che qualsiasi cambiamento e modifica non espressamente approvata in questo manuale può annullare la vostra autorità di utilizzo del dispositivo.