
AKAI SERVICE MANUAL

GX-636

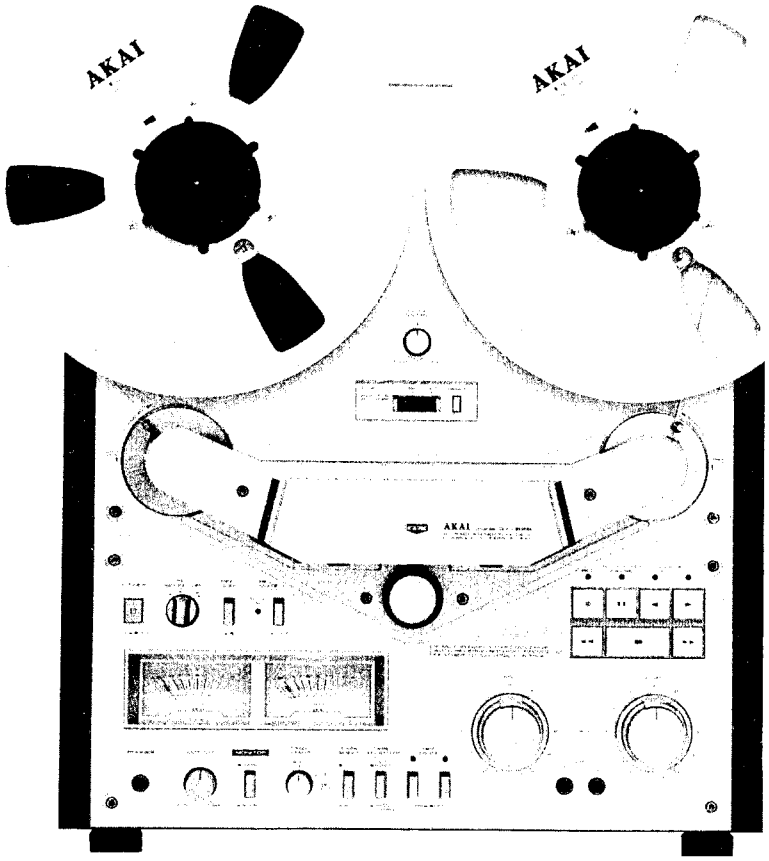

THIS MANUAL MUST BE USED AS A SET TOGETHER WITH SEPARATELY PUBLISHED GX-635D SERVICE MANUAL AND PARTS LIST.

STEREO TAPE DECK

MODEL GX-636

SECTION 1

SERVICE MANUAL

TABLE OF CONTENTS

I. TECHNICAL DATA 2
II. VOLTAGE AND CYCLE CONVERSION 3
1. VOLTAGE CONVERSION 4
2. CYCLE CONVERSION 4
III. COMPOSITION OF VARIOUS P.C BOARDS 5

For basic adjustments, measuring methods, and operating principles, refer to GENERAL TECHNICAL MANUAL.

I. TECHNICAL DATA

Track System	4 Track 2 Channel Stereo System
Reel Capacity	Up to 10″ reel
Heads	GX head for Recording × 2 GX head for Playback × 2 Erase head × 2
Motors	AC Servo motor for capstan drive × 1 AC Eddy current motor for reel drive × 2
Tape Speed	19 cm/s ±0.5% (7-1/2 ips.) 9.5 cm/s ±1.0% (3-3/4 ips.)
Wow and Flutter	Less than 0.03% WRMS, 0.07% DIN 45500 at 19 cm/s Less than 0.04% WRMS, 0.09% DIN 45500 at 9.5 cm/s
Tape Winding Time	75 sec. using 360m (1200 ft.) tape
Frequency Response	30 to 27,000 Hz ±3 dB at 19 cm/s 30 to 20,000 Hz ±3 dB at 9.5 cm/s
Signal to Noise Ratio	Better than 65 dB at 19 cm/s DIN 45500
Harmonic Distortion	Less than 0.4% at 19 cm/s
Input	MIC: 0.25 mV (input impedance 5.0 kohms) Required microphone impedance: 600 ohms Line: 70 mV (input impedance 100 kohms)
Output	Line: 0.775V at 0 VU Required load impedance: more than 20 kohms Phone: 100 mV/8 ohms at 0 VU
DIN	Input: 2 mV (input impedance 10 kohms) Output: 0.3V Required load impedance: more than 20 kohms
Dimensions	440 (W) × 483 (H) × 256 (D) mm (17.3 × 19.0 × 10.1″)
Weight	21 kg (46.4 lbs)
Power Requirements	100V, 50/60 Hz for Japan 120V, 60 Hz for USA and Canada 220V, 50 Hz for Europe except UK 240V, 50 Hz for UK and Australia 110/120/220/240V switchable 50/60 Hz for the other countries
Power Consumption	JPN 75W U/T 70W CSA, AAL 150W

*** For Improvement purposes, specifications and design are subject to change without notice.**

II. VOLTAGE AND CYCLE CONVERSION

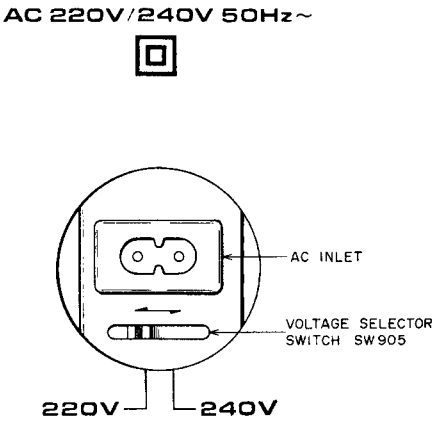


Fig. 1 Voltage Conversion (CEE, UK Model)

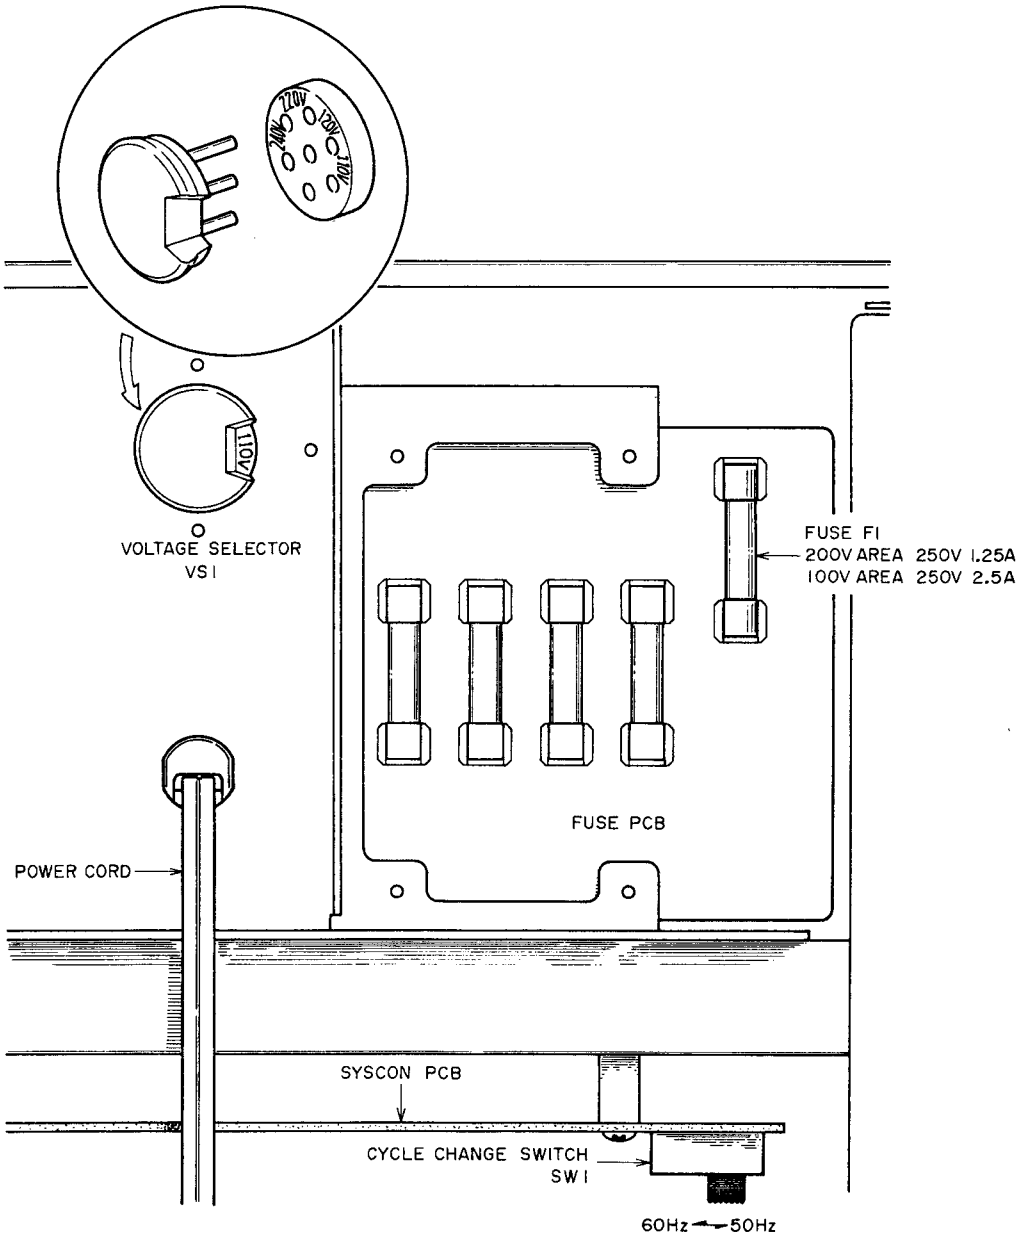


Fig. 2 Voltage Conversion (U/T Model) and Cycle Conversion (U/T, JPN Model)

CAUTION:
When selecting the voltage or cycle, turn off the power and disconnect the power cord.

1. VOLTAGE CONVERSION

(Refer to Figs. 1, 2)

1) JPN Model (100, 50/60 Hz), CSA, AAL Model (120V, 60 Hz)
   Voltage can not be switched.
2) CEE, UK Model (220/240V, 50 Hz)
   A voltage selector switch is provided under the AC inlet on the back side of machine. Select the proper voltage by this switch according to the voltage to be used. Move the switch to the left side for 220V and to the right side for 240V.
3) U/T Model (110/120/220/240V, 50/60 Hz)
   Remove the back board and find out the voltage selector and Fuse P.C Board on the upper portion of the machine. Change the position of voltage selector plugs so that the voltage to be used coincides with the voltage shown through the opening of voltage selector plug.
   The rating of fuse (F1) differs depending on the voltage to be used. Change the fuse according to the specified rating shown below.


110/120V Area	250V 2.5A
220/240V Area	250V 1.25A

2. CYCLE CONVERSION (Refer to Fig. 2)


Cycle can be converted only in U/T, JPN Model.
Remove the back board and select the position of switch located in the recess at right portion of Syscon P.C Board to correspond to the frequency of power to be used. Move the switch to the right for 50 Hz and to the left for the 60 Hz.

III. COMPOSITION OF VARIOUS P.C BOARDS

1. Sys. Con P.C Board TH-1015 (9ED), Reverse P.C Board TH-2044, Sensing P.C Board TH-2045, REC Mute P.C Board TH-2046 and Terminal P.C Board NE-2230.

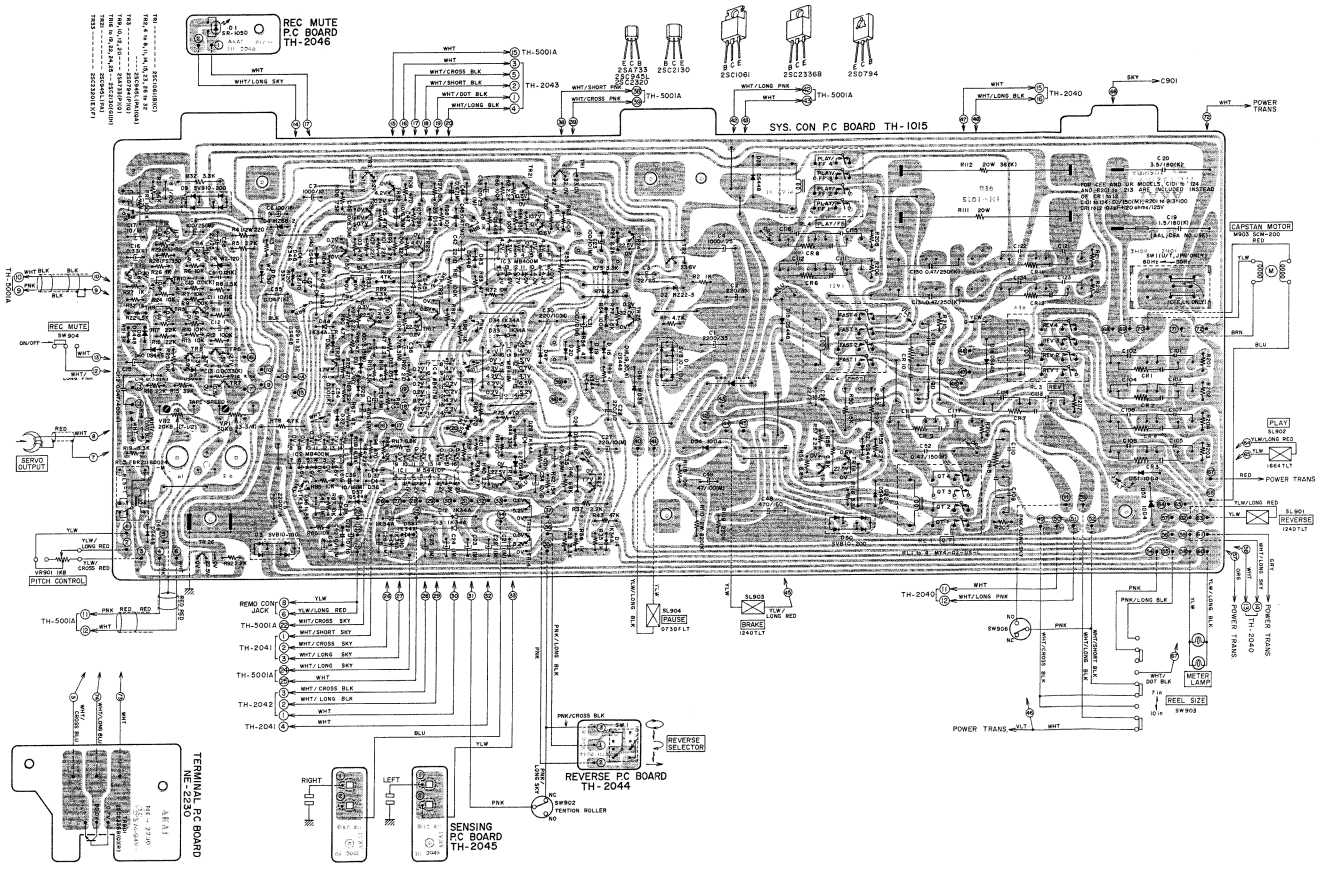


2. Pre Amp P.C Board TH-5001A (4ED) and REC LED P.C Board TH-5001B.

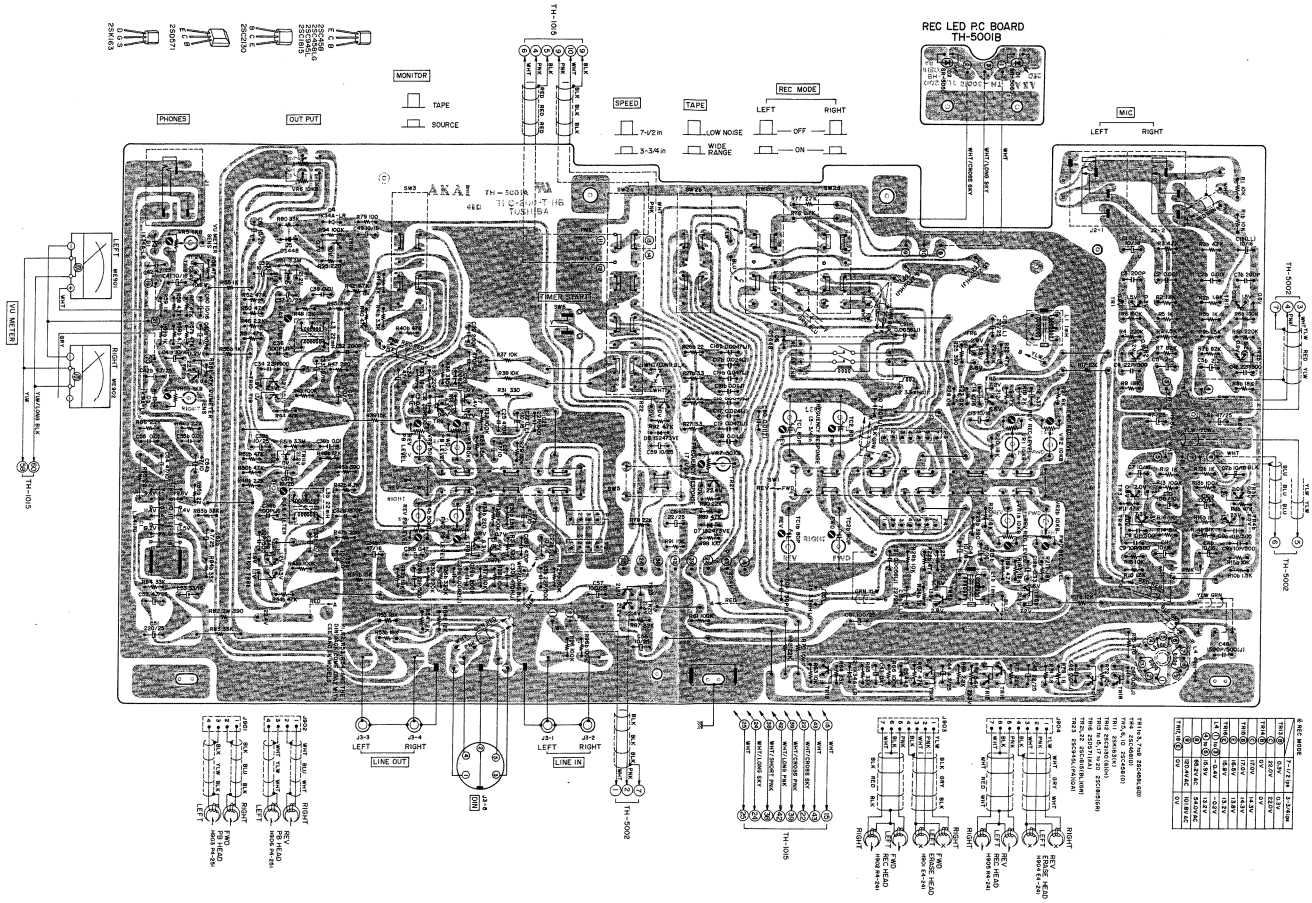


AKAI-00107 / DRUCK 2


3. Volume P.C Board TH-5002 (2ED).

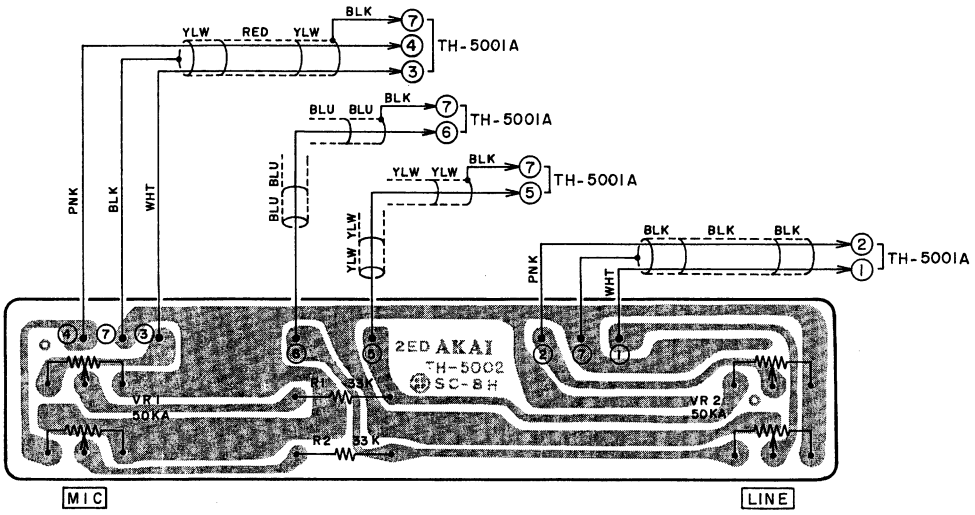


4. Direction P.C Board TH-2043 (2ED).

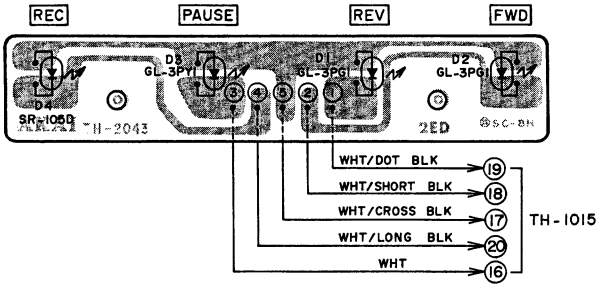


5. Operation P.C Board (A) TH-2041 (3ED) and Operation P.C Board (B) TH-2042 (3ED).

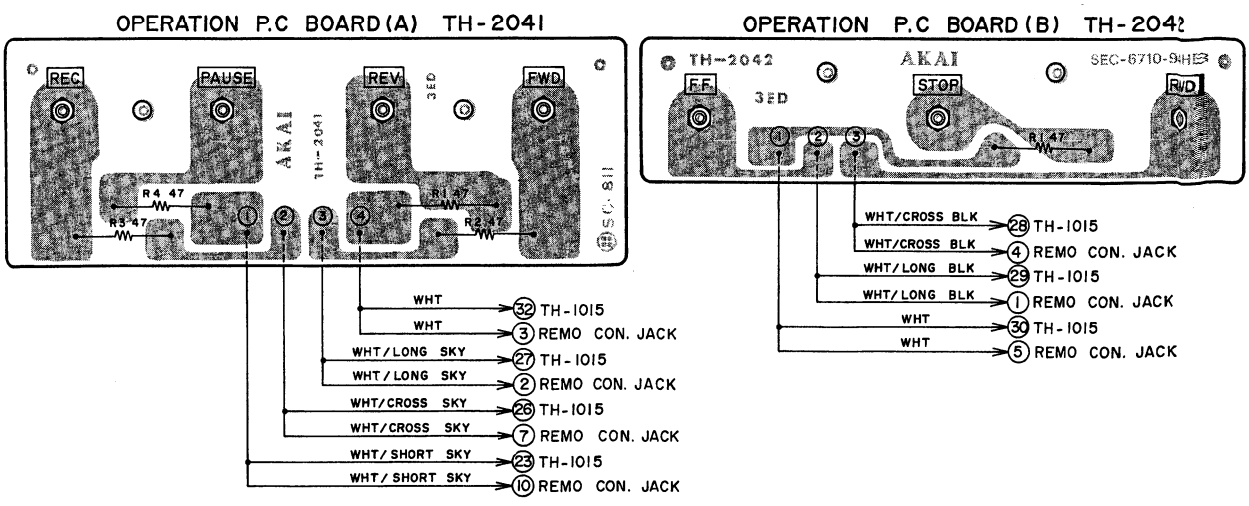

6. Fuse P.C Board TH-2040 (U/T).

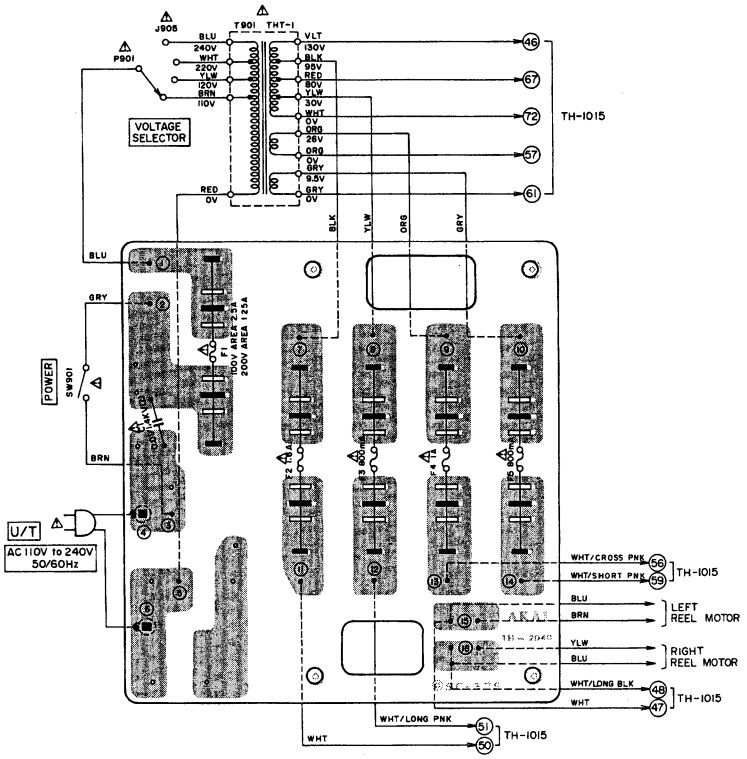


7. Fuse P.C Board TH-0240 (JPN, AAL, CSA).

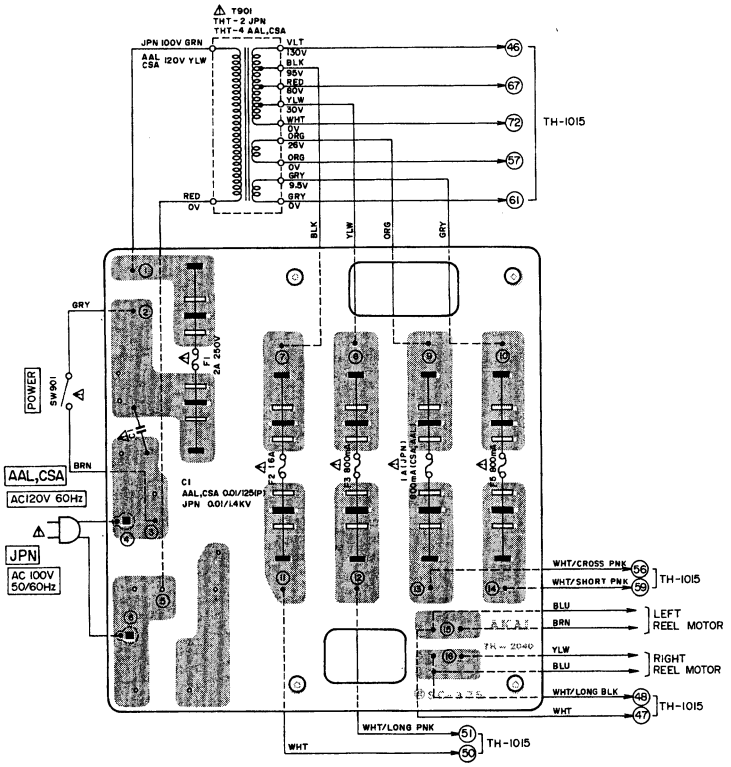

WARNING: ⚠INDICATES SAFETY CRITICAL COMPONENTS. FOR CONTINUED SAFETY, REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURER'S RECOMMENDED PARTS

AVERTISSEMENT: ⚠IL INDIQU LES COMPOSANTS CRITIQUES DE SÛRETÈ. POUR MAINTENIR LE DEGRE DE SECURITE DE L'APPAREIL NE REMPLACER LES CONPOSANTS DONT LE FONCTIONNEMENT EST CRITIQUE POUR LA SECURITE QUE PAR DES PIECES RECOMMANDEES PAR LE FABRICANT

8. Fuse P.C Board TH-2040 (CEE, UK).

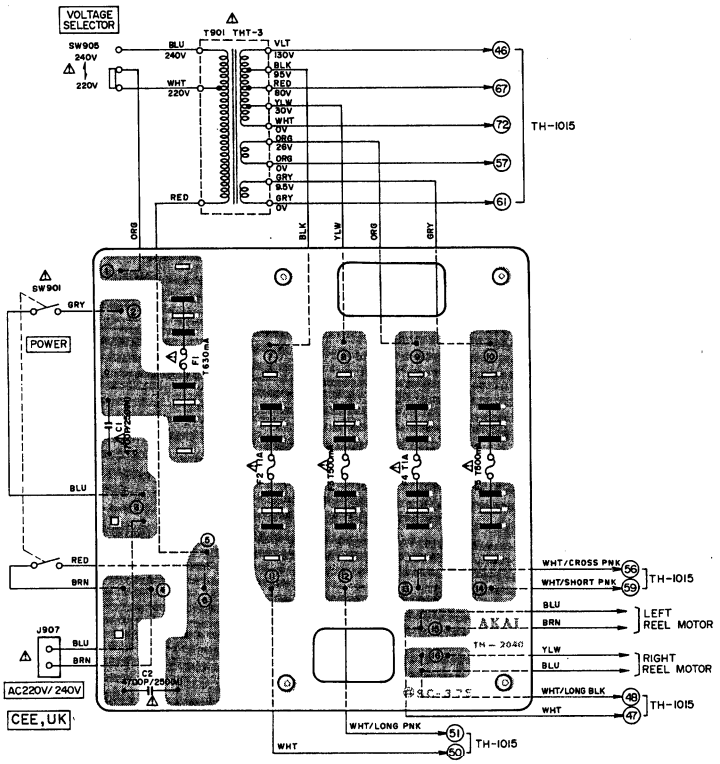

WARNING: ⚠INDICATES SAFETY CRITICAL COMPONENTS. FOR CONTINUED SAFETY, REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURER'S RECOMMENDED PARTS

AVERTISSEMENT: ⚠IL INDIQU LES COMPOSANTS CRITIQUES DE SÛRETÉ. POUR MAINTENIR LE DEGRE DE SECURITE DE L'APPAREIL NE REMPLACER LES CONPOSANTS DONT LE FONCTIONNEMENT EST CRITIQUE POUR LA SECURITE QUE PAR DES PIECES RECOMMANDEES PAR LE FABRICANT

SECTION 2

PARTS LIST

The composite parts of Model GX-636 except for those which have been changed as per the list below, are identical to those of Model GX-635.
Therefore, when ordering parts for this tape deck, please utilize Model GX-635 Parts List.

TABLE OF CONTENTS


1. HEAD BLOCK 16
2. ROLLER (L), (R) BLOCK 16
3. POWER SUPPLY BLOCK 16
4. ASSEMBLY BLOCK 16
5. SYS CON P.C BOARD (TH-1015) BLOCK 16
6. PRE AMP P.C BOARD (TH-5001A) BLOCK 16
7. REC LED P.C BOARD (TH-5001B) BLOCK 16
8. FINAL ASSEMBLY BLOCK 17

INDEX 18

Resistor and Capacitor which is not listed in this parts list, please refer to COMMON LIST FOR SERVICE PARTS.

HOW TO USE THIS PARTS LIST

1. This parts list is compiled by various individual blocks based on assembly process.
2. When ordering parts, please describe parts number, serial number, and model number in detail.
3. How to read list.

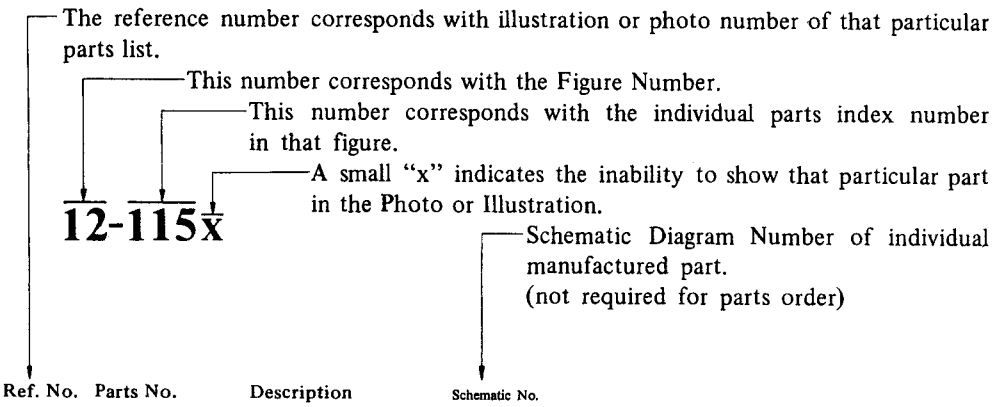

Ref. No.	Parts No.	Description	Schematic No.
		FLYWHEEL BLOCK #13	
12-115x	800425	Flywheel Block Assy. Comp.	RDG #13
12-116	244506	Flywheel Only	RD 233
12-117x	244754	Felt, Flywheel	RD 275
12-118	251324	Main Metal Case	RD 236
12-119	253080	Main Metal	RD 237

4. The symbol numbers shown on the P.C. Board list can be matched with the Composite Views of components of the Schematic Diagram or Service Manual.
5. The indications of Resistors and Capacitors in the photos of P.C. Board are being eliminated.
6. The shape of the parts and parts name, etc. can be confirmed by comparing them with the parts shown on the Electrical Parts Table of P.C. Board.
7. Both the kind of part and installation position can be determined by the Parts Number. To determine where a parts number is listed, utilize Parts Index at end of Parts List.
   It is necessary first of all to find the Parts Number. This can be accomplished by using the Reference Number listed at right of parts number in the Parts Index. (meaning of ref. no. outlined in Item 3 above).
8. Utilize separate "Price List for Parts" to determine unit price. The most simple method of finding parts Price is to utilize the reference number.

CAUTION:

1. When placing an order for parts, be sure to list the parts no. model no., and description. There are instances in which if any of this information is omitted, parts cannot be shipped or the wrong parts will be delivered.
2. Please be careful not to make a mistake in the parts no. If the parts no. is in error, a part different from the one ordered may be delivered.
3. Because parts number and parts unit supply in the Preliminary Service Manual (Basic Parts List) may be partially changed, please use this parts list for all future reference.

WARNING: ⚠ INDICATES SAFETY CRITICAL COMPONENTS. FOR CONTINUED SAFETY, REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURER'S RECOMEMNDED PARTS.


AVERTISSEMENT: ⚠ IL INDIQU LES COMPOSANTS CRITIQUES DE SURETE. POUR MAINTENIR LE DEGRE DE SECURITE DE L'APPAREIL NE REMPLACER LES COMPOSANTS DONT LE FONCTIONNEMENT EST CRITIQUE POUR LA SECURITE QUE PAR DES PIECES RECOMMANDEES PAR LE FABRICANT.

AC INLET SYSTEM

This model is equipped with an AC INLET SYSTEM. Please refer to the AC INLET SYSTEM CHART below for the specific type. By the AC INLET SYSTEM, AC (mains) cord can be connected to and disconnected from the model because the model is provided with socket exclusively for AC (mains) cord on its main body.
Please note, however, that certain models are not equipped with this system and has a built-in AC (mains) cord as before.

AC INLET SYSTEM CHART


CLASS I

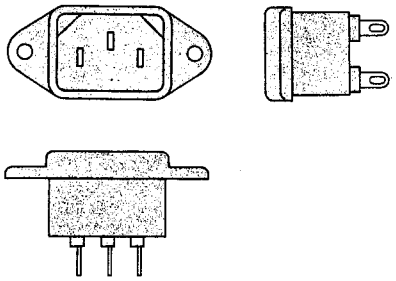


Picture 1
AC INLET to be installed on machines


CLASS II


▣ This mark indicating double insulation will be attached to machine's rear panel

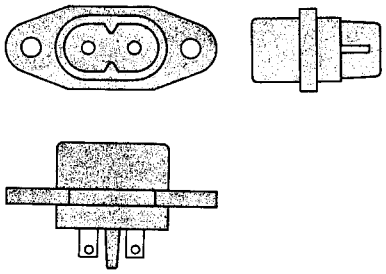


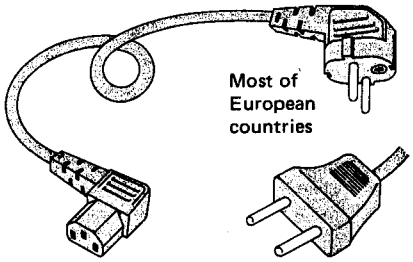

Picture 2
AC (mains) cord

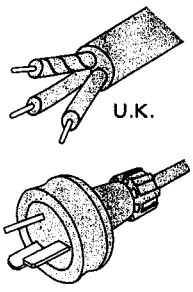

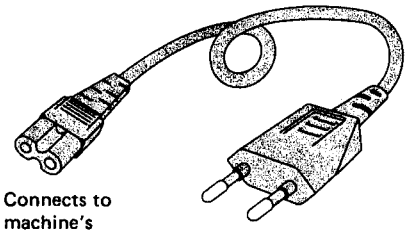

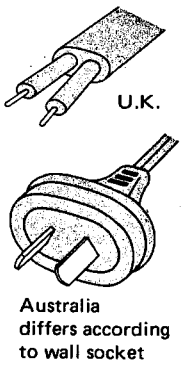

Parts List for AC (mains) Cord Set

Standard		Description	Type of AC Inlet	Parts No.
Class I	CEE	Cord Set CEE (3 cores)	3P	EW302993
	UK	Cord Set UK (3 cores)	3P	EW302994
	SAA	Cord Set SAA (3 cores)	3P	EW302996
	U/T	Cord Set U/T (3 cores)	3P	EW302646
Class II	CEE	Cord Set CEE (2 cores)	2P	EW638144
	UK	Cord Set UK (2 cores)	2P	EW302995
	SAA	Cord Set SAA (2 cores)	2P	EW302991
	U/T	Cord Set U/T (2 cores)	2P	EW302899

1. HEAD BLOCK

Ref. No.	Parts No.	Description
1-1	ZG540584	ANGLE ADJUST SPRING (G)
1-2	HPH1004A010A	HEAD P4-251

2. ROLLER (L), (R) BLOCK

Ref. No.	Parts No.	Description
2-1	BZT1008A190B	ROLLER (L) BLK GX-635D-BL
2-2	BZT1008A220B	ROLLER (R) BLK GX-635D-BL
2-3	MZ315375	DAMPER GEAR BASE
2-4	MZ315374	DAMPER GEAR
2-5	MS315376	DAMPER SHAFT
2-6	ZS419670	PAN30X12STL CMT
2-7	MZ315373	ARM GEAR
2-8	MI315558	TENSION WHEEL (BL)

3. POWER SUPPLY BLOCK

Ref. No.	Parts No.	Description
3-1	EC314688	⚠ C CE V FZ 103P 125AC
3-2	EC327382	⚠ C MP V 472M 250AC
3-3	ES306430	⚠ SW SLIDE J-S4013#01 01-2
3-4	ET308947	TR 2SC2336B Q, R
3-5	EF562691	⚠ FUSE TLC A 250V 2.50A
3-6	EF310455	⚠ FUSE TLC A 250V 1.25A
3-7	EF300592	⚠ FUSE EAWK T 250V 0.63A
3-8	EF300584	⚠ FUSE EAK T 250V 1A
3-9	EF300591	⚠ FUSE EAWK T 250V 0.50A
3-10	EF300584	⚠ FUSE EAK T 250V 1A
3-11	EF300591	⚠ FUSE EAWK T 250V 0.50A

4. ASSEMBLY BLOCK

Ref. No.	Parts No.	Description
4-1	MC305642	COUNTER MP-499
4-2	MC305652	COUNTER MP-499 (BL)
4-3	ED318988	D LED SR505D RED
4-4	ED249377	D LED GL-3AR1 RED

5. SYSCON P.C BOARD (TH-1015) BLOCK

Ref. No.	Parts No.	Description
5-IC2,3	EI304165	IC MB400M
5-IC4	EI305238	IC MB417M
5-IC5	EI304166	IC MB418M
5-TR2	ET200505	TR 2SC2603 E, F
5-TR4to8	ET200505	TR 2SC2603 E, F
5-TR11	ET200505	TR 2SC2603 E, F
5-TR14,15	ET200505	TR 2SC2603 E, F
5-TR23	ET200505	TR 2SC2603 E, F
5-TR26to33	ET200505	TR 2SC2603 E, F
5-D1	ED330319	D SILICON DBA10B 100/1.0A
5-D3	ED330319	D SILICON DBA10B 100/1.0A
5-D5	ED539976	D ZENER H WZ-130
5-D7,8	ED200468	D SILICON V DS448 VB3
5-D9	ED326168	D SILICON 1D4B1 200/1.5A
5-D15	ED301911	D SILICON H DS448
5-D16	ED200468	D SILICON V DS448 VB3
5-D18	ED301911	D SILICON H DS448
5-D19to22	ED200468	D SILICON V DS448 VB3
5-D24	ED301911	D SILICON H DS448
5-D26,27	ED200468	D SILICON V DS448 VB3
5-D29to32	ED200468	D SILICON V DS448 VB3
5-D35	ED301911	D SILICON H DS448
5-D41	ED200468	D SILICON V DS448 VB3
5-D43	ED200468	D SILICON V DS448 VB3
5-D47,48	ED200468	D SILICON V DS448 VB3
5-D50	ED326168	D SILICON 1D4B1 200/1.5A
5-D53	ED200468	D SILICON V DS448 VB3
5-D57	ED200468	D SILICON V DS448 VB3
5-D58	ED308952	D GERMA V 1K34A-LR F07
5-D60	ED200468	D SILICON V DS448 VB3
5-RL1to4	EP300132	RELAY POWER MY4-02-US-L 4TR 24V
5-R28	ER330680	⚠ R CB H FS RDS 1/4W 331J
5-R29	ER330677	⚠ R CB H FS RDS 1/4W 181J
5-R111	ER315356	R CT P 20W 551K
5-FR1	ER561216	⚠ R FUSE FRN50 200MA 1/4W 101K
5-C1	EC316231	C EC V CUT SM 222M 35.0DC
5-C4	EC316188	C EC V CUT SM 102 25.0DC
5-C5	EC316186	C EC V CUT SM 222M 16.0DC
5-C7	EC326588	C EC V CUT SM 102M 10DC
5-C39,40	EC313534	C EC V F05 NP 04D 100M 16.0DC
5-C48	EC301912	C EC V SNP NM 471 160DC
5-C49	EC321297	C EC V CUT H 470M 100DC
5-C101to124	EC201390	C MMY V MEU R10M 150AC
5-C130,131	EC316194	C MMY V CUT CF921 474K 250DC
5-C132	EC321088	C MMY V CF921 473K 400DC
5-CR1to12	ER310373	SPARK QUENCHER NSK115 104C+121R 125AC

6. PRE AMP P.C BOARD (TH-5001A) BLOCK

Ref. No.	Parts No.	Description
6-1	BAT1008A150C	PRE AMP PC BLK GX-636 (U)
6-2	BAT1008A150D	PRE AMP PC BLK GX-636 (E)
6-TR11	ET201313	TR FET 2SK163 K
6-TR13to15	ET308980	TR 2SC1815 GR
6-TR17to23	ET308980	TR 2SC1815 GR
6-D3	ED200468	D SILICON V DS448 VB3
6-D5to8	ED200468	D SILICON V DS448 VB3
6-VR1,2	EV520806	R S-FIX H V8K4-1 3P 103
6-VR3,4	EV464220	R S-FIX H V8K4-1 3P 503
6-VR5	EV478686	R S-FIX H V8K4-1 3P 102
6-VR7	EV464218	R S-FIX H V8K4-1 3P 303
6-C30	EC310440	C STY V F05 CQF09 471J 50DC

7. REC LED P.C BOARD (TH-5001B) BLOCK

Ref. No.	Parts No.	Description
7-D1,2	ED318988	D LED SR505D RED

8. FINAL ASSEMBLY BLOCK

Ref. No.	Parts No.	Description
8-1	BZT1011A050A	HEAD COVER BLK GX-636
8-2	BZT1011A050B	HEAD COVER BLK GX-636-BL
8-3	SC305096	HEAD COVER BASE (B)
8-4	SC305097	HEAD COVER BASE (B)-BL
8-5	ML308810	HEAD COVER HOLDER (A)
8-6	ML308811	HEAD COVER HOLDER (B)
8-7	ZS379350	PAN30X06STL CMT
8-8	BDT1011A040A	MECHA PANEL BLK GX-636
8-9	BDT1011A040B	MECHA PANEL BLK GX-636-BL
8-10	SE315931	REEL TABLE ESCATCHEON (2-C)
8-11	SE315577	REEL TABLE ESUTCHEON (2-D)
8-12	ZW575730	N SPEED 30
8-13	SE305035A	COUNTER ESCUTCHEON
8-14	SE305035B	COUNTER ESCUTCHEON (BL)
8-15	BDB601307	AMP PANEL PART
8-16	BDB601308	AMP PANEL (BL) PART
8-17	SBB601311	OPERATE BUTTON (F) PART
8-18	SBB314002	OPERATE BUTTON (A-BL) PART
8-19	SBB601313	OPERATE BUTTON (G) PART
8-20	SBB314004	OPERATE BUTTON (B-BL) PART
8-21	SBB601314	OPERATE BUTTON (H) PART
8-22	SBB314005	OPERATE BUTTON (C-BL) PART
8-23	SBB601315	OPERATE BUTTON (I) PART
8-24	SBB314006	OPERATE BUTTON (D-BL) PART
8-25	SBB601316	OPERATE BUTTON (J) PART
8-26	SBB314003	OPERATE BUTTON (E-BL) PART
8-27	TC329303	MASK (B)
8-28	SZ315826	MEMORY RING
8-29	SZ315827	MEMORY RING (BL)
8-30	TC305023	MEMORY RING HOLDER
8-31	EM315919	METER VU KL-293C-6 0.250MA
8-32	EM315603	METER VU KL-293C-5 0.250MA
8-33	TC310497	MASK (B)
8-34	SP304928A	BOTTOM COVER
8-35	SP304928B	BOTTOM COVER (BL)
8-36	SAB301411	SQUARE FOOT PART GX-215D
8-37	ZS413234	SCREW, PAN 4 × 12
8-38	SP304933A	UPPER COVER
8-39	SP304933B	UPPER COVER (BL)
8-40	ZS331181	BT BID30 × 08STL NI3
8-41	ZS331182	BT BID30 × 08STL BNI
8-42	ZS325495	T2BR30 × 06STL CMT
8-43	SP308805	SIDE PLATE
8-44	SP315587	SIDE PLATE (BL)
8-45	SP305022	SIDE PLATE (B)
8-46	ZS318423	SCREW (B), W/SPOT FACING WASHER
8-47	ZS613901	PANEL SCREW
8-48	ZS306435	PANEL SCREW (C)
8-49	ZW308796	PANEL WASHER
8-50	ZW315571	PANEL WASHER (BL)
8-51	SK315822	DOUBLE KNOB (UPPER)
8-52	SK315823	DOUBLE KNOB (UPPER-BL)
8-53	SK315824	DOUBLE KNOB (LOWER)
8-54	SK315825	DOUBLE KNOB (LOWER-BL)
8-55	SK305024A	KNOB (D)
8-56	SK305024B	KNOB (D):BL
8-57	SK305025A	KNOB (C)
8-58	SK305025B	KNOB (C)-BL
8-59	SK305026A	KNOB (A)
8-60	SK305026B	KNOB (A)-BL
8-61	SK305027A	KNOB (B)
8-62	SK305027B	KNOB (B)-BL
8-63	SKB601364	PINCH ROLLER CAP (D) PART
8-64	SKB601365	PINCH ROLLER CAP (E) PART
8-65	SP305098B	BACK BOARD GX-636 (U)
8-66	SP305098J	BACK BOARD GX-636 (U)-BL
8-67	SP305098A	BACK BOARD GX-636 (J)
8-68	SP305098H	BACK BOARD GX-636 (J)-BL
8-69	SP305098D	BACK BOARD GX-636 (C, A)
8-70	SP305098L	BACK BOARD GX-636 (C, A)-BL
8-71	SP305098C	BACK BOARD GX-636 (E, B, S)
8-72	SP305098K	BACK BOARD GX-636 (E, B, S)-BL
8-73	ZS297641	T2BID30 × 08STL CMT PW100
8-74	ZW305013	RV POP32
8-75	SB200915A	BUTTON
8-76	SB200915B	BUTTON (BL)
8-77	SB315828	BUTTON (B)
8-78	SB315829	BUTTON (B-BL)
8-79	EW315767	⚠ AC CORD 2 CORES KP-419C/KS-15 E
8-80	EW322400	⚠ AC CORD 2 CORES GTBS-2F/KS-15 B
8-81	EW322401	⚠ AC CORD 2 CORES KP-560/S-15 S

When ordering parts, please quote Parts Number, Description and Model Number.


INDEX


Parts No.	Ref. No. & Symbol No.	Parts No.	Ref. No. & Symbol No.	Parts No.	Ref. No. & Symbol No.	Parts No.	Ref. No. & Symbol No.
BAT1008A150C	6-1	ED301911	5-D35	EV478686	6-VR5	SK305025A	8-57
BAT1008A150D	6-2	ED308952	5-D58	EV520806	6-VR1,2	SK305025B	8-58
BDB601307	8-15	ED318988	4-3	EW315767	8-79	SK305026A	8-59
BDB601308	8-16	ED318988	7-D1,2	EW322400	8-80	SK305026B	8-60
BDT1011A040A	8-8	ED326168	5-D9	EW322401	8-81	SK305027A	8-61
BDT1011A040B	8-9	ED326168	5-D50	HPH1004A010A	1-2	SK305027B	8-62
BZT1008A190B	2-1	ED330319	5-D1	MC305642	4-1	SK315822	8-51
BZT1008A220B	2-2	ED330319	5-D3	MC305652	4-2	SK315823	8-52
BZT1011A050A	8-1	ED539976	5-D5	MI315558	2-8	SK315824	8-53
BZT1011A050B	8-2	EF300584	3-8	ML308810	8-5	SK315825	8-54
EC201390	5-C101to124	EF300584	3-10	ML308811	8-6	SP304928A	8-34
EC301912	5-C48	EF300591	3-11	MS315376	2-5	SP304928B	8-35
EC310440	6-C30	EF300591	3-9	MZ315373	2-7	SP304933A	8-38
EC313534	5-C39,40	EF300592	3-7	MZ315374	2-4	SP304933B	8-39
EC314688	3-1	EF310455	3-6	MZ315375	2-3	SP305022	8-45
EC316186	5-C5	EF562691	3-5	SAB301411	8-36	SP305098A	8-67
EC316188	5-C4	EI304165	5-IC2,3	SBB314002	8-18	SP305098B	8-65
EC316194	5-C130,131	EI304166	5-IC5	SBB314003	8-26	SP305098C	8-71
EC316231	5-C1	EI305238	5-IC4	SBB314004	8-20	SP305098D	8-69
EC321088	5-C132	EM315603	8-32	SBB314005	8-22	SP305098H	8-68
EC321297	5-C49	EM315919	8-31	SBB314006	8-24	SP305098J	8-66
EC326588	5-C7	EP300132	5-RL1to4	SBB601311	8-17	SP305098K	8-72
EC327382	3-2	ER310373	5-CR1to12	SBB601313	8-19	SP305098L	8-70
ED200468	5-D53	ER315356	5-R111	SBB601314	8-21	SP308805	8-43
ED200468	5-D43	ER330677	5-R29	SBB601315	8-23	SP315587	8-44
ED200468	5-D7,8	ER330680	5-R28	SBB601316	8-25	SZ315826	8-28
ED200468	5-D16	ER561216	5-FR1	SB200915A	8-75	SZ315827	8-29
ED200468	5-D19to22	ES306430	3-3	SB200915B	8-76	TC305023	8-30
ED200468	5-D29to32	ET200505	5-TR2	SB315828	8-77	TC310497	8-33
ED200468	5-D41	ET200505	5-TR26to33	SB315829	8-78	TC329303	8-27
ED200468	5-D47,48	ET200505	5-TR14,15	SC305096	8-3	ZG540584	1-1
ED200468	5-D60	ET200505	5-TR4to8	SC305097	8-4	ZS297641	8-73
ED200468	5-D26,27	ET200505	5-TR23	SE305035A	8-13	ZS306435	8-48
ED200468	5-D57	ET200505	5-TR11	SE305035B	8-14	ZS318423	8-46
ED200468	6-D5to8	ET201313	6-TR11	SE315577	8-11	ZS325495	8-42
ED200468	6-D3	ET308947	3-4	SE315931	8-10	ZS331181	8-40
ED249377	4-4	ET308980	6-TR13to15	SKB601364	8-63	ZS331182	8-41
ED301911	5-D18	ET308980	6-TR17to23	SKB601365	8-64	ZS379350	8-7
ED301911	5-D15	EV464218	6-VR7	SK305024A	8-55	ZS413234	8-37
ED301911	5-D24	EV464220	6-VR3,4	SK305024B	8-56	ZS419670	2-6
						ZS613901	8-47
						ZW305013	8-74
						ZW308796	8-49
						ZW315571	8-50
						ZW575730	8-12

SECTION 3

SCHEMATIC DIAGRAM

1. GX-636 NO. 2-1 1620654A SCHEMATIC DIAGRAM
2. GX-636 NO. 2-2 1620655A SCHEMATIC DIAGRAM

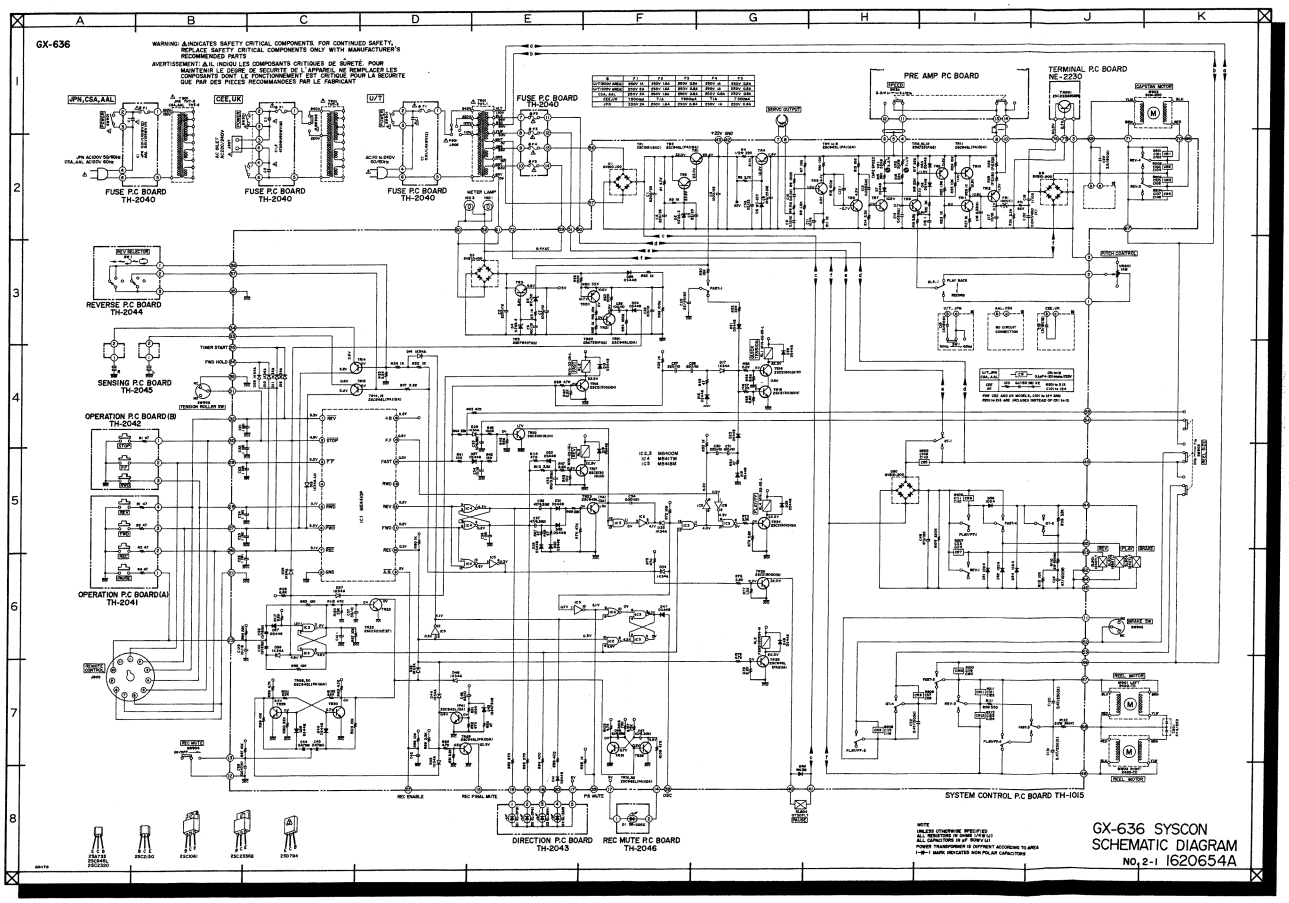
GX-636
WARNING: △INDICATES SAFETY CRITICAL COMPONENTS. FOR CONTINUED SAFETY, REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURER'S RECOMMENDED PARTS
AVERTISSEMENT: △IL INDIQU LES COMPOSANTS CRITIQUES DE SÛRETÉ. POUR ASSURER LA SÛRETÉ DE L'APPAREIL NE REMPLACER LES COMPOSANTS DONT LA FONCTIONNEMENT EST CRITIQUE POUR LA SECURITE QUE PAR DES PIECES RECOMMANDÉES PAR LE FABRICANT
JPN, CSA, AAL
CEE, UK
U/T
FUSE P.C BOARD TH-2040
FUSE P.C BOARD TH-2040
FUSE P.C BOARD TH-2040
FUSE P.C BOARD TH-2040
PRE AMP P.C BOARD
TERMINAL P.C BOARD NE-2230
REVERSE P.C BOARD TH-2044
SENSING P.C BOARD TH-2045
OPERATION P.C BOARD(B) TH-2042
OPERATION P.C BOARD(A) TH-2041
SYSTEM CONTROL P.C BOARD TH-1015
DIRECTION P.C BOARD TH-2043
REC MUTE P.C BOARD TH-2046
GX-636 SYSCON SCHEMATIC DIAGRAM
NO. 2-1 1620654A

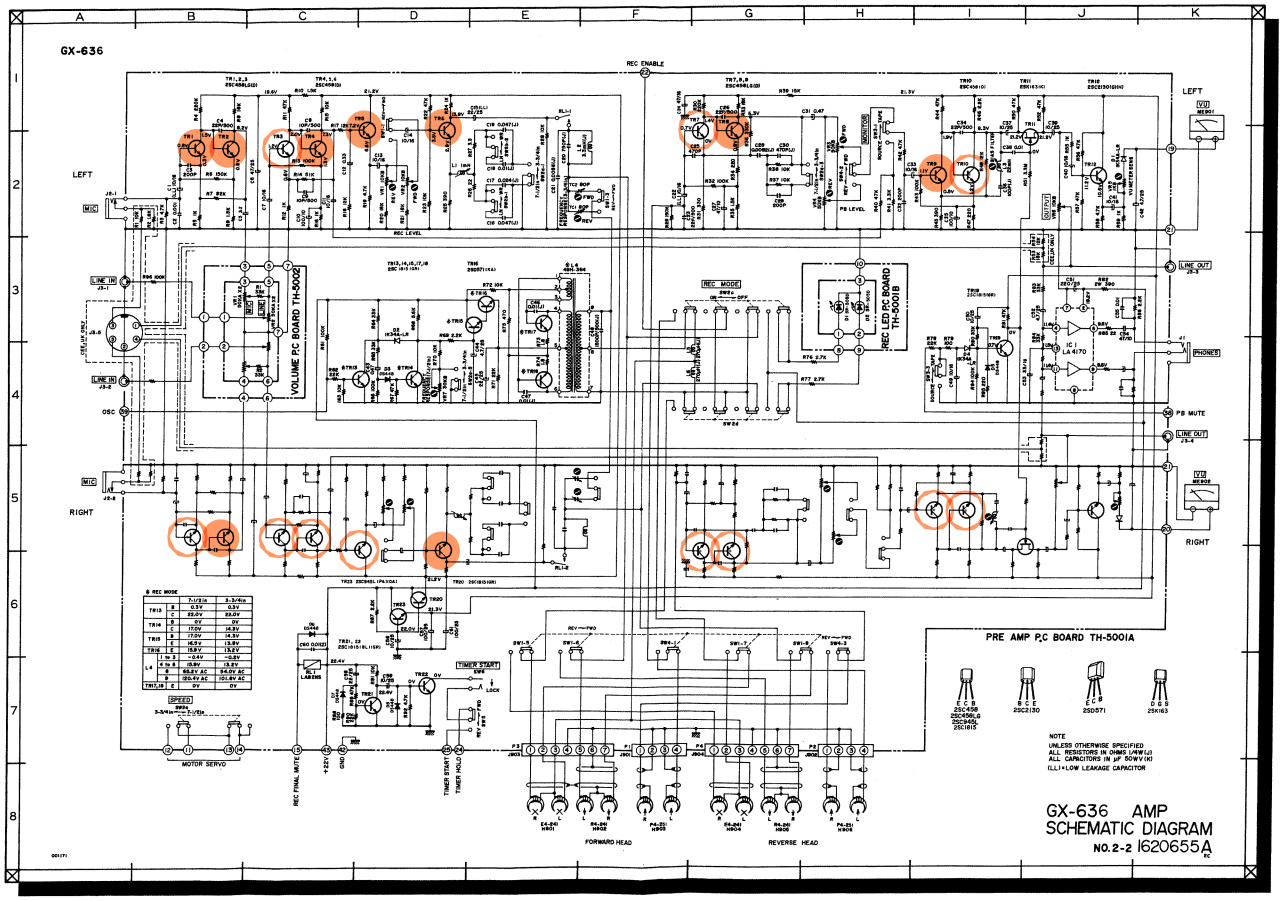

AKAI-00107 / DRUCK 4

AKAI ELECTRIC CO., LTD.
12-14, 2-Chome, Higashi-Kojiya, Ohta-Ku, Tokyo, Japan
TEL: Tokyo (742) 5111 CABLE: HIFIAKAI TOKYO TELEX: J26261