IV. Blank front face mounting

The DSP new front face is smaller than the old one (to have the same size than the other Audio boards). So you can fix a blank face close the left side of the DSP board to hide the hole.

To install the blank face you need : 1 flat screwdriver, 1 posidrive screwdriver and

1 x blank front face



2 x M3 black posidrive screw , length : 10 mm



2 x M3 hexagonal nut

Mounting :

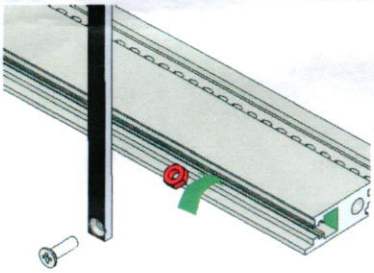

First , put flat down nuts in the 2 Horizontal rails of the Audio Rack (a flat screw driver will help you)

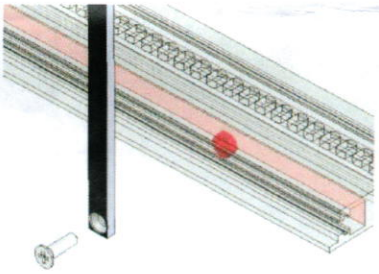

Then , stand the nut up verticaly at the bottom of the rail , with flat screw driver.

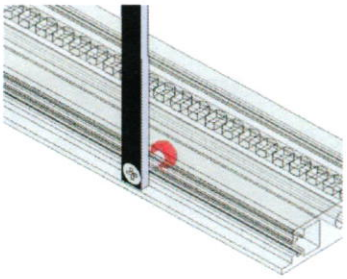

So, screw the front face on nuts while blocking nuts with flat screw driver.