
dbx®
by HARMAN

160SL
Stereo Compressor/Limiter

Owner's Manual

IMPORTANT SAFETY INFORMATION

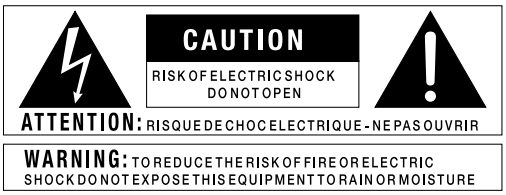

The symbols shown above are internationally accepted symbols that warn of potential hazards with electrical products. The lightning flash with arrowpoint in an equilateral triangle means that there are dangerous voltages present within the unit. The exclamation point in an equilateral triangle indicates that it is necessary for the user to refer to the owner's manual.

These symbols warn that there are no user serviceable parts inside the unit. Do not open the unit. Do not attempt to service the unit yourself. Refer all servicing to qualified personnel. Opening the chassis for any reason will void the manufacturer's warranty. Do not get the unit wet. If liquid is spilled on the unit, shut it off immediately and take it to a dealer for service. Disconnect the unit during storms to prevent damage.

SAFETY INSTRUCTIONS

NOTICE FOR CUSTOMERS IF YOUR UNIT IS EQUIPPED WITH A POWER CORD.

WARNING: THIS APPLIANCE SHALL BE CONNECTED TO A MAINS SOCKET OUTLET WITH A PROTECTIVE EARTHING CONNECTION.

The cores in the mains lead are coloured in accordance with the following code:

GREEN and YELLOW - Earth BLUE - Neutral BROWN - Live

As colours of the cores in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

- The core which is coloured green and yellow must be connected to the terminal in the plug marked with the letter E, or with the earth symbol, or coloured green, or green and yellow.
- The core which is coloured blue must be connected to the terminal marked N or coloured black.
- The core which is coloured brown must be connected to the terminal marked L or coloured red.

This equipment may require the use of a different line cord, attachment plug, or both, depending on the available power source at installation. If the attachment plug needs to be changed, refer servicing to qualified service personnel who should refer to the table below. The green/yellow wire shall be connected directly to the units chassis.

CONDUCTOR		WIRE COLOR	
		Normal	Alt
L	LIVE	BROWN	BLACK
N	NEUTRAL	BLUE	WHITE
E	EARTH GND	GREEN/ YEL	GREEN

WARNING: If the ground is defeated, certain fault conditions in the unit or in the system to which it is connected can result in full line voltage between chassis and earth ground. Severe injury or death can then result if the chassis and earth ground are touched simultaneously.

WARNING FOR YOUR PROTECTION READ THE FOLLOWING:

KEEP THESE INSTRUCTIONS

HEED ALL WARNINGS

FOLLOW ALL INSTRUCTIONS

THE APPARATUS SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING LIQUID AND NO OBJECT FILLED WITHI LIQUID, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.

CLEAN ONLY WITH A DRY CLOTH.

DO NOT BLOCK ANY OF THE VENTILATION OPENINGS. INSTALL IN ACCORDANCE WITH THE MANUFACTURER'S INSTRUCTIONS.

DO NOT INSTALL NEAR ANY HEAT SOURCES SUCH AS RADIATORS, HEAT REGISTERS, STOVES, OR OTHER APPARATUS (INCLUDING AMPLIFIERS) THAT PRODUCE HEAT.

ONLY USE ATTACHMENTS/ACCESSORIES SPECIFIED BY THE MANUFACTURER.

UNPLUG THIS APPARATUS DURING LIGHTNING STORMS OR WHEN UNUSED FOR LONG PERIODS OF TIME.

Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or third prong are provided for your safety. If the provided plug does not fit your outlet, consult an electrician for replacement of the obsolete outlet.

Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

Use only with the cart stand, tripod bracket, or table specified by the manufacture, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

POWER ON/OFF SWITCH: If the equipment has a Power switch, the Power switch used in this piece of equipment DOES NOT break the connection from the mains.

MAINS DISCONNECT: The plug shall remain readily operable. For rack-mount or installation where plug is not accessible, an all-pole mains switch with a contact separation of at least 3 mm in each pole shall be incorporated into the electrical installation of the rack or building.

FOR UNITS EQUIPPED WITH EXTERNALLY ACCESSIBLE FUSE RECEPTACLE: Replace fuse with same type and rating only.

MULTIPLE-INPUT VOLTAGE: This equipment may require the use of a different line cord, attachment plug, or both, depending on the available power source at installation. Connect this equipment only to the power source indicated on the equipment rear panel. To reduce the risk of fire or electric shock, refer servicing to qualified service personnel or equivalent.

If connected to 240V supply, a suitable CSA/UL certified power cord shall be used for this supply.

IMPORTANT SAFETY INFORMATION

ELECTROMAGNETIC COMPATIBILITY

This unit conforms to the Product Specifications noted on the **Declaration of Conformity**. Operation is subject to the following two conditions:

- this device may not cause harmful interference, and
- this device must accept any interference received, including interference that may cause undesired operation.

Operation of this unit within significant electromagnetic fields should be avoided.

- use only shielded interconnecting cables.

U.K. MAINS PLUG WARNING

A molded mains plug that has been cut off from the cord is unsafe. Discard the mains plug at a suitable disposal facility.

NEVER UNDER ANY CIRCUMSTANCES SHOULD YOU INSERT A DAMAGED OR CUT MAINS PLUG INTO A 13 AMP POWER SOCKET.

Do not use the mains plug without the fuse cover in place. Replacement fuse covers can be obtained from your local retailer. Replacement fuses are 13 amps and MUST be ASTA approved to BS1362.



If you want to dispose this product, do not mix it with general household waste. There is a separate collection system for used electronic products in accordance with legislation that requires proper treatment, recovery and recycling.

Private household in the 25 member states of the EU, in Switzerland and Norway may return their used electronic products free of charge to designated collection facilities or to a retailer (if you purchase a similar new one).

For Countries not mentioned above, please contact your local authorities for a correct method of disposal.

By doing so you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health.

DECLARATION OF CONFORMITY

Manufacturer's Name: dbx Professional Products
Manufacturer's Address: 8760 S. Sandy Parkway
Sandy, Utah 84070, USA

declares that the product:

Product name: dbx 160SL
Note: Product name may be suffixed by the letters-EU.

Product option: None

conforms to the following Product Specifications:

Safety: IEC 60065 -01+Amd 1

EMC: EN 55022:2006 (N/A; Analog Product)
IEC61000-4-2
IEC61000-4-3
IEC61000-4-4
IEC61000-4-5
IEC61000-4-6
IEC61000-4-8
IEC61000-4-11

Supplementary Information:

The product herewith complies with the requirements of the:
Low Voltage Directive 2006/95/EC
EMC Directive 2004/108/EC.
RoHS Directive 2002/95/EC
WEEE Directive 2002/96/EC

With regard to Directive 2005/32/EC and EC Regulation 1275/2008 of 17 December 2008, this product is designed, produced, and classified as Professional Audio Equipment and thus is exempt from this Directive.

Roger Johnsen
Director, Engineering
Signal Processing
8760 S. Sandy Parkway
Sandy, Utah 84070, USA
Date: August 16, 2011

European Contact: Your local dbx Sales and Service Office or

Harman Signal Processing
8760 South Sandy Parkway
Sandy, Utah 84070 USA
Ph: (801) 566-8800
Fax: (801) 568-7583

Manual contents 160SL

Introduction 1

Why you need compression 1

The difference between compressors and limiters 2

The compression and limiting effects 3

Limiters and PeakStopPlus™ 4

Connection To Your System 7

Operating Controls 8

Front Panel Description 8

Rear Panel Description 13

Operating Notes 17

OverEasy® and Hard Knee 16

Using the Compression Control 16

Using the Stereo Couple Switch 17

Using the Auto Switch 17

Setting the Attack and Release Controls 17

Using PeakStop®/PeakStopPlus™ 18

Specific Applications 19

Sidechain Applications 20

Technical Support/Factory Service 23

Warranty 23

Block Diagram 24

Specifications 25

Why You Need A Compressor


A remarkable feature of the human ear is that it can detect an extremely wide range of amplitude changes - from the slightest whisper to a deafening clap of thunder. If one tries to record or reproduce this wide spectrum of sound with the help of amplifiers, cassette recorders, records, or even digital recorders, one is immediately restricted by the physical limitations of electronic and acoustic sound reproduction technology.

The useable dynamic range of electronic audio equipment is limited as much at low levels as at high levels. The thermal noise of electrons in the components results in an audible noise floor and thus represents the bottom limit of the transmission range. In such equipment, this is referred to as “hysteresis”. Referring to any magnetic media, hysteresis is the amount of electrical impulse it takes for the tape recorder to begin to rearrange the magnetic particles of the tape (record signal onto the tape). The more energy it takes, the more noise is introduced onto the tape, making the noise floor more audible. The amount of hysteresis varies depending on the brand of tape used, and depends on the materials used in the manufacture of the tape.

When magnetic tape was first used to record audio, hysteresis was a real concern, because it made the useable dynamic range of magnetic tape very narrow. In the early 1960s, it was discovered that if a tape recorder supplied an extremely high frequency tone to its record head (much higher than the magnetic tape could possibly record), the tape’s hysteresis was greatly reduced, or, it took less electrical activity to start to rearrange the magnetic particles of the tape. The result: a much lower noise floor level and a wider dynamic range. This tone is called a “bias tone” or “bias frequency.” Today tape manufacturers produce tape optimized for specific bias frequencies, and studio technicians align tape recorders’ heads according to these specifications, in order to take full advantage of the tape recorders’ electronics, and the magnetic tape’s ability to record sound on its magnetic particles.

The upper limit of useable dynamic range is determined by the levels of the internal operating voltages; if they are exceeded, audible signal distortion is the result. Although in theory the useable dynamic range sits between these two limits, it is considerably smaller in practice, since a certain reserve must be maintained to avoid distortion of the audio signal if sudden noise peaks occur. Technically speaking, we refer to this reserve as headroom--usually about 10-20dB. A reduction of the operating level would allow for greater headroom, i.e. the risk of signal distortion due to high level peaks would be reduced. However at the same time, the basic signal to noise ratio of the program material would be increased significantly. It is therefore useful to keep the operating level as high as possible without risking signal distortion in order to achieve optimum transmission quality. It is possible to further improve the transmission quality by constantly monitoring the program material with the aid of a volume fader, which manually changes the level of the program material. During low passages the gain is increased, and during loud passages the volume is decreased. Of course it is fairly obvious that this kind of manual control is rather restrictive; it is difficult to detect signal peaks and almost impossible to level them out. Manual control is simply not fast enough to be satisfactory.

The need therefore arises for a fast acting automatic gain control system which will constantly monitor the signals and which will always adjust the gain to maximize the signal-to-noise ratio without incurring signal distortion. This device is called a compressor or limiter.

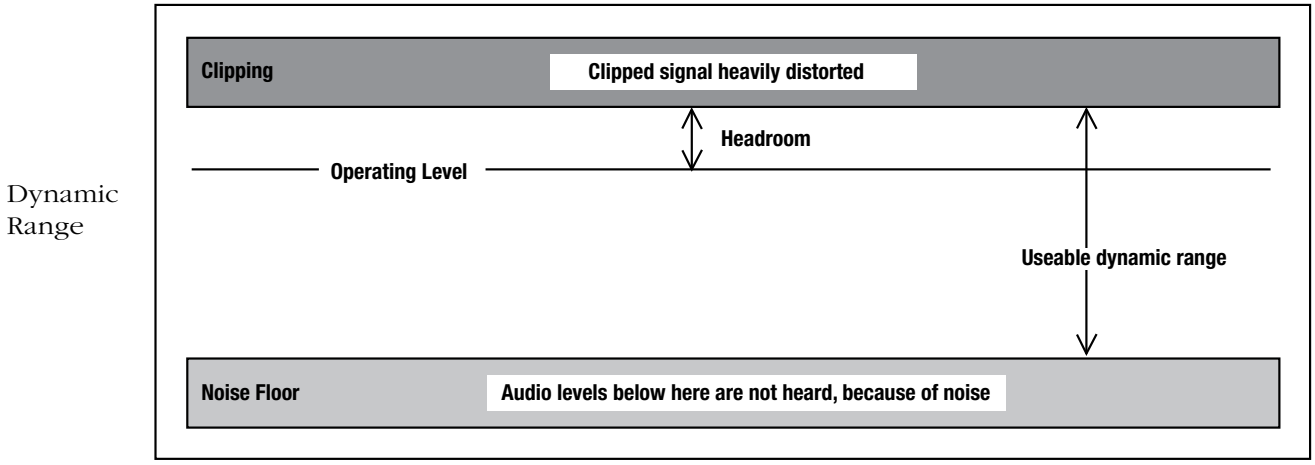

The Difference Between Compressors and Limiters

By measuring the dynamic range of musical instruments in live recording situations, you will experience extreme amplitudes which will often lead to overload in subsequent signal processing equipment. Especially in broadcasting and digital recording, these signal peaks can lead to heavy distortion. To avoid this kind of distortion or, to avoid loudspeakers being damaged by overload, compressors and limiters are used.

The principle function of these devices is automatic gain control, as mentioned in the previous paragraphs, which reduces the amplitude of loud passages and therefore restricts the original signal dynamics within a desired range. This is useful, especially in conjunction with microphone recording techniques, to compensate for level changes which are caused by inconsistent microphone techniques on the part of the player, or to restrict the natural dynamic range of voices or instruments to achieve a more even level.

Although compressors and limiters perform similar tasks, one essential point makes them different:

Limiters abruptly limit the signal above a certain level, while compressors control the signal “gently” over a wide range. A limiter continuously monitors the signal and intervenes as soon as an adjustable level is exceeded. This level is called the “threshold”. Any signal exceeding this threshold level will be immediately held below the set threshold level.

A compressor also monitors the program material continuously and also has a set threshold level. However, in contrast to the limiter, signals exceeding the threshold are not reduced abruptly, but gradually. Above the threshold the signal is reduced in level relative to the amount the signal exceeds this point.

Generally, threshold levels for compressors are set below the normal operating level to allow for the upper dynamics to be musically compressed. For limiters, the threshold point is set above the normal operating level in order to provide peak signal limiting and thus protects subsequent equipment.

The Compression and Limiting Effects

On a compressor, there is a relationship between the input signal, and the threshold level, input, output, and ratio settings. Look at an input signal applied to the inputs of two compressors. The threshold level of the second unit is set ten decibels higher than the threshold of the first unit. Since a compressor only affects signals that exceed the threshold level, it is obvious that the signal of the first compressor will be compressed more, because it exceeds the threshold level more than the level of the second unit, because the second compressor's threshold level is set higher.

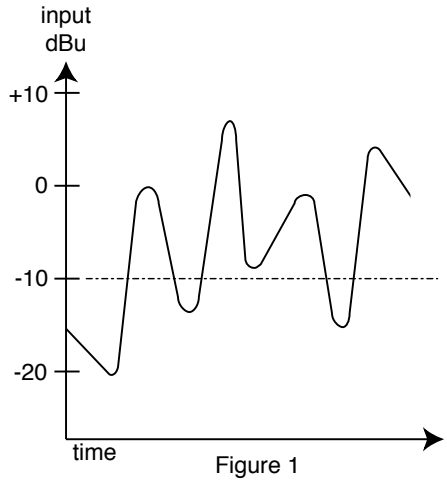


Figure 1

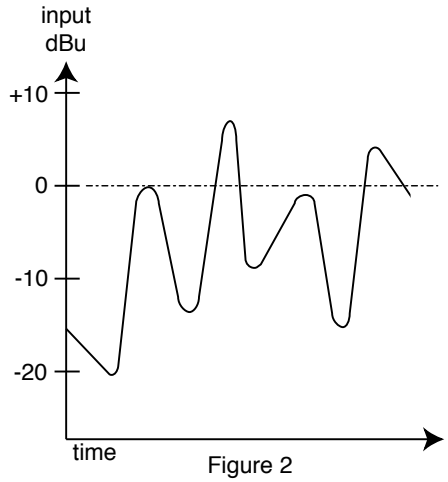


Figure 2

Input of compressors at different threshold settings.

---------- = threshold

The difference between compression and limiting is shown visually below. In the first diagram below, compression "squashes" the signal. Its peaks are lowered, but the overall level of the signal is raised due to applied make-up gain (Output Gain). In the second diagram, the peaks are lowered to the threshold level, but the rest of the signal has not been altered.

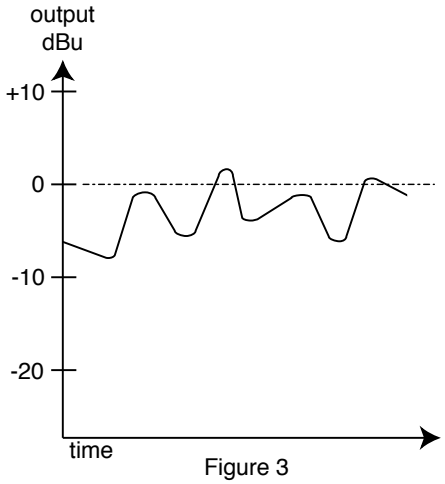


Figure 3

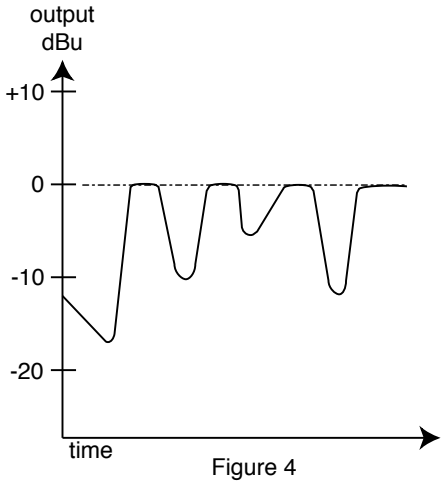


Figure 4

Difference in output of compressors and limiters.

---------- = threshold

Obviously, there is a large difference between these two signals in relation to their dynamic range and the processed signal. In the third figure, it is shown to have been compressed, and in the fourth figure, it has been limited.

Furthermore, it is interesting to note that by comparing the input and output waveforms for the compressed mode, the quietest sections of the input signal have been effectively raised in level, whereas the loudest sections have been effectively decreased in level. The overall effect is that both ends of the dynamic range have been pushed toward the middle. This squashing effect of compression is important to remember and highlights the major difference between compressing and limiting.

Compressing and limiting differ in one more aspect: the dynamic settings for attack and release times. Attack time is defined as the time taken to for a compressor to respond to program levels which have exceeded the threshold point. Release time is the amount of time a compressor takes to return the program level to its original level, after the last excursion over the threshold point. For compression, a preferably longer attack and release time are generally the best in order to keep the overall output signal within a specified dynamic range. For limiting applications, considerably shorter attack and release times are necessary to control fast transient signals or to increase headroom.

To achieve inaudible compression, it is advisable to work with program dependent attack and release times. The advantage of program dependent compression is most apparent when processing musical material that is varied.

The dbx 160SL Stereo Compressor is suitable for all applications because of its ability to be manually set at both attack and release parameters.

Limiters and PeakStopPlus™

Lower frequencies work best when compressed with slower attack times. When compressing a mix that includes a wide range of frequencies, a compromise is made when setting the attack time. The attack setting would generally suit the lowest frequency components of the material. For general dynamic range control with a compressor, this is of no serious consequence.

However, in a “limiting” situation, where we are restricting the peaks of our signal to a maximum operating level to avoid distortion in subsequent devices, a slow attack time is not acceptable. This would result in very fast high frequency signal transients passing through unaffected by gain reduction. These transients could then cause distortion in the following equipment such as tape recorders and radio transmitters. It is therefore necessary to choose an attack time which is as close to “zero” attack as possible, independent of the frequency.

This makes the limiter necessary, and it’s why we include a peak limiter on almost all of our compression products. The dynamics of the dbx limiters are set to handle these fast transients through a process called PeakStop® and the newer, improved two-stage process called PeakStopPlus®.

The first stage of PeakStopPlus is the Instantaneous Transient Clamp™ which clamps the signal with a soft logarithmic clamp function. This logarithmic function assures that the signal will not exceed the level set by the PeakStopPlus™ LEVEL control by more than 2 dB typically, and that it will not introduce harsh artifacts. The second stage is a unique program limiter featuring Intelligent Predictive Limiting™. Its function is to monitor the input signal and intelligently predict the amount of gain reduction needed to keep the output signal below the ceiling set by the Instantaneous Transient Clamp™. Note, since the PeakStopPlus™ limiter is a fail-safe limiter it must come after the ***OUTPUT GAIN*** control. If the output gain is set too high as compared to the ***PeakStopPlus™ Level*** control, continuous limiting can occur. While PeakStopPlus™ is typically used as a protective function, creative effects can be achieved by intentionally driving the signal into heavy PeakStopPlus™ limiting. Great care has gone into the design of the PeakStopPlus™ limiter to keep it acoustically transparent. Appropriate use of it can protect your gear while keeping the signal free of artifacts.

For best results the Limiter functions of your compressor should be used in conjunction with the Compressor functions.

When we at dbx decided to make a premium compressor that would perform to the industry's highest standards, it became readily obvious that every component and design strategy had to be chosen with high-performance foremost in mind. After the evolutionary process of engineering design and implementation was complete, the result was stunning. Here is a partial list of the features found on the 160SL. You won't hear about most of them anywhere else, but they are critical to the amazing specs, comprehensive functionality, and visionary design of the 160SL Stereo Compressor.

- New dbx V8™ VCA module exhibits a dynamic range of 127dB with extremely low distortion!
- V8™ VCA is encased in a specially-designed zinc-aluminum housing for shielding and thermal characteristics. This allows for peak performance of the VCA in any environment.
- Precision 0.1% and 1% metal film resistors.
- Gold-palladium-nickel board-to-board connectors.
- Jensen® transformers.
- Gold-plated Neutrik® XLR connectors.
- Rare earth magnet relays with gold contacts in a hermetically sealed nitrogen environment.
- Military-grade glass epoxy circuit boards.
- Double-shielded Toroid transformer ensures no self-generated power supply noise enters the audio path.
- High-drive output transformers are capable of driving 1000 feet of Belden 8451 cable to +30dBm.
- Striking blue custom-machined, 1/4" thick front panel.
- Hand-crafted, solid aluminum knobs.
- LEDs mounted in machined, stainless steel housings.
- Custom dbx VU meters with peak indicators.
- Heavy-gauge chassis.
- Switchable OverEasy®/hard knee characteristics enable the 160SL to sound like the traditional 165A as well as the old and still popular 160.
- Program dependent Auto mode, or fully variable attack and release.
- PeakStop/PeakStopPlus™ switchable limiting topologies, the perfect complement to the 160SL feature set.
- Sidechain capabilities, switchable from the front panel.

Connections

The 160SL is connected for operation using the rear panel XLR connectors. Note that the two rear panel input sections have a push-switch which lifts the contact on pin #1 (ground). Keep this switch in the OFF position (pin #1 connected) until all connections are made. Be sure that your input and output cables are wired in the "pin 2-hot" configuration, which is printed on the rear panel of the 160SL. For more information on other types of connections, refer to the section entitled ***Operating Notes***.

When connecting the 160SL, refer to the following steps:

- **Turn OFF all equipment BEFORE making any connections.**

- **Mount the 160SL in a 2U rack space. (Optional)**

  The 160SL requires a two rack-space height and a standard 19 inch rack-space mounted above or below anything that doesn't create excessive heat, since it r ventilation. Ambient temperatures should not exceed 113°F (45°C) when equip is powered.

Caution: *Never remove the cover. There are no user serviceable parts inside.*

- **Make connections via XLR connectors.**


- **Plug in AC power cable and power ON the unit.**

Note*: Check the line voltage printed on the rear panel of the 160SL and verify that it is correct for your area.*

Two Basic Compressor Setups:

A: Channel One shows processing of a group or aux master output. Signal goes to the 160SL input from the output/insert send of the console, and returns to the console via the input/insert return of the same group/ aux on the console.

B: Channel Two shows connections for processing a signal from a single channel. Input of the 160SL is fed by the channel insert output/send, and returns to the console via the insert input/return.

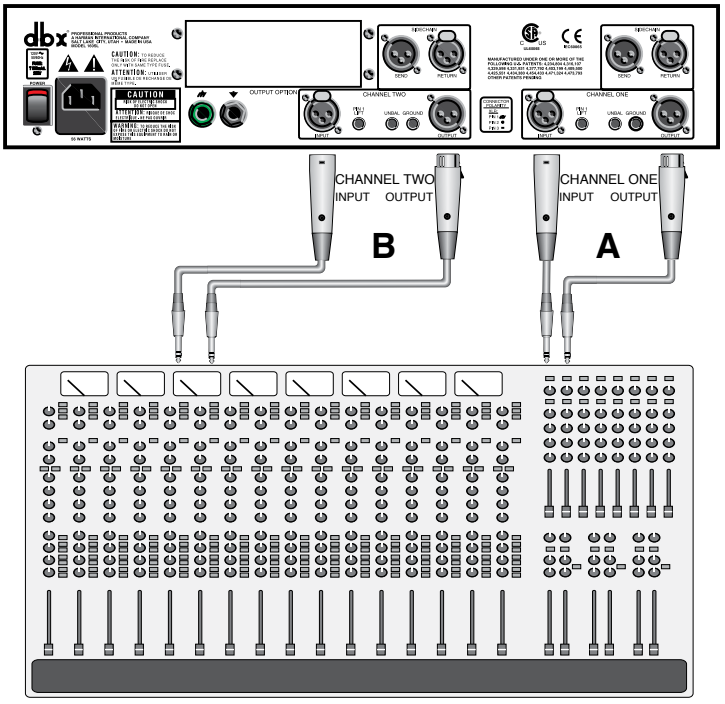



Front Panel Controls

OverEasy® Switch: This switch activates/deactivates the OverEasy® characteristics of the 160SL. When the switch is IN, the 160SL is in OverEasy mode. OverEasy is a process which allows the user to compress a signal more gently than a hard knee compressor through the threshold region. This action produces a much smoother "natural-sounding" compression effect. When the ***OverEasy*** switch is OUT, the regular, hard knee action of the compressor is active. Hard knee operation can produce a much harder (hence the nick-name "hard knee") compression effect as the signal passes over the threshold level. Note that when the ***OverEasy*** switch is IN, the yellow LED above the ***Threshold*** control lights whenever the input signal level is in the OverEasy region of compression. In hard knee mode the signal is either below the threshold and not being compressed, or it is above the threshold and is being compressed, and therefore the yellow LED does not light. See the section entitled ***Operating Notes*** later in this manual for a more in-depth discussion of the differences between OverEasy and hard knee compression.

Threshold Control: This control adjusts the signal amplitude (volume, or level) above which compression occurs. In OverEasy mode the threshold of compression is defined as the approximate middle of the OverEasy region. The markings around the ***Threshold*** control are measured in dBu (where 0dBu = .775V) and range from -40dBu (7.8mV rms) on the low end, to +30dBu (24.5V rms) at the high end of the scale.

Threshold LEDs: These LEDs (above the ***Threshold*** control) indicate the relationship between the input signal and the threshold set by the ***Threshold*** control. The green LED lights when the input signal is *below* the set threshold. The yellow LED lights when the 160SL is set in OverEasy mode via the ***OverEasy*** switch, and the input signal level is *in* the OverEasy threshold range. The red LED lights when the input signal level is *above* the set threshold. (See the section entitled ***Operating Notes*** for a discussion on the differences between OverEasy® and hard knee compression.)

Compression Control: This control adjusts the amount of compression that is applied to the input signal level when it exceeds the set threshold level. The amount of compression is expressed in a ratio formula, where the first number of the ratio indicates the amount of input signal level in dB, and the second number indicates the amount of output signal level, in dB, when the threshold is exceeded. For example, in hard knee mode, the compression ratio of 5:1 means that for every 5dB of signal level that exceeds the set threshold level, the resultant output signal level is 1dB. Therefore if the threshold level is exceeded by 15dB, and the compression ratio is set to a 5:1 ratio, the output signal level will be 3dB. In OverEasy mode, the ratio set by the ***Compression*** control is not reached until the signal has pased through the OverEasy region of compression (the yellow LED turns off and the red LED lights). When the ratio of ∞:1 is selected, the input signal level is "limited" to a 0dB increase in output level, regardless of how far the set threshold level is exceeded. This occurs in both OverEasy® and hard

knee operation. Note that when a compressor is set to a compression ratio of 10:1 or more, it may be considered to be LIMITING the input signal, especially when a fast attack time is selected.

Auto Switch: This switch sets the 160SL for automatic or manual operation. When the ***Auto*** switch is IN (Auto mode), the compressor automatically adjusts its attack rate and release time to suit the program envelope. (This Auto mode sets the compressor for the same attack and release characteristics as dbx Models 160, 161, 162, 163 and 164 compressor/limiters.) When the ***Auto*** switch is OUT (manual mode), the front panel ***Attack*** and ***Release*** rate controls determine the maximum rate of gain change and the behavior of the level detector circuitry.

In Auto mode, the 160SL utilizes the patented dbx RMS level detector with its program-dependent attack/release characteristics to obtain natural-sounding compression or limiting. For special effects and certain signal situations, however, it is often desirable to set fixed attack and release characteristics. Manual mode affords this capability. The Auto mode is recommended for vocals as well as instruments. Because the Auto mode has a program dependent variable attack rate, the compressor may compress or limit some program material smoother than in the manual mode which has a fixed attack characteristic. This is especially true on vocals.

Attack and Release Controls: Attack time is defined as the time taken for a compressor to respond to program levels which have exceeded the threshold point. For the 160SL, this control ranges from 400dB/mS (extremely fast) to 1dB/mS. Release time is the amount of time a compressor takes to return the program level to its original level, after the last excursion over the threshold point. The 160SL's release times range from 4000dB/second (very fast release time), to 10dB/second (slow release time). A very fast attack setting (control maximum counterclockwise) will cause the compressor to act like a peak limiter even though RMS detection circuitry is used. Slower attack settings cause the compressor to act like an RMS or averaging detecting compressor/limiter. To achieve inaudible compression, it is advisable to work with program dependent attack and release times (Auto mode). The advantage of program dependent compression is most apparent when processing musical material that is varied. For compression, longer attack and release times are generally the best in order to keep the overall output signal within a specified dynamic range. For limiting applications, considerably shorter attack and release times are necessary to control fast transient signals or to increase headroom.

Stop Level Control: This control adjusts the maximum peak output level of the 160SL regardless of any other control. The PeakStop limiter comes after the compression and all other circuitry, except the output gain; this provides for an absolute peak limit to be put on the peak excursions at the output via the Instantaneous Transient Clamp™. Since the PeakStopPlus™ limiter is a fail-safe limiter it must come after the ***Output Gain*** control. If the output gain is set too high as compared to the ***PeakStopPlus™ Level*** control, continuous limiting can occur. While PeakStopPlus is typically used as a protective function, creative effects can be achieved by intentionally driving the signal into heavy PeakStopPlus™ limiting. Like the range of the ***Threshold*** control, the scale of the ***Stop Level*** control is measured in dBu. The control ranges from +4dBu, all the way to "OFF" (+30dBu). The top end of the scale is marked "OFF" because its internal setting, +30dBu, is the actual maximum output level of the 160SL, and therefore signal passing through the unit will pass untouched, up to the maximum output level of the 160SL. Because of this, the limiter is effectively rendered "inactive" in the OFF setting.

PeakStopPlus™ Switch and LED: The dynamics of the dbx 160SL are set to handle fast transients through PeakStop® limiting and the newer PeakStopPlus™. PeakStop is the process first introduced on the dbx 165A compressor/limiter, which is still very popular today. PeakStop is made up of an extremely fast-reacting detector, called Instantaneous Transient Clamp. The sound of PeakStop became popular as the 165A permeated the audio industry, and quickly became the standard looked for by many top artists of the day. The latest implementation of this limiter topology is PeakStopPlus, first introduced in 1996 on the dbx 1066. PeakStopPlus is made up of two different parts or stages. The first stage is the Instantaneous Transient Clamp™ which clamps the signal with a soft logarithmic clamp function. This logarithmic function assures that the signal will not exceed the level set by the ***PeakStopPlus™ Level*** control by more than 2 dB typically, and that it will not introduce harsh artifacts. The second stage is a unique program limiter featuring Intelligent Predictive Limiting™. Its function is to monitor the input signal and intelligently predict the amount of gain reduction needed to keep the output signal below the ceiling set by the Instantaneous Transient Clamp™.

Note that since the PeakStopPlus™ limiter is a fail-safe limiter it must come after the ***Output Gain*** control. If the output gain is set too high as compared to the PeakStopPlus™ LEVEL control, continuous limiting can occur. While PeakStopPlus™ is typically used as a protective function, creative effects can be achieved by intentionally driving the signal into heavy PeakStopPlus™ limiting. Great care has gone into the design of the PeakStopPlus™ limiter to keep it acoustically transparent. Appropriate use of it can protect your gear while keeping the signal free of artifacts.

A bi-color LED associated with both the ***Stop Level*** control and the ***PeakStopPlus*** switch indicates when PeakStopPlus is activated. By pushing the ***PeakStopPlus*** switch to the IN position, the LED lights in a green color when the signal level at the limiter circuit is BELOW the stop level set by the ***Stop Level*** control. When the signal level attempts to exceed the level set by the ***Stop Level*** control, the LED lights in a red color.

When the limiter is in PeakStop mode, the LED does not light in a green color, and only lights in a red color when the signal attempts to exceed the set stop level, showing that the signal is being reduced in level by the limiter.

Sidechain Switch and LED: This switch/LED provides access/visual feedback to the sidechain control. When the switch is IN, the LED is lit, and the 160SL is operating in sidechain mode. This means that the compressor is set react to the audio signal presented at the ***Sidechain Return*** connector, rather than to the audio signal presented at the regular audio input of the 160SL. The circuitry of the 160SL was designed in such a way as to make the audio path of the sidechain section very short and clean. The selection of the sidechain function is made via “relay” switching, not allowing the signal to pass through any unnecessary switches. The sidechain functions are convenient in many applications, such as broadcast engineering, where engineers are asked to provide “ducking” functions, as well as de-essing. Frequency-specific and sustain-related compression are also possible with the use of the sidechain functions of the 160SL. See the section entitled ***Operating Notes***.

Bypass Switch and LED: This switch activates a hard-wire relay bypass system, which allows the audio signal to pass through the compressor directly from input to output, even when the 160SL is turned off. That is to say that the XLR Pin 2 at the input connector is directly connected to the XLR Pin 2 at the output connector, and the XLR Pin 3 at the input connector is directly connected to the XLR Pin 3 at the output connector. When the 160SL is in bypass mode the LED directly above the ***Bypass*** switch is lit.

Note: *Bypass mode can be very useful for applications such as* ***A-B*** *comparisons, comparing processed signal with unprocessed signal.*

Output Gain Control: This control adjusts the amount of gain in the 160SL's output amplifier stage. The signal can be attenuated or boosted by a full 20dB relative to a "0" center setting, representing unity gain. This control is independent of the threshold or compression ratio settings. Because 20dB of gain can be added at the 160SL output, it is possible to cause clipping even when the input level is within the specified range. When the compression ratio is set at a low number, extreme clockwise rotation of the ***Output Gain*** control could cause the 160SL output stage to clip audio program peaks. Therefore, for normal operation we suggest setting the ***Output Gain*** control to "0dB" (12 o'clock position) as a starting position. Where the circuit fed by the 160SL has a high input sensitivity, lowering the output gain setting can avoid the need for an attenuation pad in subsequent equipment.

Peak LED: This LED is located to the left of the ***VU Meter***. It is set to light when the signal level at the output level reaches +27dBu. This represents a headroom measurement of approximately 3dB before hard clipping will occur, due to the maximum output level of the 160SL (+30dBu).

VU Meter: The custom designed analog meter is made to serve 3 different functions: first, it measures the amount of input signal presented at the input connector corresponding to its channel. Second, it measures the output signal at the output connector, after all processing has taken place, including output gain. Third, it shows the amount of gain reduction being induced into the input signal, measured after both the compressor settings and limiter settings. Note that the meter, in input and output mode, measures accurately from -30dB to +6dB. There is 17dB between the upper end of the meter, and the setting at which the ***Peak*** LED lights. Be aware that while the occasional "pegging" of the meter will likely not effect the internal dynamics of the 160SL, due to its unheard-of dynamic range (123dB), it is possible that the output signal from the 160SL could cause distortion in subsequent gear, if the output signal stays above the +6dB marking on the meter for an extended period of time. The dynamic range of the 160SL is meant to provide an *extremely* low noise floor at optimum operating level ("0"dB, which is +4dBu), and to provide protection for the occasional excursion above the nominal operating range. It was not meant to provide continuous operation in the 17dB of "no-man's-land" between the upper end of the analog meter and the setting of the ***Peak*** LED.

In Gain Reduction mode, the meter moves to indicate the amount of gain reduction, in dB, the compressor/limiter settings are imposing on the output signal. When first activated, the meter's needle will jump to the "0" mark of the lower scale on the meter (only if there is no gain reduction happening), indicating "zero gain reduction", and will move to the left indicating the amount of gain reduction in the signal level, up to a maximum of 30dB of gain reduction.

Note that the gain reduction scale is linear in dB as opposed to the standard VU markings on the upper scale on which input and output levels are monitored. This allows for easy visual indication of gain reduction, as it can be read in a fraction of a second, with only a fleeting glance from the engineer.


Input Meter Selection Switch and LED: Selecting this mode via the switch allows the user to monitor the incoming signal on the logarithmic (upper) scale of the VU meter. When in input mode, the LED above the switch will light in a green color, indicating that input mode is selected.

Output Meter Selection Switch and LED: Selecting this mode via the switch allows the user to monitor the outgoing signal on the logarithmic (upper) scale of the VU meter. When in output mode, the LED above the switch will light in a yellow color, indicating that output mode is selected.

Gain Reduction Meter Selection Switch and LED: Selecting this mode via the switch allows the user to monitor the amount of gain reduction in dB, applied to the signal on the linear (lower) scale of the VU meter. When in gain reduction mode, the LED above the switch will light in a red color, indicating that gain reduction mode is selected. In gain reduction mode the meter displays the amount of gain reduction resulting from the settings of both the compressor and PeakStopPlus limiter.

Stereo Couple Switch and LED: This switch activates the stereo linkage between channels one and two. When the switch is in the IN position, the two channels of the 160SL are linked together, and the oversized yellow LED directly above the switch lights to indicate the selection. In stereo mode channel one (the left side of the 160SL) is the “master” and channel two (the right side of the 160SL) is the “slave”. When the two channels are linked together, the controls on the master side control the settings of both channels of the 160SL. The controls on the slave side are disabled, although the meter moves synchronous to the meter on the master side. In stereo mode, the 160SL uses a process called True RMS Power Summing™. True RMS Power Summing combines the RMS signal energy (power) of the audio signal of both channels and allows the 160SL to operate based on the signal information from both the right an left channels of audio signal.

Power LED: The ***Power*** LED is located directly above the ***Stereo Couple*** switch, at the center point of the 160SL. It is a custom designed oversized, blue LED, in keeping with the dbx Blue Series concept of innovative engineering, and revolutionary design. It remains lit while the 160SL is connected to an appropriate power supply, and the ***Power*** switch is in the ON position.

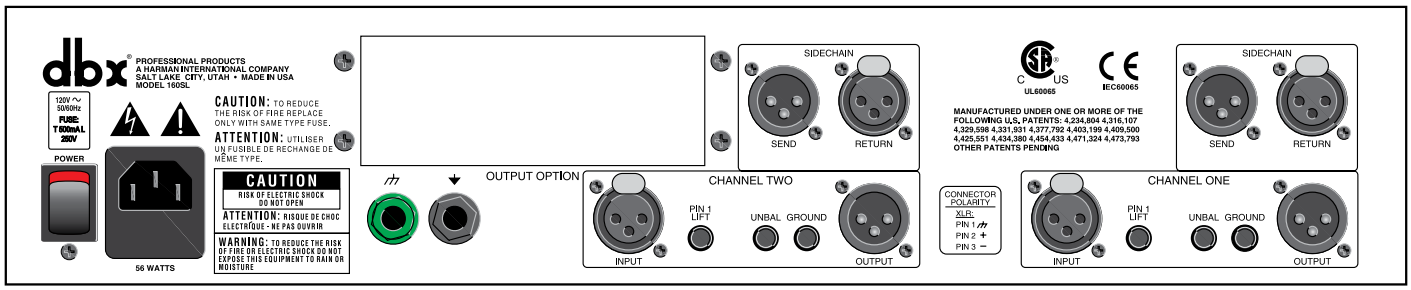


Rear Panel


Audio Input and Output Connectors: Each audio input connector on the rear panel of the 160SL is a gold-plated Neutrik® XLR female connector. The no-compromise approach to the 160SL required that we use gold-plated connectors, due to their high conductivity and low EMI/RFI susceptibility. The connectors are default wired in balanced mode (pin 2 hot, AES convention), although supplying an unbalanced signal presents no difficulty to the 160SL.

Pin 1 Lift Switch: Associated with each ***input*** connector is a switch labeled ***Pin 1 Lift***. Depressing this switch lifts pin 1 of the input XLR from all ground references. This may be necessary to break a troublesome ground loop which is causing hum in the system.

Unbalance Switch: The ***Unbalance*** switch is associated only with the ***Output*** connectors of the 160SL. When it is in the IN position, the output of the 160SL is switched from balanced to unbalanced. (See wiring diagram below.) In the OUT position, the 160SL's outputs are balanced in the "pin 2 hot" configuration. Note that when the output is unbalanced via the switch, there is a 6dB drop in output signal level. If you do not wish to experience the 6dB drop in output signal level, you may short pin 3 of the output cable to ground, rather than using the ***Unbalance*** switch.

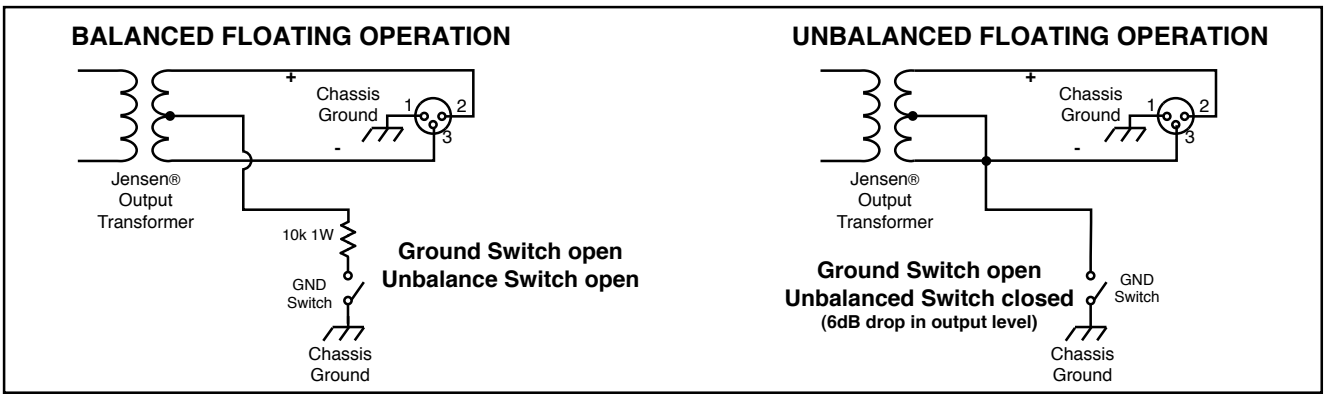

Ground Switch: The ***Ground*** switch, when in the IN position, references the center tap of the output transformer to the chassis ground. This ensures that the signal from the 160SL, regardless of previous grounding systems earlier in the audio chain, can deliver a chassis-grounded output signal free of hum and interference to the output connector. The combination of the three switches associated with the audio input/output connectors ensures that the 160SL is versatile enough to interface with any equipment and can deliver clean audio to the output, free of hum and interference. (See the following diagram for details of the ***Ground*** switch operation.)

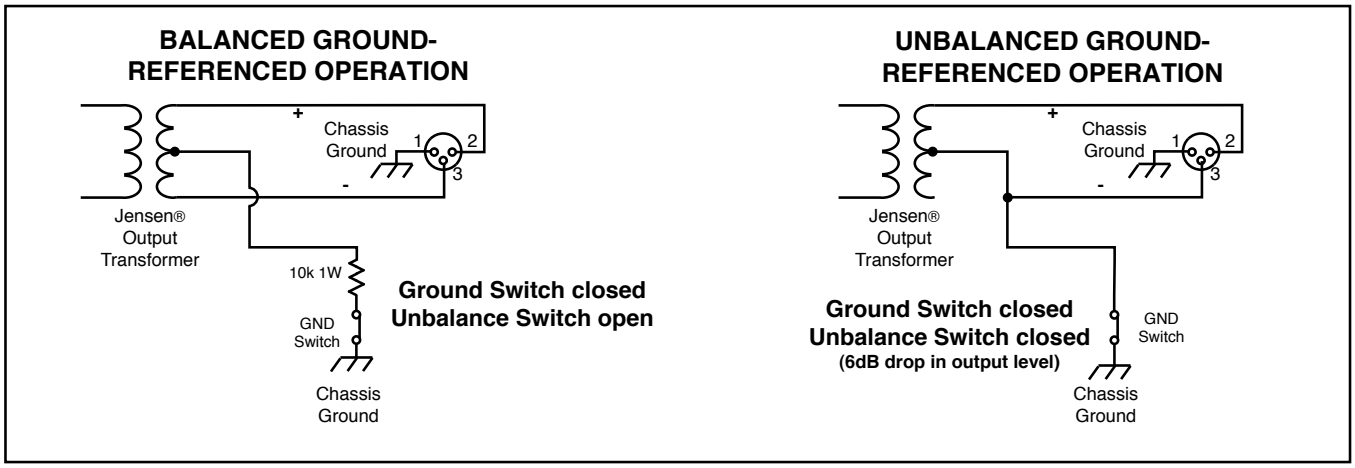

Sidechain Send and Return Connectors: When the front panel ***Sidechain*** switch is in the IN position, the 160SL RMS level detection is "listening" to the audio signal presented at the ***Sidechain Return*** connector. Each channel features separate sidechain capabilities using the same quality gold-plated Neutrik® XLR connectors as for the main audio input and output connections. Each channel's sidechain connections are marked "send" for the output, and "return" for the input. Note that input and output cables may be permanently installed here without disrupting the 160SL's normal signal path; sidechain functions are only active and available while the unit is in sidechain mode, selected from the front panel. This feature makes the 160SL ideal for permanent mounting in a large rack system, with connections going to a patch bay. When selected, the sidechain ***Send*** connector (XLR male) "sends" the audio signal from the 160SL to the outboard gear in the sidechain loop. (ie: dbx 20 or 30 Series Graphic Equalizer or digital delay. See the section marked ***Operating Notes*** for more information on the sidechain functions of the 160SL.) The audio is processed, and sent from the output of that device back to the 160SL via the ***Return*** connector (XLR female). As the signal is brought back into the 160SL, its RMS level is used to trigger the compression/limiting. This allows the 160SL to be very versatile in many applications, from ducking to frequency-specific compression or limiting. Two separate cables are used in favor of the conventional single "Y" cable, because they supply balanced signal to the sidechain gear, and are much more convenient to locate and use in a fast-paced studio or live sound environment.

The signal path of the sidechain function is "relay-selected" in order to keep the signal path short and clean.


Chassis Ground Binding Post: The green ***Chassis Ground*** binding post is supplied to give the user another method to provide comprehensive grounding options for any installation. It is easy to think of the binding post as being synonymous with the ground pin on any AC power cord. (The ground pin on an AC cord should NEVER be removed, shorted out, or "lifted"). The post allows the chassis ground to be connected to another ground source if desired (ie: a chassis ground system provided by another piece of gear). Wire may be connected to the binding post by securing the stripped end of the wire through the hole in the post, located under the hardened plastic nut-top of the post. Access to the hole is gained by unscrewing the top part of the post far enough to reveal the hole underneath. Insert the stripped end of the wire and tighten the top (nut) part of the binding post to secure the connection.

Signal Ground Binding Post: The black ***Signal Ground*** binding post is located next to the ***Chassis Ground*** binding post, and works in much the same way, providing comprehensive grounding options for any installation. Some systems are built on a "star" grounding principle, where all the signal grounds are brought directly to one central point and grounded to earth at the same location. The ***Signal Ground*** binding post allows easy access to the signal ground system of the 160SL without having to remove the cover of the 160SL and locate a good place to take the signal ground out of the box.


Note: *Typically the shorting link between chassis ground and signal ground should be left installed, unless another grounding scheme is used.*

AC Power Switch: Located beside the ***AC Power*** connector, the ***AC Power*** switch turns the 160SL ON and OFF. When the switch is in the DOWN position, revealing the red portion of the switch, the AC power to the 160SL is ON. When the switch is in the UP position, no AC power is being supplied to the 160SL, regardless of other power connections.

AC Power Connector: The AC Power connector is a standard IEC 320 power inlet receptacle, for use with any IEC-type power cord (included with the 160SL). Connect this cable to any 50Hz or 60Hz AC power source of the correct line voltage for your area. Make sure this voltage is also correct for the voltage marked on the back of the 160SL. Always make AC power connections with the AC power switch in the OFF position (see above). The 160SL consumes a maximum power of 50 watts.

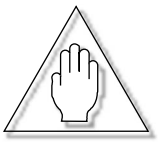


Warning: *Be sure to verify both your actual line voltage and the voltage for which your 160SL is wired, as indicated on the back panel of the unit. Connection to an inappropriate power source may result in extensive damage which is not covered by the warranty.*

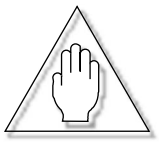


Output Option Panel: This panel is removed when an output option card is installed in your 160SL. Connecting a custom designed digital output module in the option port provides full 24-bit AES/EBU and S/PDIF output capabilities for the 160SL. The digital outputs of the 160SL operate simultaneously with the analog outputs, providing the possibility of running to three different devices at the same time: analog, AES/EBU, and S/PDIF. For more information on the digital output option, contact dbx customer service. Be sure to fill out your warranty registration card, provided in this manual, and return it to dbx as soon as possible. This will enable us to notify you of other output options that will become available in the future.

OverEasy® And Hard Knee

In a typical hard-knee compressor, the threshold control sets a reference level above which input signals will be attenuated in the manner defined by the setting of the ***Compression*** ratio control. Input signals which fall below this level will pass through unprocessed. With OverEasy compression, signals begin to gradually activate the 160SL's gain change circuitry as they approach the threshold reference level and they do not get fully processed in the manner defined by the ***Compression*** control until they have passed somewhat above the threshold reference level. There is no distinct point at which processing begins, and the threshold setting corresponds to a point on the input/output transfer curve midway between the onset of processing and that point at which the transfer curve corresponds to the setting of the ***Compression*** control. The following diagrams also show how the 160SL's threshold indicator LEDs correlate with the compression curves.

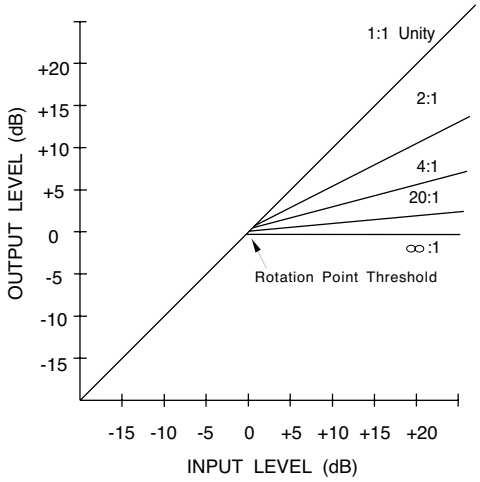

Hard knee compression threshold point.

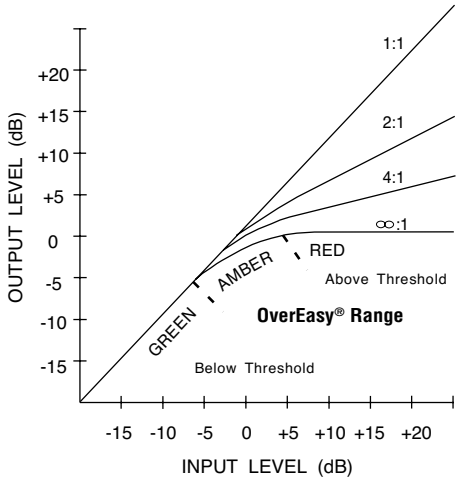


OverEasy® compression threshold and LEDs.

Using The Compression Control

When an input signal is above the threshold reference level, the setting of this control determines the number of decibels by which the input signal must change in level to produce a 1dB increase in the signal level at the output of the 160SL. A setting of 2:1 indicates an input:output ratio wherein a 2dB increase in input signal (above threshold) will produce a 1dB increase in output signal. A setting of ∞:1 indicates that an infinite increase in input level would be required to raise the output level by 1dB. In other words, the output level is *constant* when the input signal is above threshold. The 160SL's ***Compression*** control covers the entire range from 1:1 to ∞:1. The control curve of the compression potentiometer has been designed to provide total operator control, with scale expansion at the subtle lower ratios for easy, repeatable settings.

Behavior of the 160SL's ***Compression*** *control*

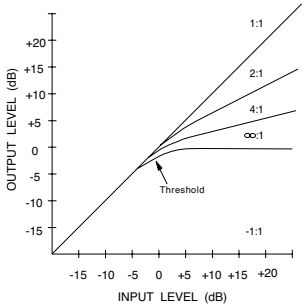

Using The Stereo Couple Switch

Two channels of program material do not necessarily constitute a stereo program. A stereo program is one where the two channels are recorded and/or mixed to create the illusion of a single unified panorama of sound. The stability of the psychoacoustic image of each sound source within the stereo spectrum depends upon its ability to maintain a specific phase and amplitude relationship from the left to the right channel.

If two independent compressors are used to process the stereo program, a loud sound occurring in one channel will cause a gain reduction only in that channel. This gain reduction would cause the perceived image of any sound spread between the two channels to move toward the side which had not been compressed, because the spread signal would be momentarily softer in the compressed channel. This can be avoided by linking the two compressors in such a way that both channels receive the same amount of compression. On the 160SL, this is accomplished by means of the ***Stereo Couple*** switch. When activated, the 160SL permits the RMS detectors of both channels to "talk" to one another. The SLAVE channel (right, channel 2) then sends its signal to the MASTER channel (left, channel 1), where the RMS power of the MASTER and SLAVE signals are combined to generate a control voltage. This control voltage is then used to compress both the MASTER and SLAVE channels equally. This dbx process is called True RMS Power Summing™

When compressing a stereo program with a 160SL, only the MASTER channel controls need to be adjusted. The ***Threshold*** LEDs, ***Auto*** LED, and ***PeakStop (Plus)*** LED will not light on the "slave" channel when the 160SL is stereo linked. The ***Bypass*** switch and LED, ***Sidechain*** switch and LED, and the ***Meter Mode*** switches and LEDs remain channel-independent and function normally in linked mode.

Using The Auto Switch


The ***Auto*** switch sets the 160SL for automatic or manual operation. When the ***Auto*** switch is IN (Auto mode), the LED indicator lights and the 160SL automatically adjusts its attack rate and release time to suit the program envelope. (This Auto mode sets the 160SL for the same attack and release characteristics as dbx Models 160, 161, 162, 163, and 164 compressor/limiters, the LED indicator above it turns OFF, and the front panel ***Attack*** and ***Release*** rate controls determine the maximum rate of gain change and the behavior of the level detector circuitry.

Setting The Attack And Release Controls


The 160SL offers a choice of automatic or user-adjustable attack and release characteristics. In Auto mode, the 160SL utilizes the patented dbx RMS level detector with its program-dependent attack/release characteristics to obtain natural-sounding compression or limiting. For special effects and certain signal situations, however, it is often desirable to set fixed attack and release characteristics. Manual mode affords this capability. The Auto mode is recommended for vocals as well as instruments. Because the Auto mode has a variable attack rate, the 160SL may compress or limit some program material smoother than in the manual mode which has a fixed attack characteristic. This is especially true on vocals.

There is no *right* way to set the ***Attack*** and ***Release*** controls. Generally, you want a slow enough attack to avoid *pumping* or *breathing* sounds caused when background sounds are audibly modulated by the dominant signal energy, yet the release must be fast enough to avoid suppression of the desired signal after a sudden transient or a loud note has decayed. Depending on the desired effect, you might want a very slow attack so that percussive or transient sounds are not restricted, but average volume levels are held within the desired range.

A very fast attack setting (control maximum counterclockwise) will cause the 160SL to act like a peak limiter even though RMS detection circuitry is used. Slower attack settings cause the 160SL to act like an RMS or averaging detecting compressor/limiter.

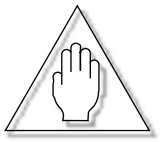

Note: ***Attack*** *and* ***Release*** *controls operate together and in conjunction with the* ***Compression*** *ratio control. Changing one control may necessitate changing another setting.*

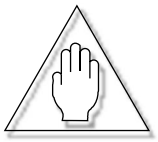

Using PeakStop®/PeakStopPlus™

The ***Stop Level*** control sets the maximum peak output level of the 160SL irrespective of any other control. *PeakStop* consists of a sophisticated voltage-controlled Instantaneous Transient Clamp™ that produces a minimum of audible distortion. It rounds the corners of a peak rather than cutting it off sharply, as "clippers" do. By making a signal's leading and trailing edges curved instead of sharp corners, it reduces the amount of higher odd-order, offensive-sounding harmonics that conventional clipping causes.

The level at which PeakStop is activated is adjustable from +4dBu to +30dBu. Note that small signal excursions above the set value of PeakStop are possible, to allow the rounding to occur. Therefore, for applications where you must not exceed a given ceiling, set the ***PeakStop*** control 1 to 2dB below the ceiling.

To disable the PeakStop function, set the control to OFF (>+30dBu) (i.e: above the maximum output level of the 160SL).

PeakStopPlus is made up of two seperate parts. The first stage is the Instantaneous Transient Clamp™ which clamps the signal with a soft logarithmic clamp function. This logarithmic function assures that the signal will not exceed the level set by the ***PeakStopPlus™ Level*** control by more than 2 dB typically, and that it will not introduce harsh artifacts.

The second stage is a unique program limiter featuring Intelligent Predictive Limiting™. Its function is to monitor the input signal and intelligently predict the amount of gain reduction needed to keep the output signal below the ceiling set by the Instantaneous Transient Clamp™. Note, since the PeakStopPlus™ limiter is a fail-safe limiter it must come after the ***Output gain*** control. If the output gain is set too high as compared to the ***PeakStopPlus™ Level*** control, continuous limiting can occur.

While PeakStopPlus™ is typically used as a protective function, creative effects can be achieved by intentionally driving the signal into heavy PeakStopPlus™ limiting. Great care has gone into the design of the PeakStopPlus™ limiter to keep it acoustically transparent. Appropriate use of it can protect your gear while keeping the signal free of artifacts.

Specific Applications

Smoothing out variations in microphone levels

When the distance between a vocalist and a mic changes, variations in signal level occur. To smooth out these variations, start with the 160SL adjusted for a low compression ratio (e.g., 4:1) and adjust the ***Threshold*** control for optimum results, then increase the compression ratio if necessary. Due to the gentle OverEasy characteristic available on the 160SL allows even fairly high ratios to be handled transparently.

Smoothing out variations in musical instrument levels

To achieve a smoother electric bass sound, compress the instrument's output with a ratio of about 4:1 (the ***Compression*** ratio control set at approximately 12:00). Compression lessens the loudness variations among the strings and increases the sustain. Other instruments, such as horns, vary in loudness depending on the note being played, and benefit similarly.

> ***Note***: *When compressing a stereo program with the 160SL, the factors affecting a compression curve and the actual compression ratio and threshold settings are like those previously covered with reference to single channels of program material. However, it will generally be found that large amounts of compression are more audible in a mixed stereo program than they might be on the separate tracks that were mixed to create the program.*

Raising a signal out of a mix

Since reducing dynamic range increases the average signal level by a small amount, a single track can be raised out of a mix by boosting its level slightly and applying compression. It is also possible to separate certain vocals or instruments from a mono program already mixed by frequency-weighted compression.

Using your EQ to reduce feedback in live settings

You can use your 160SL and an EQ (a dbx 20 or 30 Series graphic EQ) to reduce feedback in clubs or halls by placing the 160SL at ∞:1, hard knee, and a low threshold. Increase the output gain until the first feedback *ring* occurs. The 160SL will catch it, and hold it as a constant tone so you can adjust your EQ to minimize it. Continue to increase your console gain and set your EQ until the first 3 or 4 *ring* frequencies have been compensated for.

Preventing tape saturation

With programs of widely varying levels, compression can prevent recording levels from saturating tape tracks.

Speaker protection


Compressors are frequently used to prevent excessive program levels from damaging drivers in a sound-reinforcement system. Limiting also benefits intelligibility by allowing low-level input signals to be reproduced through the system at higher volume. In a musical performance, this provides additional intimacy as the vocalist's whispers are heard clearly at every seat in the house. The OverEasy curve available with the 160SL permits a very high amount of compression (10:1 or greater) to be used in many situations. Vocalists and musicians don't get the sense of being held back, but high average levels can be maintained without speaker damage due to excessive heat buildup.

In circumstances where the 160SL is expected to cause no change in gain unless an emergency arises (wildly excessive levels), some operators set the compression ratio to ∞:1, the threshold to the highest permissible level, and set the stop level so that it just barely cuts in when the 160SL is driven into heavy gain reduction. As a general rule, the compressors should be as close to the amplifiers as possible in the signal chain. If the 160SL is placed before the EQ, for example, a potentially damaging boost in EQ won't be seen by the 160SL and the speakers may be damaged. For maximum sound pressure levels, large sound reinforcement systems frequently use a separate compressor on each output of the electronic crossover(s). For a stereo sound-reinforcement system, stereo linked 160Ss should be used on each band (low-low, mid-mid, etc.).

The 160SL as a line amplifier
To use the 160SL as a line amplifier, adjust the ***Compression*** control to fully counterclockwise (1:1 position), the ***Threshold*** control to full clockwise position (+10) and the ***Output Gain*** control to whatever setting is required for the application. Remember that, as with any amplifier, excessive gain may lead to output clipping of high level signals. To add compression, adjust the ***Compression*** control and the ***Threshold*** control to the desired settings.

Sidechain Applications

Frequency-weighted compression
It is possible to separate certain vocals and instruments from a mix by frequency-weighted compression. With an equalizer inserted in the sidechain circuit (but not in the audio path), the equalization settings do not shift the timbre or frequency response of the audio signal. They merely alter the threshold response of the compressor on a *frequency-weighted* basis (see diagram below).

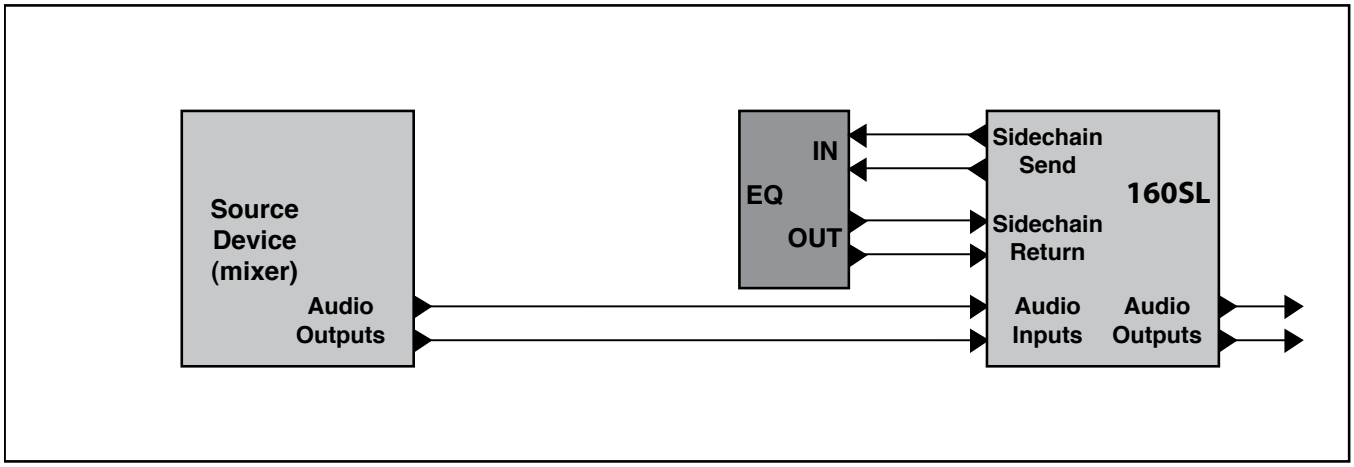

Frequency-weighted compression

With this arrangement, raising certain frequencies on the equalizer causes them to be suppressed in the audio signal. A relatively high threshold setting can allow normal sounds to be unaffected while solo and very loud sounds are held back. (Of course, when compression does occur, the level of the entire program is affected.) Depending on the threshold setting, lower level fundamentals or harmonics will not cause compression, and the program is not subject to the phase shift normally caused by program equalization.

During the recording of cymbals and tom-toms, a compressor with an equalizer in the sidechain path can help prevent tape saturation. The equalizer can be adjusted for boost with a peak of about 5kHz, causing the cymbal to be compressed on a very loud crash, stopping tape saturation at high frequencies, where there is less headroom. However, gentle tapping of a drumstick or brushing of the cymbal will not be held back. Assuming the tom-tom is a lower frequency instrument and can be better tolerated by the tape, it has less need for compression. The equalization in the sidechain circuit means that the compressor is not triggered as readily by a loud tom-tom beat as by an equally loud cymbal crash.
The converse of the above EQ technique may be used: dipping the equalizer bands causes any sound with dominant energy in the affected register to pull the level up because the 160SL will detect a need for less compression.

De-Essing
To apply de-essing to vocals (i.e., a reduction of sibilance), use a parametric equalizer in the sidechain circuit and set it for high frequency boost in the specific frequency range where the vocal *hiss* or lisp occurs (generally in the 4-6kHz region). This pre-emphasizes the already *hissy* vocal input to the detector. Used in conjunction with a moderate to high threshold and compression ratio, this arrangement greatly attenuates the *essing* without affecting the basic sound quality or balance of the voice. While it is true that all frequencies are lowered in level when the compressor is triggered, generally the *sss* sound occurs alone, before or after the dominant tone in the voice.


Increasing sustain
To increase the sustain of a musical instrument (e.g., a guitar or bass), use an equalizer in the sidechain circuit and boost the EQ in the dominant frequency range of the instrument, along with a fairly low threshold and a moderate compression ratio.

Using a Filter in the Level Detector Circuit
The results of inserting a filter in the level detector circuit are basically the same as obtained with an equalizer, as previously described. Those frequencies passed by the filter are subject to compression (or at least they are subject to considerably more compression than those frequencies outside the passband). Because a passive filter can have insertion loss, it may be necessary to lower the 160SL's threshold setting to maintain a given amount of gain reduction within the filter passband; this can be determined by monitoring the 160SL's threshold indicator LEDs.

Multi-way speaker systems
If a single compressor is to be used with a multi-way speaker system (i.e., before the crossover, after EQ), the system operator is faced with the problem of keeping levels below the point of destruction of the most sensitive part of the system. If, for example, mid-range drivers are frequently damaged, the whole system must be operated at a lower sound-pressure level, or additional mid-range drivers must be added. By inserting an equalizer in the detector path of the 160SL, it can be made more sensitive to frequencies in the range handled by the sensitive drivers. The system can then be run at higher levels and will only be dropped back when damaging, mid-range signals are present.

Pre-emphasis for broadcast applications
By inserting a pre-emphasis filter network in the sidechain circuit of a 160SL processing pre-emphasized audio, higher levels can be run within the headroom limitations of the broadcast chain.

Anticipated Compression
By feeding the program directly to the 160SL's sidechain return and sending the audio signal through a delay line before the audio input, the unit can anticipate the need for a gain change. See diagram on the following page. With some experimentation, the effect can be that of zero attack time at a given frequency. Additional signal delays beyond this zero time will then cause the compressor to finish reducing the gain before the leading edge of the loud passage even enters the signal input. This will suppress the program material preceding this loud passage. The 160SL will then begin to release (recover from compression) before the loud passage has ended.

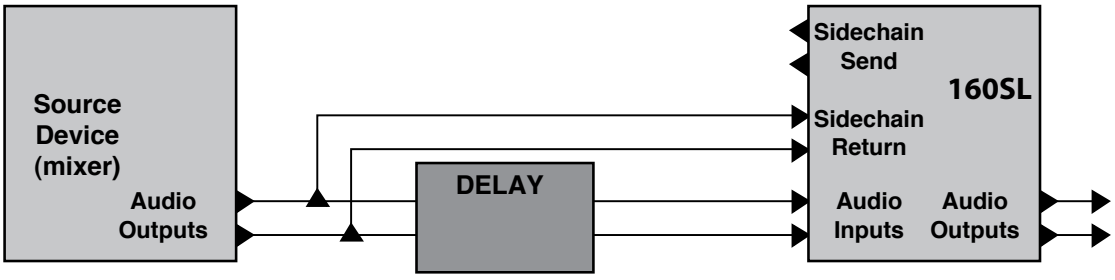

Common "ducking" setup: delay is inserted into audio input, non-delayed signal fed to sidechain. Sidechain triggers compression before signal is heard.

Mixing Board

If you wish to compress a particular track of a multi-track recording or one channel of a live performance mix, the 160SL output can be directly connected to a line input jack (balanced or not), or wired to an Insert point. In the latter case, the signals could be unbalanced or balanced.

Musical Instruments (i.e., Electric Guitar, Bass, Keyboards)

The output of an electric guitar is sometimes not *hot* enough to drive the 160SL's input. When this is the case, you should use the *PREAMP OUT* of your guitar amp (if so equipped), or the output of some other device that is designed to accept low-level instrument inputs (including various stomp boxes and rack mount audio products). Such sources can be balanced or unbalanced; this is no problem for the 160SL.

Microphones and bass guitars, like guitars, typically have low-level outputs and must be pre-amplified before feeding the line level inputs of the 160SL.

Instruments like keyboards typically produce a line-level signal and can be connected directly from the instrument's output to the 160SL's input.

Patch bay

In the studio, the 160SL may be connected to a patch bay to allow it to be used anywhere in the studio system. In some cases where a balanced source drives the 160SL, a 6dB difference in level will occur when the BYPASS switch is engaged. This is normal.

Sound Reinforcement

To compress a live mix or to protect loudspeakers, connect the 160SL between the source (mixing board or distribution amp) and the power amp(s). If multi-way loudspeakers with low-level electronic crossovers are used, the 160SL(s) should go after the crossover(s). For a stereo system, you can separately stereo couple the two high band crossovers, low band crossovers, etc. If limitations require that you use a single 160SL before a crossover, adding an equalizer to the sidechain may provide some additional protection to your high frequency components.

The 160SL is an all-solid-state product with components chosen for high performance and excellent reliability. Each 160SL is tested, burned in and calibrated at the factory and should require no internal adjustment of any type throughout the life of the unit.

Technical Support

If you require technical support, contact dbx Customer Service. Be prepared to accurately describe the problem. Know the serial number of your unit - this is printed on a sticker attached to the rear panel. If you have not already taken the time to fill out your warranty registration card and send it in, please do so now.

Factory Service

Before you return a product to the factory for service, we recommend you refer to the manual. Make sure you have correctly followed installation steps and operation procedures. If you are still unable to solve a problem, contact our Customer Service Department at (801) 568-7660 for consultation. If you need to return a product to the factory for service, you MUST contact Customer Service to obtain a Return Authorization Number.

No returned products will be accepted at the factory without a Return Authorization Number.


Please refer to the Warranty below, which extends to the first end-user. After expiration of the warranty, a reasonable charge will be made for parts, labor, and packing if you choose to use the factory service facility. In all cases, you are responsible for transportation charges to the factory. dbx will pay return shipping if the unit is still under warranty.

Use the original packing material if it is available. Mark the package with the name of the shipper, and with these words in red: DELICATE INSTRUMENT, FRAGILE! Insure the package properly. Ship prepaid, not collect. Do not ship parcel post.

Warranty

This warranty is valid only for the original purchaser and only in the United States.

1. The warranty registration card that accompanies this product must be mailed within 30 days after purchase date to validate this warranty. Proof-of-purchase is considered to be the burden of the consumer.
2. dbx warrants this product, when bought and used solely within the U.S., to be free from defects in materials and workmanship under normal use and service.
3. dbx liability under this warranty is limited to repairing or, at our discretion, replacing defective materials that show evidence of defect, provided the product is returned to dbx WITH RETURN AUTHORIZATION from the factory, where all parts and labor will be covered up to a period of two years. A Return Authorization number must be obtained from dbx by telephone. The company shall not be liable for any consequential damage as a result of the product's use in any circuit or assembly.
4. dbx reserves the right to make changes in design or make additions to or improvements upon this product without incurring any obligation to install the same additions or improvements on products previously manufactured.
5. The foregoing is in lieu of all other warranties, expressed or implied, and dbx neither assumes nor authorizes any person to assume on its behalf any obligation or liability in connection with the sale of this product. In no event shall dbx or its dealers be liable for special or consequential damages or from any delay in the performance of this warranty due to causes beyond their control.

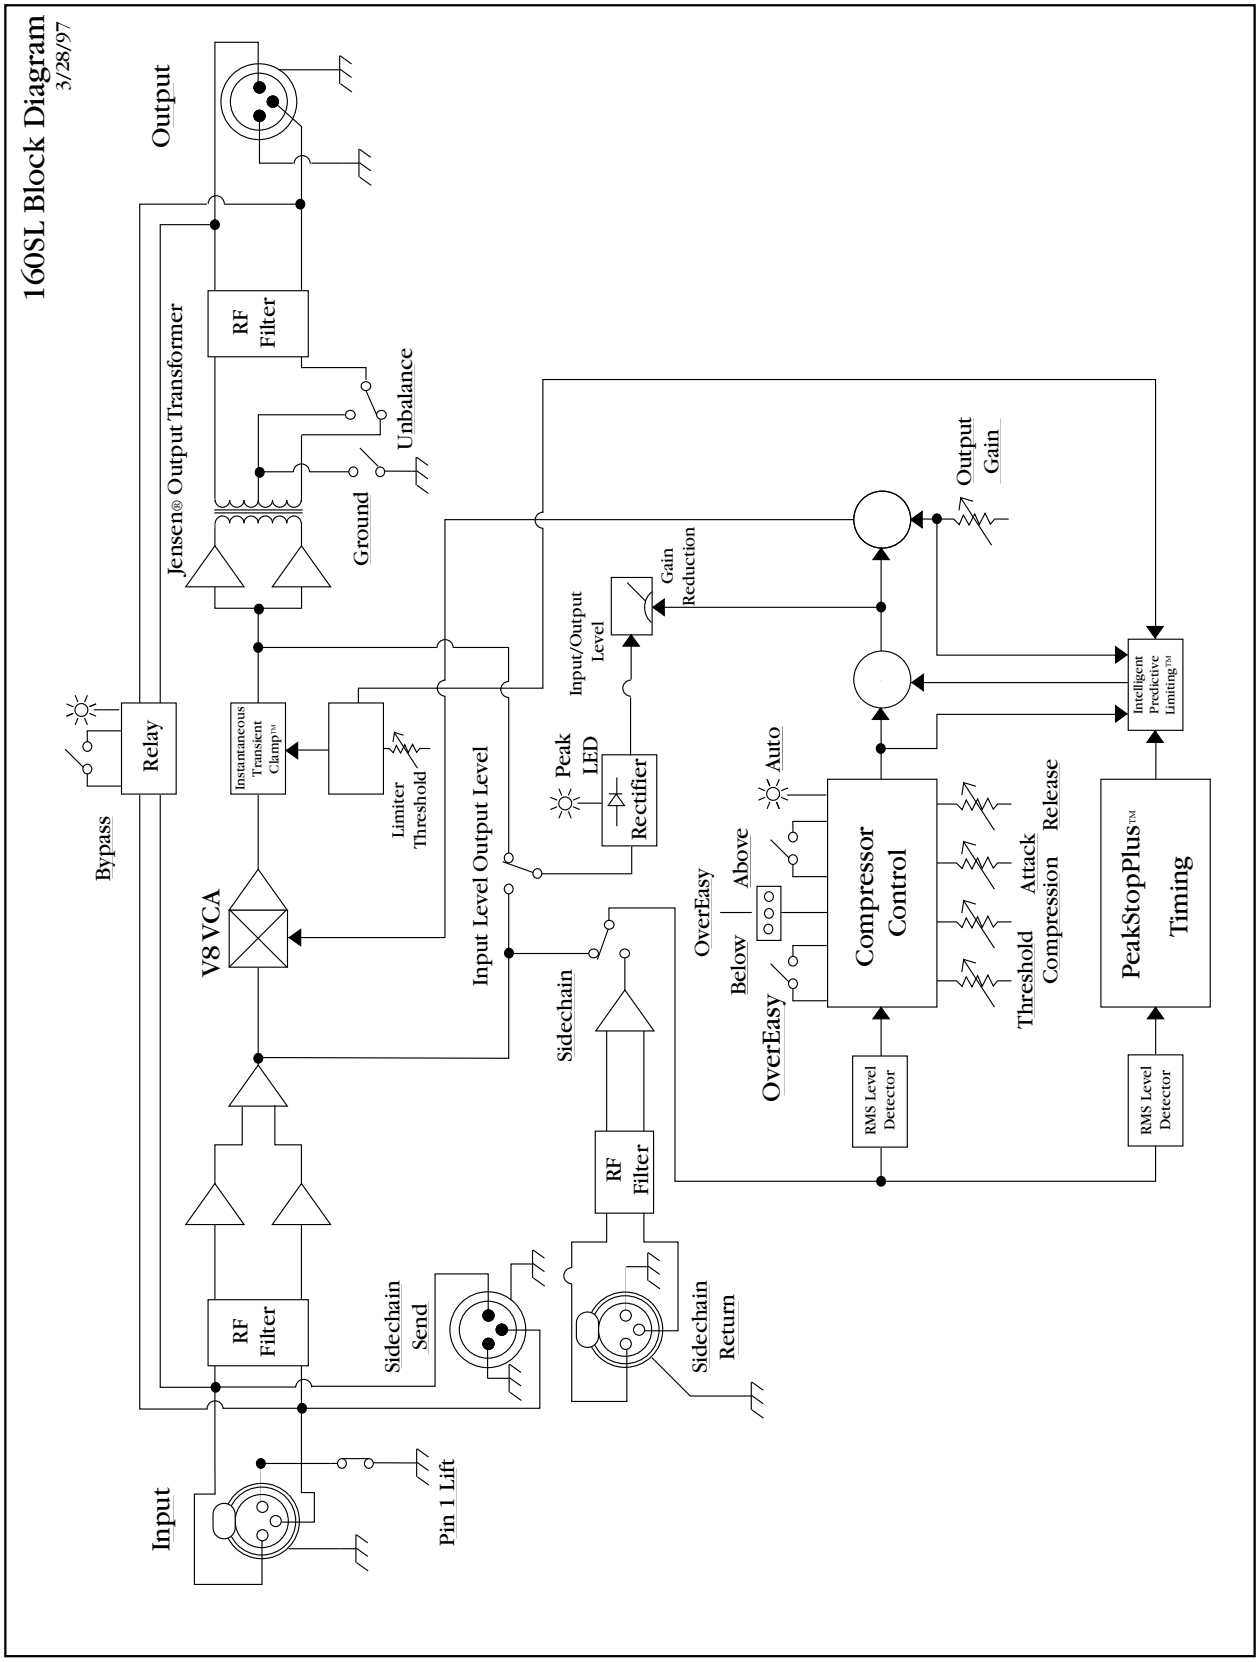
160SL Block Diagram
3/28/97
Output
RF Filter
Unbalance
Ground
Jensen® Output Transformer
Output Gain
Gain Reduction
Input/Output Level
Peak LED
Rectifier
Instantaneous Transient Clamp™
Limiter Threshold
Relay
Bypass
V8 VCA
Input Level Output Level
Sidechain
OverEasy
Below
Above
Auto
OverEasy
Compressor Control
Threshold
Attack
Compression
Release
Intelligent Predictive Limiting™
PeakStopPlus™ Timing
RMS Level Detector
RMS Level Detector
RF Filter
RF Filter
Sidechain Send
Sidechain Return
Input
Pin 1 Lift

INPUTS

Connectors:	Female XLR Pin 2 hot, pin 1 lift switch.
Type:	Electronically balanced/unbalanced, RF filtered.
Impedance:	Balanced > 20 kΩ, unbalanced > 10 kΩ.
Maximum Input Level:	>+30dBu balanced, > +26dBu unbalanced.
CMRR:	>100dB 20 Hz to 200 Hz, >80dB 200 Hz to 2 kHz, >60dB 2 kHz to 20 kHz.

OUTPUTS

Connectors:	Male XLR Pin 2 hot.
Type:	Transformer balanced/unbalanced, RF filtered.
Impedance:	Balanced 50Ω, unbalanced 25Ω.
Maximum Output Level:	Balanced >+30dBm (into 600Ω). Unbalanced (with UNBAL switch engaged) >+24dBm (into 600Ω).

SIDECHAIN SEND (OUTPUT)

Connector:	Male XLR Pin 2 hot.
Type:	Unbuffered, hard-wired to INPUT, RF filtered.

SIDECHAIN RETURN (INPUT)

Connector:	Female XLR Pin 2 hot.
Type:	Electronically balanced/unbalanced, RF filtered.
Impedance:	Balanced >20 kΩ, unbalanced >10kΩ.
Maximum Input Level:	>+30dBu balanced or unbalanced.

SYSTEM PERFORMANCE

0.1dB Bandwidth:	20 Hz to 20 kHz +0/-0.1dB, no gain reduction, unity gain.
1.0dB Bandwidth:	<4 Hz to >40 kHz +0/-1.0dB, no gain reduction, unity gain.
Frequency Response:	<2 Hz to >200 kHz +0/-3.0dB, no gain reduction, unity gain.
Noise:	<-92dBu, unweighted, 20 Hz to 20 kHz measurement bandwidth.
Dynamic Range:	>122dB
THD + Noise:	0.008% typical at +4dBu, 1kHz, unity gain. 0.05% typical at +30dBu, 1kHz, unity gain. <0.1% any amount of compression up to 30dB, 1kHz
IMD:	<0.02% SMPTE 4:1, no gain reduction, unity gain.
Deviation From Linear Phase:	<1.0 degree, <10 Hz to 200 kHz, 30dB of compression.
Interchannel Crosstalk:	<-100dB, 20 Hz to 20 kHz.
VCA:	dbx V8™
VCA Dynamic Range:	>127dB
VCA THD + Noise:	0.006% typical at +4dBu, 1 kHz, unity gain.
Stereo Coupling:	True RMS Power Summing™.

COMPRESSOR

Threshold Range:	-40 to +30dBu
Ratio:	1:1 to 4:1
Threshold Characteristic:	Selectable OverEasy, or hard knee.
Attack/Release Modes:	Selectable Manual or Auto.
Manual Attack Time:	Scalable program-dependent. Typically 400dB/msec to 1dB/msec.
Manual Release Time:	Scalable program-dependent. Typically 4000dB/sec to 10dB/sec.

Auto Attack Time:	Program dependent, typically 15 ms for 10dB, 5 ms for 20dB, 3 ms for 30dB.
Auto Release Time:	Program dependent, typically 120dB/sec.
Output Gain:	-20 to +20dB.

LIMITER

Threshold Range:	+4dBu to >+30dBu (off).
Ratio:	4:1
Limiter Type:	PeakStopPlus® two-stage limiter.
Stage 1:	Instantaneous Transient Clamp®.
Attack Time:	Zero
Release Time:	Zero
Stage 2:	Intelligent Predictive Limiting®.
Attack Time:	Program dependent, typically <5 msec.
Release Time:	Program dependent, typically 22dB/sec.

FUNCTION SWITCHES

Sidechain:	Routes external sidechain input signal to the detector.
OverEasy®:	Activates the OverEasy, compression function.
Auto:	Activates automatic program-dependent attack and release times, disabling the manual attack and release controls.
PeakStopPlus®:	Activates the Intelligent Predictive Limiting® (Stage 2) section of the limiter.
Bypass:	Activates the direct input-to-output hard-wire relay bypass. Relay automatically hard-wire bypasses unit at power-down and provides a power-on delay of 1.5 seconds.
Input:	Monitors the input signal and shows its level on the VU meter. Peak indicator lights for signals >+27dBu.
Output:	Monitors the output signal and shows its level on the VU meter. Peak indicator lights for signals >+27dBu.
GR:	Monitors the compressor and PeakStopPlus‰ limiter and displays the total amount of gain reduction on the lower scale of the VU meter.
Pin 1 Lift (Rear Panel)	Lifts pin 1 of the input XLR from chassis ground.
Unbal (Rear Panel)	Unbalances the output. A 6dB drop in level will occur.
Ground (Rear Panel)	In Balanced Mode: references the center tap of the output transformer to chassis ground through a 10kΩ resistor. In Unbalanced Mode: references pin 3 of the output XLR and the center tap of the transformer to chassis ground.

INDICATORS

Compressor Threshold Meter:	3 LED indicators at Below, OverEasy®, and Above.
Sidechain:	1 LED to indicate when external sidechain is selected.
Auto:	1 LED to indicate when Auto mode is selected.
PeakStopPlus‰:	1 Bi-Color LED. When PeakStopPlus® function is not engaged, the LED will be off when signal is below Stop Level threshold, and will light red when signal is above threshold. When PeakStopPlus® functionis engaged, the LED will be green when signal is below Stop Level threshold, and will turn red when signal is above threshold.
Bypass:	1 LED to indicate when 160SL is bypassed.
Input/Output/GR	3 LEDs to indicate which meter mode is selected. Green for input level, yellow for output level, and red for gain reduction.

OPTIONS

Digital output module:	dbx 704X

POWER SUPPLY

Operating Voltage:	Factory selected: 100V, 120V, or 220-240VAC 50/60Hz.
Power Consumption:	50 Watts maximum.
Fuse:	100V: T 500mA L 250V 5mm X 20mm 120V: T 500mA L 250V 5mm X 20mm 220-240V: T 250 mA L 250V 5mm X 20mm
Mains Connection:	IEC 320 Receptacle

PHYSICAL

Dimensions:	3.5"H X 19"W X 11.25"D
Weight:	14.4 lbs (6.5 kg)
Shipping Weight:	18.9 lbs (8.6 kg)

Note: 0dBu = 0.775V RMS

All Trademarks and Registered Trademarks are the property of their respective owners.



8760 South Sandy Pkwy.
Sandy, Utah 84070
Phone: (801) 568-7660
Fax: (801) 568-7662
Int'l Fax: (603) 672-4246

Questions or comments?
E•mail us at: customer@dbxpro.com
or visit our website at:
www.dbxpro.com

5018577-A
04/09/12