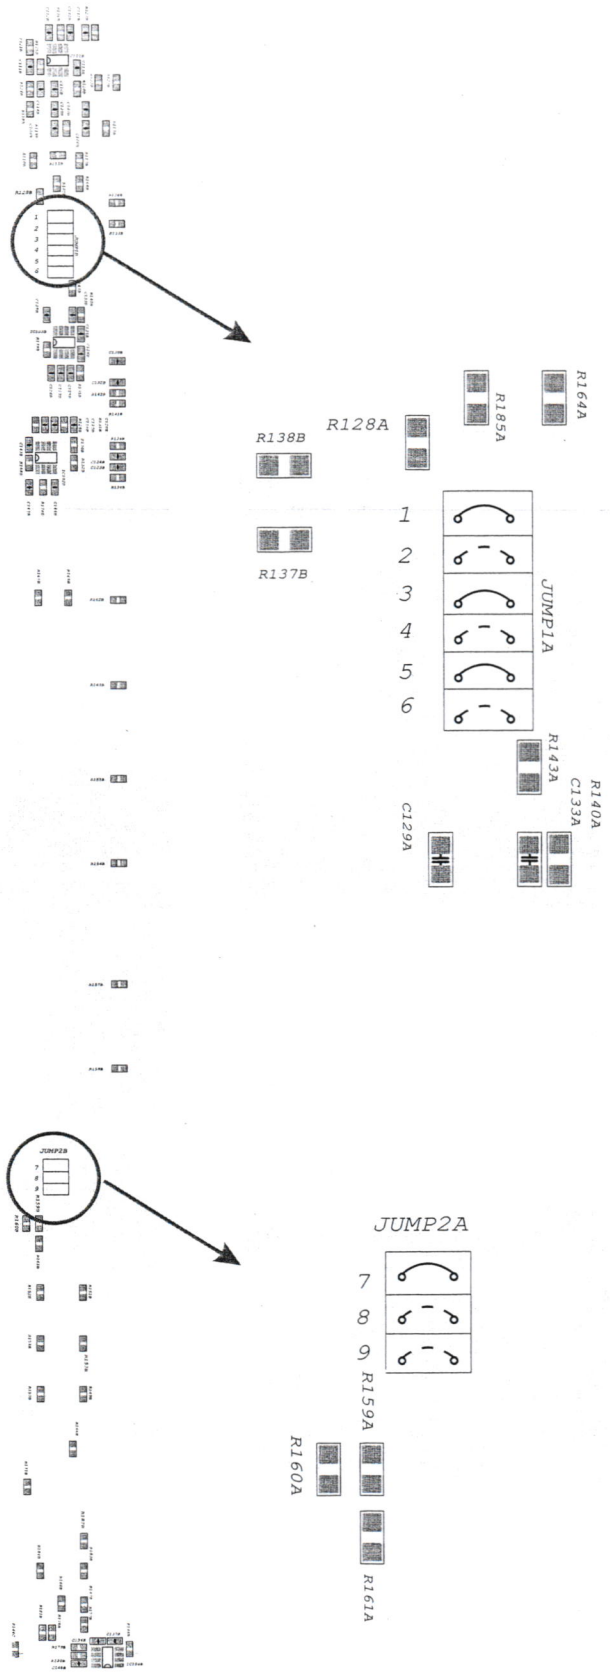

INTERNAL JUMPER SETTINGS

These MR3243/4243 allow you to change the following internal default settings, which offer you the flexibility to suit different kinds of applications.

INSERT POINT SETTING

The insert point default setting is pre-EQ. To change the settings, pull off the jumpers #1, #3, #5 and replace on the #2, #4, #6, which sets the insert point to post-EQ.

DIRECT OUT SETTING

The channel direct outs are provided with three options by using cap jumpers on the circuit board. The default is "post fader". To change the settings, pull off the jumper #7 and replace on the #8, which will set it to "pre-fader". Replace the jumper to the #9, which will set it to post/on-off.