SA-5300 GN

PIONEER®

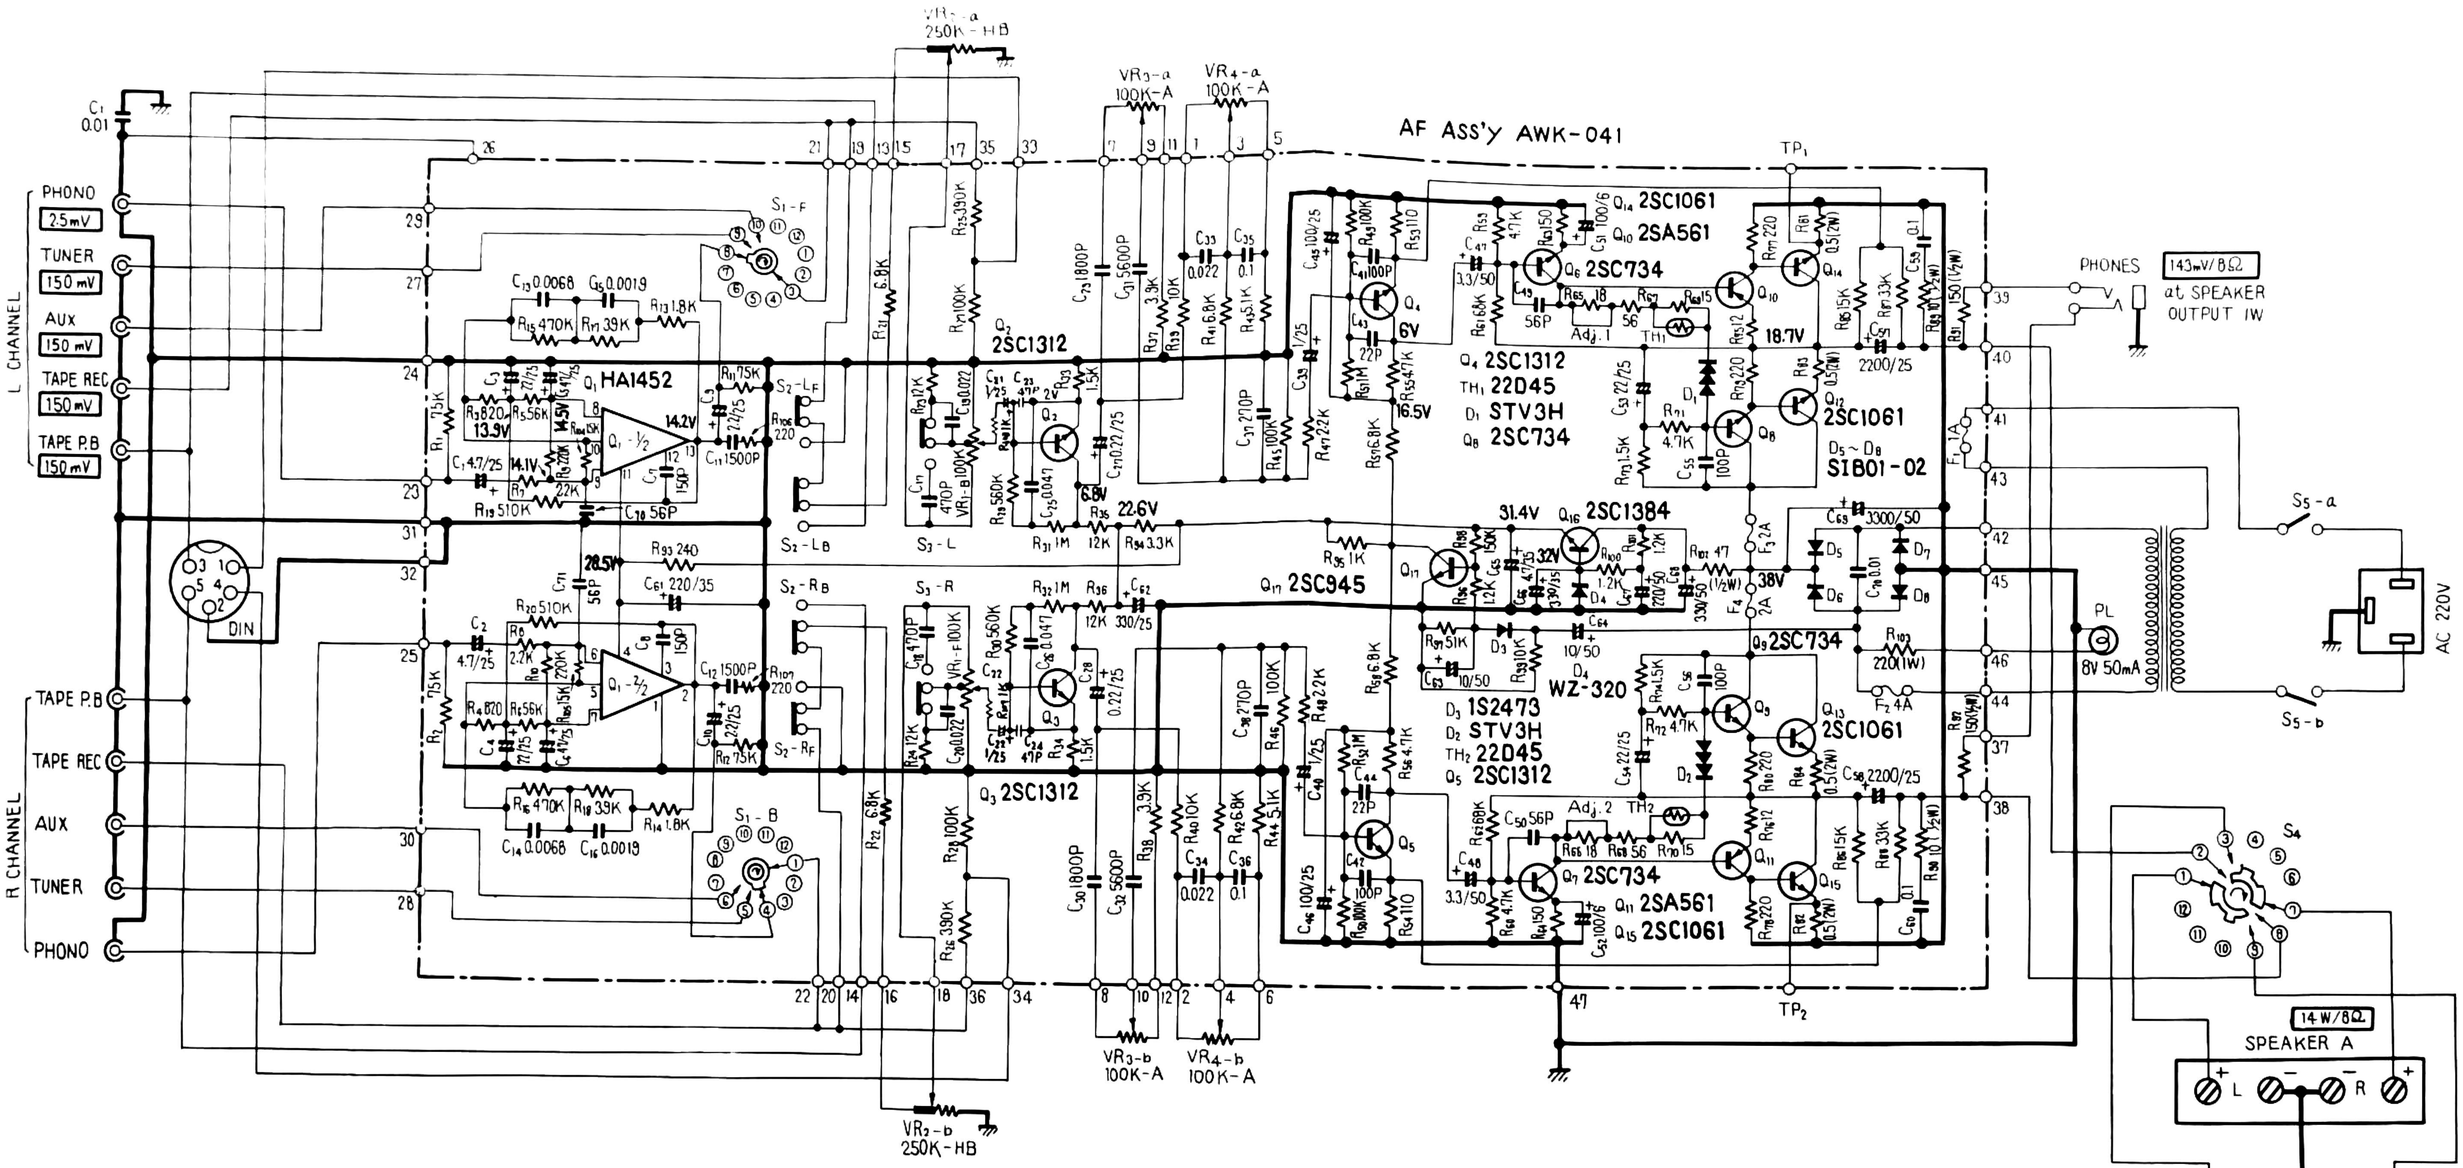

SWITCHES

- S_1 FUNCTION
  1. PHONO 2. TUNER 3. AUX
- S_2 TAPE MONITOR
  OFF ⟷ ON
- S_3 LOUDNESS
  OFF ⟷ ON
- S_4 SPEAKERS
  1. OFF 2. A 3. B 4. A+B
- S_5 POWER
  OFF ⟷ ON

POTENTIOMETERS

- VR_1 VOLUME
- VR_2 BALANCE
- VR_3 TONE (TREBLE)
- VR_4 TONE (BASS)

- **V** DC VOLTAGE AT NO INPUT SIGNAL
- (V) DC VOLTAGE AT 14W/8Ω OUTPUT POWER (1KHz)
- ⇦ DC CURRENT AT NO INPUT SIGNAL
- ▭ SIGNAL VOLTAGE

www.hifiengine.com